

## INTERFACES

Programming codes are for the following products:

- PowerScan™ PD9530
- PowerScan™ PBT9500
- PowerScan™ PM9500
- PowerScan™ PD9530-DPM
- PowerScan™ PBT9500-DPM
- PowerScan™ PM9500-DPM

Interface = RS-232



Interface = RS-232 WN



Interface = RS-232 OPOS



Interface = Standard Keyboard Wedge



Interface = Standard Keyboard Wedge No Keyboard



Interface = USB Keyboard



Interface = USB Keyboard (Apple)



Interface = USB OEM



Interface = USB-COM



Interface = IBM Port 5B



Interface = IBM Port 9B

