

RETALIX PROGRAMMING

Programming codes are for MGL 9800i


Return to Defaults

Return to Factory Settings



Switch Label


Switch Label

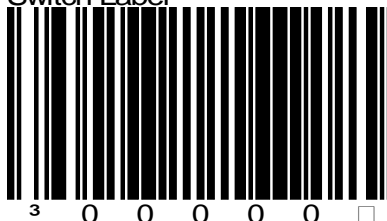

OEM USB Interface



 DataBar Omni Enable



Databar Expanded Enable



Disable Coupon Filter



Remote Display Disable



Remote Display Enable



Interface Single Cable RS



Parity Even
STX = STX
ETX = ETX
USE BCC



UPCA, Ean8, Ean13 check digits transmit
Code 128 Label ID = Q
Databar Omni Label ID disabled
Databar Expanded Label ID disabled



Ignore IBM Host Configuration

