



*This Quick Reference Guide does not replace the Instruction Manual. Download the Instruction Manual by reading the QR code here or at [www.datalogic.com](http://www.datalogic.com). Click on **Support** > **Search by product** and enter the SG BODY family name, then select your product from the dropdown list. Click on the **Manuals & Technical Literature** link to download your Instruction Manual. The Instruction Manual must be available at all times when installing and working with the product.*



### SAFETY INFORMATION



*The following points must be observed for a correct and safe use of the safety light curtains of the SG-BODY COMPACT series:*

- The stopping system of the machine must be electrically controlled.
- This control system must be able to stop the dangerous movement of the machine within the total machine stopping time T as per paragraph 2.2.1 of the Instruction Manual and during all working cycle phases.
- Mounting and connection of the safety light curtain must be carried out only by qualified personnel, according to the indications included in the special sections (refer to sections 2; 3; 4; 5) and in respect to the applicable Standards.
- The safety light curtain must be securely installed so that access to the dangerous zone is not possible without interrupting the beams.
- The personnel operating in the dangerous area must be well-trained and must have adequate knowledge of all the operating procedures of the safety light curtain.
- The TEST, RESET/RESTART and OVERRIDE buttons must be located outside the protected area as the operator must check the protected area during all Test, Restart and Override operations.
- Please carefully read the instructions for the correct functioning before powering the light curtain.

### Precautions to be observed for the choice and installation of the device



*Make sure that the protection level assured by the SG-BODY COMPACT device (Type2/Type4) is compatible with the real danger level of the machine to be controlled, according to EN ISO 13849-1 and EN 62061.*

- The outputs (OSSDs) of the ESPE must be used as machine stopping devices and not as command devices. The machine must have its own START command.
- The dimension of the smallest object to be detected must be larger than the resolution level of the device.
- The ESPE must be installed in a room complying with the technical characteristics indicated in section 9 "Technical data" of the Instruction Manual.
- Do not place the device near intense and/or flashing light sources and, in particular, close to receiving unit front surface.
- The presence of intense electromagnetic disturbances could jeopardise device operation. This condition has to be carefully evaluated with the support of the Datalogic Technical service.
- The operating distance of the device can be reduced in presence of smog, fog or airborne dust.
- A sudden change in environment temperature, with very low minimum peaks, can generate a small condensation layer on the lenses and so jeopardise functioning.
- Reflecting surfaces near the safety light curtain light beam (above, under or lateral) can cause passive reflections that can jeopardise functioning.
- The safety device must be installed at a distance which is major or equal to the minimum safety distance S to ensure that the operator can not reach the dangerous area until the moving dangerous object has been blocked by the ESPE.



*The failure to respect the safety distance reduces or cancels ESPE the protection function. For more detailed information about calculation of safety distance, please refer to the Instruction Manual.*

## CONNECTIONS

<u>RECEIVER (RX)</u>	<u>EMITTER (TX)</u>
<p><b>M12 8 POLES:</b></p> <ol style="list-style-type: none"> <li>1. <b>WHITE</b> = RESTART / RESET / EDM / OVERRIDE</li> <li>2. <b>BROWN</b> = +24 VDC</li> <li>3. <b>GREEN</b> = MUTING 1</li> <li>4. <b>YELLOW</b> = MUTING 2</li> <li>5. <b>GREY</b> = OSSD1</li> <li>6. <b>PINK</b> = OSSD2</li> <li>7. <b>BLUE</b> = 0 V</li> <li>8. <b>RED</b> = MUTING LAMP</li> </ol>	<p><b>M12 5 POLES:</b></p> <ol style="list-style-type: none"> <li>1. <b>BROWN</b> = +24 VDC</li> <li>2. <b>WHITE</b> = NOT USED</li> <li>3. <b>BLUE</b> = 0 V</li> <li>4. <b>BLACK</b> = NOT USED</li> </ol>

## ALIGNMENT PROCEDURE

The alignment between the emitting and the receiving units is necessary to obtain the correct functioning of the light curtain. A good alignment prevents output instability caused by dust or vibrations. The alignment is perfect if the optical axes of the first and the last emitting unit beams coincide with the optical axes of the corresponding elements of the receiving unit.

	<p><b>Receiver</b></p> <table style="width: 100%; text-align: center;"> <tr> <td>NORMAL OPERATION →</td> <td></td> <td></td> <td>← HIGH ALIGN.</td> </tr> <tr> <td>SAFE →</td> <td></td> <td></td> <td>← LOW ALIGN.</td> </tr> </table> <p><b>Emitter</b></p> <table style="width: 100%; text-align: center;"> <tr> <td>POWER ON →</td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td>← EMISSION</td> </tr> </table>	NORMAL OPERATION →			← HIGH ALIGN.	SAFE →			← LOW ALIGN.	POWER ON →						← EMISSION
NORMAL OPERATION →			← HIGH ALIGN.													
SAFE →			← LOW ALIGN.													
POWER ON →																
			← EMISSION													

Signals are clearly identified through symbols allowing immediate reading, independent of bars directions. A short description of the signalling LEDs is necessary to avoid misunderstandings. Two yellow LEDs (▲ HIGH ALIGN, ▼ LOW ALIGN) on SG-BODY COMPACT receiver, facilitate the alignment procedure.

### Correct alignment procedure

The light curtain alignment can be effected only after having completed the mechanical installation and the electrical connections. The following procedure has to be followed:

	<p><b>SG-BODY is equipped with a system which informs the user on the alignment obtained. The alignment function can be activated when powering the device, by keeping the TEST/START pressed.</b></p>
--	--


- Disconnect the power supply.
- Press the TEST/START button and keep it pressed (open the contact).
- Re-connect the power supply.
- Release the TEST/START button.
- Check the green LED on the bottom of the TX unit (POWER ON) and the yellow LED (NORMAL OPERATION); if they are ON, the unit is running correctly.


- Verify that one of the following conditions is present on the RX unit:
  1. Red LED (SAFE) ON: non-alignment condition.
  2. Green LED (NORMAL OPERATION) ON: light curtain already aligned condition; in this case also the two yellow LEDs will be ON (HIGH ALIGN, LOW ALIGN).
- Continue with the following steps to change from condition 1 to condition 2:
  - A. Keep the receiving unit in a steady position and set the transmission unit until the yellow LED on the bottom (LOW ALIGN) is ON. This condition shows the effective alignment of the first lower beam.
  - B. Rotate the transmission unit until the upper yellow LED (HIGH ALIGN) is ON; in these conditions red LED (SAFE) must turn off and green LED (NORMAL OPERATION) must turn ON.


 **Make sure that the green LED (NORMAL OPERATION) mode is ON and steady.**

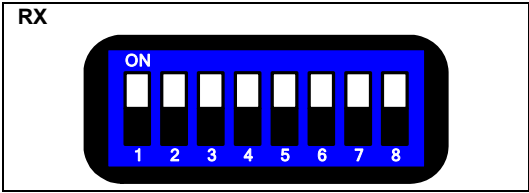
- C. Delimit the area in which the green LED (NORMAL OPERATION) is steady through some micro adjustments - for the first and then for the second unit - then place both units in the centre of this area.
- Fix the two units firmly using pins and brackets.
  - Disconnect the power supply.
  - Re-connect the power supply.
  - Verify that the green LED is ON on the RX unit (condition where the beams are free, NORMAL OPERATION) and verify that, if even one single beam is obscured, the green LED turns OFF and the red LED turns ON (condition where an object has been detected, SAFE).

**DIP SWITCHES CONFIGURATION**

 *The device does not accept configuration changes during normal functioning. A change is accepted only beginning from the successive powering of the device. Particular attention has to be taken during the configuration dip-switch management and use.*

 *Muting time-out “∞” does not comply with the requirements of IEC 61496-1. Therefore all possible risks must be considered and related precautions undertaken before selecting the “∞” option.*

 **Each function is associated with two different dip-switches; it is necessary that the two different dip-switches associated to a particular function are configured in the same way. The “ON” position is the default.**





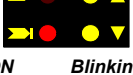





dip-sw	Function	ON	OFF
1,5	Muting time-out	10 min.	∞
2,6	Muting	T config. (4 beams)	L config. (2 beams)
3,7	EDM	Deactivated	Activated
4,8	Reset	Automatic	Manual

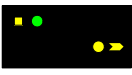


## DIAGNOSTICS FUNCTION

The operator can visualise the operating condition of the light curtains thanks to four LEDs on the RX unit and two LEDs on the TX unit. By means of these LEDs the operator can evaluate the main causes of the system stopping or failure.

### RECEIVER:

Failure	Cause	Check and repair
<p style="text-align: center;"><i>OFF</i>      <i>Blinking yellow</i></p>  <p style="text-align: center;"><i>Blinking red</i>      <i>Blinking yellow</i></p>	Output failure	<ul style="list-style-type: none"> <li>- Check the output connections.</li> <li>- Check if the load characteristics are in accordance with the Technical data (see section 9).</li> </ul>
<p style="text-align: center;"><i>OFF</i>      <i>OFF</i></p>  <p style="text-align: center;"><i>Blinking red</i>      <i>Blinking yellow</i></p>	Failure of external switching device (EDM Test function)	<ul style="list-style-type: none"> <li>- Control the EDM connections.</li> <li>- Check the compatibility of external switching device with EDM test time.</li> <li>- Switch OFF and switch ON the devices; if failure persists replace external switching device.</li> </ul>
<p style="text-align: center;"><i>OFF</i>      <i>Blinking yellow</i></p>  <p style="text-align: center;"><i>OFF</i>      <i>Blinking yellow</i></p>	Microprocessor failure	<ul style="list-style-type: none"> <li>- Check the correct positioning of the configuration dip-switches.</li> <li>- Switch OFF and switch ON the device; if the failure continues contact Datalogic Technical Service.</li> </ul>
<p style="text-align: center;"><i>OFF</i>      <i>Blinking yellow</i></p>  <p style="text-align: center;"><i>Red ON</i>      <i>OFF</i></p>	It is possible to require Override	<ul style="list-style-type: none"> <li>- The signalling is not a failure.</li> <li>- Activate Override to remove material from the protected zone.</li> </ul>
<p style="text-align: center;"><i>OFF</i>      <i>Blinking yellow</i></p>  <p style="text-align: center;"><i>Red ON</i>      <i>Blinking yellow</i></p>	Override connection failure.	<ul style="list-style-type: none"> <li>- Check connections of the override input lines.</li> </ul>
<p style="text-align: center;"><i>OFF</i>      <i>OFF</i></p>  <p style="text-align: center;"><i>OFF</i>      <i>Blinking yellow</i></p>	Optic failure	<ul style="list-style-type: none"> <li>- Check unit alignment.</li> <li>- Switch OFF and switch ON the device; if the failure continues contact Datalogic.</li> </ul>
<p style="text-align: center;"><i>Blinking green</i>      <i>Blinking yellow</i></p>  <p style="text-align: center;"><i>OFF</i>      <i>Blinking yellow</i></p>	Failure of the integrated Muting signalling lamp	<ul style="list-style-type: none"> <li>- Switch OFF and switch ON the device; if the failure continues contact Datalogic.</li> </ul>
<p style="text-align: center;"><i>OFF</i>      <i>OFF</i></p>  <p style="text-align: center;"><i>OFF</i>      <i>OFF</i></p>	Power supply failure or the power supply voltage is outside the allowed range. Main microprocessor failure	<ul style="list-style-type: none"> <li>- <b>Check power supply.</b></li> <li>- Switch OFF and switch ON the device; if the failure continues contact Datalogic.</li> </ul>

### EMITTER:

Failure	Cause	Check and repair
<p style="text-align: center;"><i>Green ON</i></p>  <p style="text-align: center;"><i>Blinking yellow</i></p>	Emitter side generic failure	<ul style="list-style-type: none"> <li>- Check the power supply; if the failure continues contact Datalogic and replace both units</li> </ul>
<p style="text-align: center;"><i>OFF</i></p>  <p style="text-align: center;"><i>OFF</i></p>	Power supply failure	<ul style="list-style-type: none"> <li>- Check the power supply; if the failure continues contact Datalogic.</li> </ul>
<p style="text-align: center;"><i>Green ON</i></p>  <p style="text-align: center;"><i>OFF</i></p>	The power supply voltage is outside the allowed range Main microprocessor failure	<ul style="list-style-type: none"> <li>- Check the power supply; if the failure continues contact Datalogic.</li> </ul>

## ORIGINAL INSTRUCTIONS (ref. 2006/42/EC)

This product is covered by one or more of the following patents.  
Italian Patent IT 1,363,719      Additional patents pending

### CE Compliance

CE marking states the compliance of the product with essential requirements listed in the applicable European directive. Since the directives and applicable standards are subject to continuous updates, and since Datalogic promptly adopts these updates, therefore the EU declaration of conformity is a living document. The EU declaration of conformity is available for competent authorities and customers through Datalogic commercial reference contacts. Since April 20th, 2016 the main European directives applicable to Datalogic products require inclusion of an adequate analysis and assessment of the risk(s). This evaluation was carried out in relation to the applicable points of the standards listed in the Declaration of Conformity. Datalogic products are mainly designed for integration purposes into more complex systems. For this reason it is under the responsibility of the system integrator to do a new risk assessment regarding the final installation.

### Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### Datalogic S.r.l.

Via S. Vitalino 13 - 40012 Calderara di Reno - Italy  
Tel: +39 051 3147011 - Fax: +39 051 3147205 - [www.datalogic.com](http://www.datalogic.com)

Helpful links at [www.datalogic.com](http://www.datalogic.com): **Contact Us, Terms and Conditions, Support.**

The warranty period for this product is 36 months. See General Terms and Conditions of Sales for further details.



Under current Italian and European laws, Datalogic is not obliged to take care of product disposal at the end of its life. Datalogic recommends disposing of the product in compliance with local laws or contacting authorised waste collection centres.

© 2010 - 2018 Datalogic S.p.A. and/or its affiliates ♦ ALL RIGHTS RESERVED. ♦ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other trademarks and brands are property of their respective owners. Datalogic reserves the right to make modifications and improvements without prior notification.