Datalogic S.r.l.

Via San Vitalino 13 40012 Calderara di Reno (BO) Italy Tel. +39 051 3147011 Fax +39 051 3147205

©2020-2021 Datalogic S.p.A. and/or its affiliates

All rights reserved. Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/ or its affiliates.

Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Electronic versions of this document may be downloaded from the Datalogic website (www.datalogic.com). If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material. Datalogic reserves the right to change any specification at any time without prior notice.

Trademarks

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

Skorpio is a trademark of Datalogic S.p.A. and/or its affiliates. All other brand and product names may be trademarks of their respective owners..

SUPPORT THROUGH THE WEBSITE

Datalogic provides several services as well as technical support through its website.

Log on to www.datalogic.com.

For quick access, from the home page click on the search icon Q, and type in the name of the product you're looking for. This allows you access to download Data Sheets, Manuals, Software & Utilities, and Drawings.

Hover over the Support & Service menu for access to Services and Technical Support.

SKORPIO™ X5

QUICK START GUIDE



CDATALOGIC

SKORPIO X5 SINGLE DOCK WIRELESS CHARGING SKORPIO X5 SINGLE DOCK WITH CONTACTS

©2020-2021 Datalogic S.p.A. and/or its affiliates

• All rights reserved • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates • Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.

See the Safety & Regulatory Addendum included with your product for additional regulatory, safety and legal information.

www.datalogic.com



OUT OF THE BOX

The Skorpio X5 Single Dock package contains:

- Single Dock
- Rubber feet (x4)
- Quick Start Guide
- · Safety & Regulatory Addendum
- · Warranty Addendum.

Remove all the components from their packaging; check their integrity and compare them with all the packing documents.



CAUTION: Keep the original packaging for use when sending products to the technical assistance center. Damage caused by improper packaging is not covered under the warranty.

GENERAL VIEW

Single Dock With Contacts

Front View



Back View



Single Dock Wireless Charging

Front View




Back View



FAST THE DOCK TO A SURFACE

To securely fasten the Single Dock to tables, desks and other surfaces, and to prevent the dock from moving when you remove the device, use the four velcro dual lock feet provided with the matching dual-lock adhesive pads.

Remove the protective feet from the dock before attaching the velcro dual lock feet.

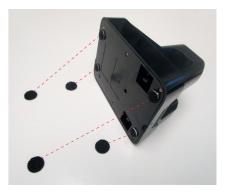

POWER THE DOCK





CAUTION: Use only the Datalogic power supply 91ACC0048 to power the Single Dock.

Press the locking clip and pull the plug to remove the power supply cable:



CHARGE THE SKORPIO X5

Insert the device into the dock with the screen facing front and the head facing up.



To remove the device from the dock, pull it strongly upwards while holding the dock firmly down.



CAUTION: Do not put any foreign object such as, but not limited to, coins, paper clips, stickers inside the slot of the single dock wireless charging (see the examples below).

Foreign objects could overheat.



CHARGE THE SPARE BATTERY

Insert the battery pack and press it into the slot until the battery latch snaps into place. Charging starts automatically.

To remove the battery, release the latch on the battery pack.




LED INDICATORS



LED Behavior	Operation Status
Power ON	
Solid blue	Dock is powered
Spare Battery Status	
Off	No device and no battery
Solid orange	Spare battery is charging
Solid green	Spare battery charge completed
Blinking red	Error

USB CONNECTION

- 1. Turn on the host computer.
- 2. Connect the Single Dock to the power supply (available as an accessory, p/n 91ACC0048).
- 3. Connect the Single Dock to the host computer by means of a standard USB Type-C cable.
- 4. Turn on the Skorpio X5.
- 5. Insert the Skorpio X5 into the dock.

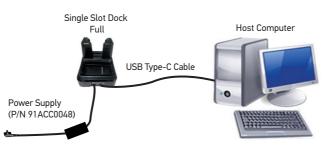

TECHNICAL SPECIFICATIONS

Mechanical Features		
Dimensions	110 x 103 x 155 mm / 4.3 x 4 x 6.1 in	
Weight	320 g / 11.3 oz	
Electrical Features		
Power supply ¹	12VDC +/-5% @ 6A	
Consumption	Max 3.5 A with device inserted	
Indicators	Power on LED (blue) Battery charge status LED (orange/green/red)	
Spare slot charge time	Std battery: 2h (0-90%)	
	High Cap Battery: 4h (0-90%)	
Comn	nunication Features	
Interface	USB Type-C (with contacts model only)	
Environmental Features		
Operating Temperature	-20° to 50°C	
Storage Temperature ²	-30°C to 70°C	
Humidity	95% non condensing	
Electrostatic discharge EN 61000-4-2	4 KV contact / 8 KV air	

¹ Use only DL approved power adapters.

 $^{2\,}$ The Skorpio X5 and the spare batteries should be charged at an ambient temperature between 0 - 40° C to achieve the maximum charging rate. Never charge the main device or spare battery in a closed space where excessive heat can build up. Close to the limits of the working temperature, some display and/or battery performance degradation may occur.