


# MATRIX 320 HEAT SINK FOR 14 AND 36 LEDs MODELS

## MOUNTING INSTRUCTIONS

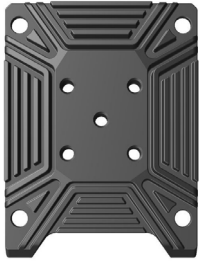

### Heat Sink Mounting

©2020 Datalogic S.p.A. and/or its affiliates  
 • All rights reserved • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates • Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.

[www.datalogic.com](http://www.datalogic.com)



821007310 (Rev. A) October 2020

## WHEN TO MOUNT THE HEAT SINK

The heat sink provided in the package is to be used as an adapter for rotating brackets and for heat dissipation. Its use is recommended especially in high ambient temperature applications. Refer to the Product Reference Guide for more information.

## HOW TO MOUNT THE HEAT SINK

The Matrix 320 package contains the following materials to mount the heat sink:

- 1 heat sink
- 4 black screws
- 4 black washers

To install the heat sink on the reader, please follow this procedure:

1. Insert the screws and washers through the heat sink and thread them loosely into the Matrix 320 reader, as shown in the figure to the side.
2. Tighten the screws.



**CAUTION:** When the heat sink is installed on Matrix 320 with 14 LEDs illuminator, the Laser Class and Warning labels applied to the device are no longer visible. Make sure to apply one of the Laser Class labels (in the relevant language) provided in the package on the Matrix 320 reader side.



**CAUTION:** For the Americas, please also apply the IEC certification label.

Complies with 21 CFR 1040.10 except for conformance with IEC 60825-1 Ed. 3, as described in Laser Notice No. 56, dated May 8, 2019

