


Technical Support

GS1 128 AIM ID DISABLE (]C1) FOR HHS

Enter Configuration

<FNC3>SP<CR>

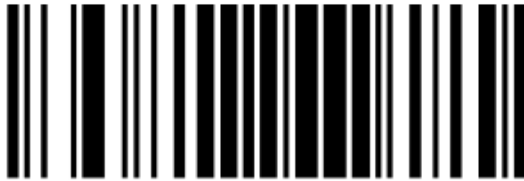

ξ P

GS1-128 AIM ID: Disable

<FNC3>SCU8AI00<CR>



ξ CU8AI00

Exit Configuration

<FNC3>SP<CR>



ξ P