 


MATRIX 320™ ACCESSORIES

QUICK START GUIDE

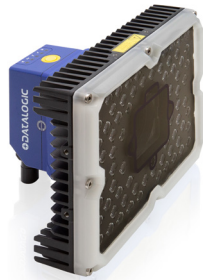

72 LED Illuminator Covers


©2021 Datalogic S.p.A. and/or its affiliates

• All rights reserved • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates • Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.

Support Through the Website

Datalogic provides several services as well as technical support through its website.

Log on to www.datalogic.com.

 
For quick access, from the home page click on the search icon , and type in the name of the product you're looking for. This allows you access to download Data Sheets, Manuals, Software & Utilities, and Drawings.

Hover over the Support & Service menu for access to Services and Technical Support.


www.datalogic.com




821012060 (Rev. A) November 2021

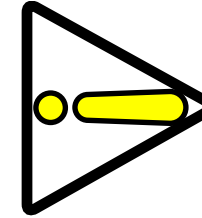

 
Please read the instructions contained herein carefully to prevent damage to the reader and its components.

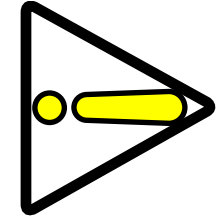

 Please read the instructions contained herein carefully to prevent damage to the reader and its components.

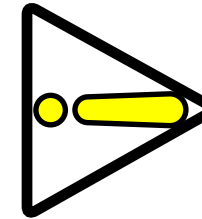

 Please read the instructions contained herein carefully to prevent damage to the reader and its components.

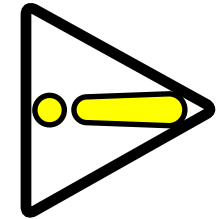

Please read the instructions contained herein carefully to prevent damage to the reader and its components.

Description	Order number
Cover STD LT 72L M320/P2	93ACC0341
Cover Polarizer LT 72L M320/P2	93ACC0342

COVER REPLACEMENT



CAUTION: The reader must be disconnected from the power supply during the cover replacement procedure.



CAUTION: Make sure to operate in a dust-free environment during the cover replacement procedure.

1. Unscrew the eight screws using a 2.5 mm Allen wrench.
2. Remove the cover manually by gently levering it from its corners. See Fig. 1.

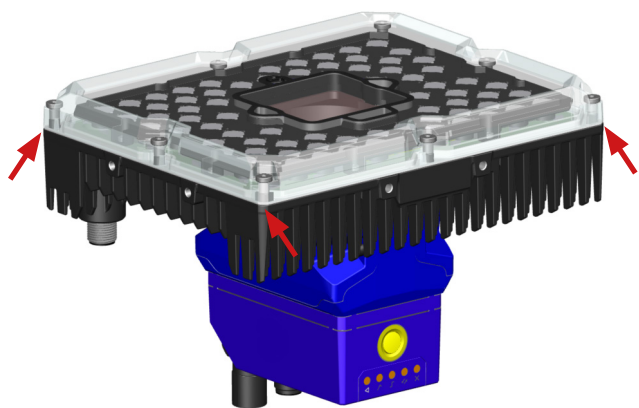 


Fig. 1 - Removing the cover



CAUTION: All cover accessories are supplied with a mounted gasket. Make sure the gasket is correctly placed on the new cover.

3. Make sure the new cover is free of dust, dirt and fingerprints. If necessary, wipe it clean using soft material and alcohol. Avoid any abrasive substances.



CAUTION: The cover has a predefined mounting direction. The top two pins of the illuminator (see Fig. 2) have a different shape than the others, which are cylindrical: make sure to align these special pins with the corresponding cover seats.



CAUTION: Do NOT bump/extract/tamper with the TOF sensor shield (see Fig. 2).

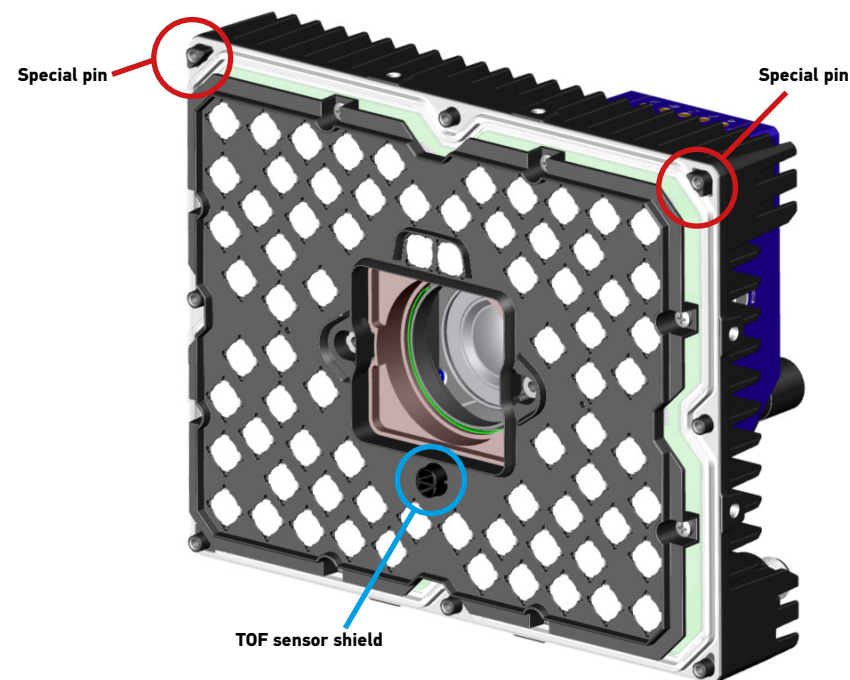 


Fig. 2 - Aligning the cover

4. Place the new cover on the reader.



CAUTION: To avoid damage, do not press on the window.

5. Insert the eight screws and loosely tighten them in a clockwise direction.
6. Finally tighten the screws to a torque of 0.8 N m.