

SYMBOLOGIES

Programming codes are for the following products:

- Gryphon™ GD4100
- Gryphon™ GM4100
- Gryphon™ GBT4100
- Gryphon™ GD4300
- Quickscan™ QD2100
- Quickscan™ QW2100
- PowerScan™ PD7100
- PowerScan™ PBT7100
- Touch™ TD1100

UPC-A = Enable



UPC-A = Disable



UPC-E = Enable



UPC-E = Disable



EAN-13 = Enable



EAN-13 = Disable



EAN-8 = Disable



EAN-8 = Enable



Code 39 = Disable



Code 39 = Enable



Code 128 = Disable



Code 128 = Enable



Follett 2 of 5 = Disable



Follett 2 of 5 = Enable



Interleaved 2 of 5 = Disable



Interleaved 2 of 5 = Enable



Code 11 = Disable



Code 11 = Enable



Codabar = Disable



Codabar = Enable



GS1 Databar Expanded = Disable



GS1 Databar Expanded = Enable



GS1 Databar Limited= Disable



GS1 Databar Limited= Enable



GS1 Databar Omni = Disable



GS1 Databar Omni = Enable



Code 93 = Disable



Code 93 = Enable



MSI = Disable



MSI = Enable



Plessey = Disable



Plessey = Enable

