

## COBALTO™ GOOD READ BEEP VOLUME SETTINGS

Good Read Speaker Volume = Off



Good Read Speaker Volume = Low



Good Read Speaker Volume = Medium



Good Read Speaker Volume = High (Default)

