

## COBALTO™ GS1 DATABAR OPTIONS

GS1 Databar Expanded = Disable



GS1 Databar Expanded = Enable



GS1 Databar Limited= Disable



GS1 Databar Limited= Enable



GS1 Databar Omni = Disable



GS1 Databar Omni = Enable

