

COBALTO™ INTERFACES

Interface = RS-232



Interface = Standard Keyboard Wedge No



Interface = RS-232-WN



Interface = USB Keyboard



Interface = RS-232-OPOS



Interface = USB OEM



Interface = Standard Keyboard Wedge



Interface = USB-COM

