

MAGELLAN™ 9800I SCALE SENTRY OPTIONS

Programming codes are for MGL 9800i

Enter Programming Mode



Disable Scale Sentry



Enable Scale Sentry

