

POWERSCAN™ PBT8300 INTERFACE SELECTIONS

Interface = RS-232



Interface = USB-KBD-Apple



Interface = Keyboard Wedge



Interface = USB - COM



Interface = Keyboard Wedge No KB



Interface = USB - IBM



Interface = USB-KBD



Interface = PEN

