



*This Quick Reference Guide does not replace the Instruction Manual. Download the Instruction Manual by reading the QR code here or at: [www.datalogic.com](http://www.datalogic.com). Click on **Support** > **Search by product** and enter the SG2 family name, then select your product from the dropdown list. Click on the **Manuals & Technical Literature** link to download your Instruction Manual. The Instruction Manual must be available at all times when installing and working with the product.*



#### SAFETY INFORMATION



*The following points must be observed for a correct and safe use of the safety light curtains of the SG2 series:*

- The stopping system of the machine must be electrically controlled.
- This control system must be able to stop the dangerous movement of the machine within the total machine stopping time T as per par. 1.1.3 of the Instruction Manual and during all working cycle phases.
- Mounting and connection of the safety light curtain must be carried out only by qualified personnel, according to the indications included in the special sections (refer to sections 2; 3; 4; 5) and in the applicable Standards.
- The safety light curtain must be securely installed so that access to the dangerous zone is not possible without interrupting the beams (see section 2 “*Installation mode*”).
- The personnel operating in the dangerous area must be well trained and must have adequate knowledge of all the operating procedures of the safety light curtain.
- The TEST/RESET button must be located outside the protected area as the operator must check the protected area during all Test and Reset operations.
- Please carefully read the instructions for the correct functioning before powering the light curtain.

#### Precautions to be observed for the choice and installation of the device




*Make sure that the protection level assured by the SG2 device (Type 2) is compatible with the real danger level of the machine to be controlled, according to EN ISO 13849-1 and EN 62061.*

- The outputs (OSSD) of the ESPE must be used as machine stopping devices and not as command devices. The machine must have its own START command.
- The dimension of the smallest object to be detected must be larger than the resolution level of the device.
- The ESPE must be installed in a room complying with the technical characteristics indicated in chapter 10 “*Technical data*” of the Instruction Manual.
- Do not place the device near intense and/or flashing light sources and, in particular, close to receiving unit front surface.
- The presence of intense electromagnetic disturbances could jeopardise device operation. This condition has to be carefully evaluated with the support of the Datalogic Technical service.
- The operating distance of the device can be reduced in presence of smog, fog or airborne dust.
- A sudden change in environment temperature, with very low minimum peaks, can generate a small condensation layer on the lenses and so jeopardise functioning.



*The failure to respect the safety distance reduces or cancels ESPE the protection function. For more detailed information about calculation of safety distance, please refer to the Instruction Manual.*

## CONNECTIONS

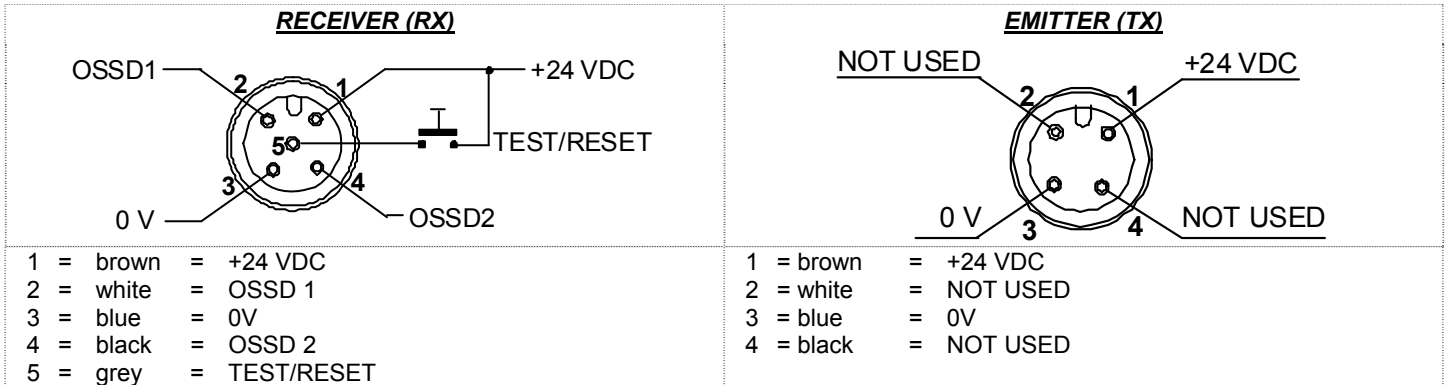


## ALIGNMENT PROCEDURE

The alignment between the emitting and the receiving units is necessary to obtain the correct functioning of the light curtain.

A good alignment prevents output instability caused by dust or vibrations.

The alignment is perfect if the optical axes of the first and the last emitting unit beams coincide with the optical axes of the corresponding elements of the receiving unit.

The beam used to synchronise the two units is the first after the connector. SYNC is the optics connected with this beam and LAST is the optics connected to the last beam after the SYNC unit.

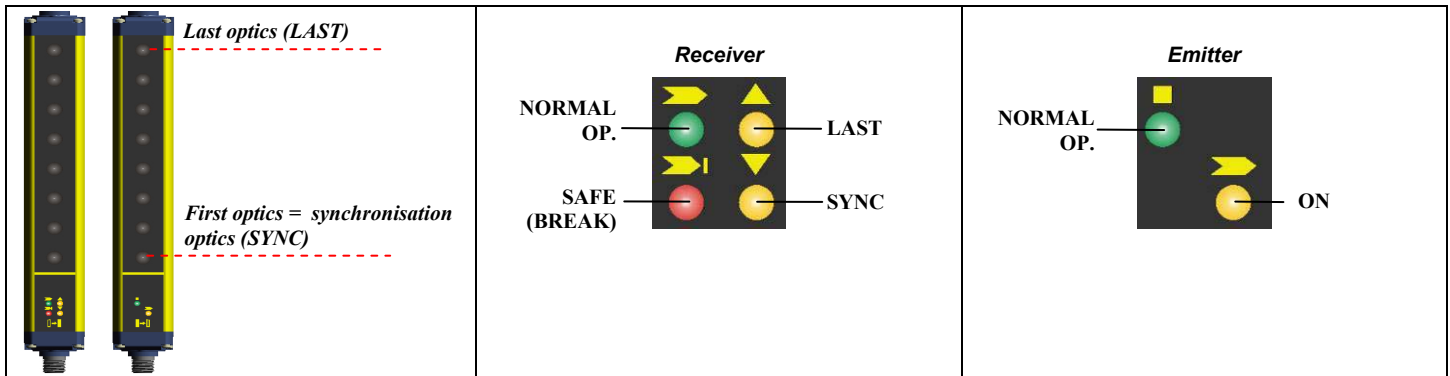

Signals are clearly identified through symbols allowing immediate reading, independent of bars directions.

A short description of the signalling LEDs is necessary to avoid misunderstandings.

Two yellow LEDs (▲ LAST, ▼ SYNC) on SG2-B receiver, facilitates the alignment procedure.

During standard operation, the LEDs indicate the safety light curtain status, as shown in the table.

### Correct alignment procedure

The light curtain alignment can be effected only after having completed the mechanical installation and the electrical connections. The following procedure has to be followed:

- Check the green LED (■) and the yellow LED (➡) on the TX unit. If ON, the emitter is running correctly;
- Verify that the sensitive area from the safety light curtain is free;
- Verify that one of the following conditions is present on the RX unit:

#### STANDARD CONDITION - NORMAL OP.

- Green LED (➡) ON and red LED (➡I) OFF. Both yellow LEDs (▲, ▼) are OFF. Units are aligned.

#### STOP CONDITION - SAFE (BREAK)

- Green LED (➡) OFF and red LED (➡I) ON.
- The status of both yellow LEDs (▲, ▼) does not matter. Units are not aligned.
- Continue with the following steps to pass from condition 2 to condition 1:
  - A** Keep the receiver in a steady position and set the emitter until the yellow LED (▼ SYNC) is OFF. This condition shows the effective alignment of the first synchronisation beam.
  - B** Rotate the emitter, pivoting on the lower optics axis, until the yellow LED (▲ LAST) is OFF. Under these conditions, the SAFE LED shall turn ON.

**NOTE:** Ensure that the green LED (➡) is steady ON.

- C** Delimit the area in which the green LED (➡) is steady through some micro adjustments - for the first and then for the second unit - then place both units in the centre of this area.

- Fix the two units firmly using brackets.
- Verify that the green LED (➡) on the RX unit is ON and beams are not interrupted, then verify that the red LED (➡I) turns ON if even one single beam is interrupted (condition where an object has been detected).
- This verification shall be made with the special cylindrical “Test Piece” having a size suitable to the resolution of the device used.


**NOTE:** Passing the Test Piece along the whole sensitive area and at any distance from the two units, the red LED (➡I) shall be always ON and never change status.

A daily test is recommended.

### DIAGNOSTIC FUNCTIONS

The operator can visualise the operating condition of the light curtains through the four LEDs positioned on the receiver unit and two LEDs on the emitter unit.

The figure below shows all signalling LEDs modes: OFF, ON and BLINKING.

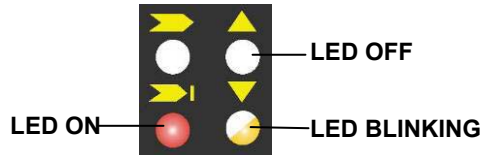

The operator is able to check the main causes of the system stop and failure, using the same LEDs used for visualising the functions. For Receiver:

Function	Status	Meaning	LED
Normal operation	TEST (red ON)	Light curtain being tested, the OSSD status shall be OFF	
	Emission (OSSD ON) (green ON)	Light curtain working and in normal operating conditions	
	Interruption (OSSD OFF) (red ON)	Light curtain working and in safety block conditions.	
Function	Type	Check and repair	LED
Error status	OSSD error (yellow and red BLINKING)	Check OSSD connections; make sure that they are not in contact with one another or with the supply cables, then Reset. If the failure continues contact Datalogic.	
	Internal error (red ON yellow BLINKING)	Switch OFF and switch ON the supply circuit; if the failure continues contact Datalogic.	
	Optical error (red ON yellow BLINKING)	Reset. If the failure continues contact Datalogic.	
	No power supply (LEDs OFF)	Check connections and input voltage correct value. If the failure continues contact Datalogic.	

For Emitter:

Function	Status	Meaning	LED
Normal operation	Test (green ON)	Light curtain being tested, the OSSD status shall be OFF	
	Emission (green ON yellow ON)	Light curtain working and in normal operating conditions	
Function	Type	Check and repair	LED
Error status	Internal error (green ON yellow BLINKING)	Switch OFF and switch ON the supply circuit; if the failure continues contact Datalogic.	
	Optical error (green ON yellow blinking)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Datalogic.	
	No power supply (LEDs OFF)	Check connections and input voltage correct value. If the failure continues contact Datalogic.	

## ORIGINAL INSTRUCTIONS (ref. 2006/42/EC)

This product is covered by one or more of the following patents.  
Italian Patent IT 1,363,719      Additional patents pending

### CE Compliance

CE marking states the compliance of the product with essential requirements listed in the applicable European directive. Since the directives and applicable standards are subject to continuous updates, and since Datalogic promptly adopts these updates, therefore the EU declaration of conformity is a living document. The EU declaration of conformity is available for competent authorities and customers through Datalogic commercial reference contacts. Since April 20th, 2016 the main European directives applicable to Datalogic products require inclusion of an adequate analysis and assessment of the risk(s). This evaluation was carried out in relation to the applicable points of the standards listed in the Declaration of Conformity. Datalogic products are mainly designed for integration purposes into more complex systems. For this reason it is under the responsibility of the system integrator to do a new risk assessment regarding the final installation.

**Warning:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### Datalogic S.r.l.

Via S. Vitalino 13 - 40012 Calderara di Reno - Italy  
Tel: +39 051 3147011 - Fax: +39 051 3147205 - [www.datalogic.com](http://www.datalogic.com)

Helpful links at [www.datalogic.com](http://www.datalogic.com): **Contact Us, Terms and Conditions, Support.**

The warranty period for this product is 36 months. See General Terms and Conditions of Sales for further details.



Under current Italian and European laws, Datalogic is not obliged to take care of product disposal at the end of its life. Datalogic recommends disposing of the product in compliance with local laws or contacting authorised waste collection centres.

© 2009 - 2017 Datalogic S.p.A. and/or its affiliates ♦ ALL RIGHTS RESERVED. ♦ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other trademarks and brands are property of their respective owners. Datalogic reserves the right to make modifications and improvements without prior notification.