DATALOGIC

SC5000

Controller



Reference Manual

Datalogic s.r.l.
Via S. Vitalino 13
40012 Calderara di Reno
Italy

SC5000 System Controller Reference Manual

Ed.: 2/2019

This manual refers to software version 3.6.1 and later.

© 2015 -2019 Datalogic S.p.A. and/or its affiliates ◆ ALL RIGHTS RESERVED. ◆ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. SC5000 is a trademark of Datalogic S.p.A.and/or its affiliates. All other trademarks and bands are property of their respective owners.

Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material.

Table of Contents

REFERENCES VI
Reference Documentation vi
Support Through The Website vi
CONVENTIONS VII
COMPLIANCE VIII
FCC Compliance viii
Power Supply viii
EAC Compliance viii
CE Compliance viii
Bureau Of Indian Standards (BIS) ix
INTRODUCTION 1
Product Description 1
General View 3
Guide to Installation 4
Setting Up a Redundant (REDS) System 4
Model Description 5
LED Indicators 6
Accessories 8
MECHANICAL & ELECTRICAL INSTALLATION 10
Package Contents 10
Mechanical Mounting 11
Electrical Connections 12
Power Connector Pin-Out Table 13
Main Serial Communications Interface 13
RS232 Interface 14
RS422 Full-Duplex Interface 15
Auxiliary Serial Interface 16
Ethernet Interface 16
Profibus Interface 17
Profinet Interface 18
PLC Signal Connections through SC50000 Connectors 19
Encoder and Sensor Wiring to the SC5000 20
PNP Connections 20
NPN Connections 21
Digital Output Configuration 23
Digital Input Configuration 24
Grounding 24
Typical Layouts 25
Large Synchronized Network Layout 25
Redundant System Layout 28
Keypad and Display 32
How to Get to the Boot Loader 33
How to Default the SC5000 33
How to Get to the Menu Functions 33
Standard Mode 33
Setting the SC5000 Clock to Support Date and Time 36
Redundancy Mode 37
SC5000 Active Controller Window 37

SC5000 Standby Controller Window 37
Menu Mode 38
E-GENIUS 40
Getting Started 40
Prerequisites 40
Starting e-Genius 40
Monitor Mode 42
e-Genius Basics 43
e-Genius Menu Tree 43
Entering Text Using the Text Entry Tool 43
Update and Reset Buttons 44
Disabled Check Boxes 44
Getting Help 44
System Information 46
Modify Settings 50
Operating Mode 51
Barcode Settings Table 67
Barcode Configuration 74
Understanding Barcode Configurations 75
No Read Messages 75
Single Label 78
Standard Multi Label 82
Logical Combination 86
Barcode Configuration | Code Collection 96
Serial Ports 101
Main Serial Port 102
Aux Serial Port 105
Ethernet 107
Ethernet | Line Settings 108
Ethernet | User Sockets 110
Ethernet | Ethernet_IP 114
Ethernet | WebSentinel 118
Fieldbus 120
Messaging 125
Messaging | Message Format 126
Messaging | Message Builder 138
Messaging | Statistics 144
Messaging | Protocol Index 146
Messaging | Pass-Thru 150
Messaging | Diagnostics Messages 152
Digital I/O 155
Diagnostics 158
Energy Saving 162
HMI Settings 166
Redundant Operation 167
Hybrid Configuration 169
Device Settings 173
Device Settings | Device Info 174
Device Settings | Mounting 176
PackTrack™ Calibration Wizard 178
Device Settings | Options 179
Diagnostics 183
Diagnostics | Monitor 184
Diagnostics | Read Test 186
Diagnostics | Status Viewer 187
Utilities 190
Utilities | Backup or Restore 191
Utilities | Reboot 193
Utilities | Update Firmware 194
Utilities | Launch Genius 196
Utilities | Help 197

MAINTENANCE **198**
Backup and Automatic Replacement Procedure **198**
Backing Up the System Using the SC5000 Keypad 198
Backing Up the System Using e-Genius 198
Replacing an SC5000 198
TROUBLESHOOTING **200**
Troubleshooting Guide **201**
Error Codes and Resolutions **203**
TECHNICAL FEATURES **211**
INDEX **213**

References

Reference Documentation

The documentation related to the SC5000 controller is listed below:

- PWR-480B Installation Manual
- Baggage Handling Airport Array Redundant System

Support Through The Website

Datalogic provides several services as well as technical support through its web-site. Log on to www.datalogic.com and click on the SUPPORT link which gives you access to:

- **Downloads** by selecting your product model from the dropdown list in the Search by Product field for specific Data Sheets, Manuals, Software & Utilities, and Drawings;
- **Repair Program** for On-Line Return Material Authorizations (RMAs) plus Repair Center contact information;
- **Customer Service** containing details about Maintenance Agreements;
- **Technical Support** through email or phone.

Conventions



This symbol draws attention to details or procedures that may be useful in improving, maintaining, or enhancing the performance of the hardware or software being discussed.



This symbol identifies a hazard or procedure that, if incorrectly performed, could cause personal injury or result in equipment damage. It is also used to bring the user's attention to details that are considered IMPORTANT.



This symbol alerts the user they are about to perform an action involving, either a dangerous level of voltage, or to warn against an action that could result in damage to devices or electrical shock.



This symbol alerts the user they are about to perform an action involving possible exposure to laser light radiation.



This symbol identifies a procedure that requires you take measures to prevent Electrostatic Discharge (ESD) e.g., use an ESD wrist strap. Circuit boards are most at risk. Please follow ESD procedures.

Compliance

FCC Compliance

Modifications or changes to this equipment without the expressed written approval of Datalogic could void the authority to use the equipment.

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference which may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Power Supply

This product is intended to be installed by Qualified Personnel only.

EAC Compliance

Customs Union:

The CU Conformity certification has been achieved; this allows the Product to bear the Eurasian mark of conformity.

CE Compliance

CE marking states the compliance of the product with essential requirements listed in the applicable European directive. Since the directives and applicable standards are subject to continuous updates, and since Datalogic promptly adopts these updates, therefore the EU declaration of conformity is a living document. The EU declaration of conformity is available for competent authorities and customers through Datalogic commercial reference contacts. Since April 20th, 2016 the main European directives applicable to Datalogic products require inclusion of an adequate analysis and assessment of the risk(s). This evaluation was carried out in relation to the applicable points of the standards listed in the Declaration of Conformity. Datalogic products are mainly designed for integration purposes into more complex systems. For this reason it is under

the responsibility of the system integrator to do a new risk assessment regarding the final installation.



This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Bureau Of Indian Standards (BIS)

Self Declaration – Conforming to IS 13252 (Part 1):2010, R-41009288

Chapter 1
Introduction

Product Description

The SC5000 Controller offers all the necessary functions to make the phases of installation, setup, testing, and maintenance of the omnidirectional reading tunnel easy and quick.

The SC5000 Controller key functions are:

- Bus Controller: cluster management and Host interface of a multi-sided reading tunnel based on EBC (Ethernet Based Communication) bus;
- Automatic replacement procedure: automatic procedure for scanner and bus controller replacement;
- Diagnostic indications on the reading station status, simple to be detected without any PC needed. These indications, based on LEDs and display, provide the maintenance staff with all the necessary information;
- Easy remote access to all of the reading station information, thanks to built-in Ethernet (all models) and fieldbus (Profibus or Profinet models) connectivity;
- Single and Redundant System configurations;
- Integration with Dimensioners and Vision Systems; SC5000's efficiency in hybrid solutions represents a crucial competitive advantage for challenging application requirements.
- Auto PackTrack Calibration procedure from SC5000 Menu using e-Genius web based setup software.
- Energy Saving allows turning on/off the motors and lasers of all network scanners according to the selected digital input, encoder, or communication channel. The time required to restart the system is less than 1 minute independently from the number of scanners connected. It is suggested to use this parameter for example when the conveyor is stopped for a lengthy period.
- Three Inputs (Trigger, Encoder/Tachometer, IN3), three Outputs (OUT1, OUT2, OUT3), one configurable I/O Port (IN4/OUT4). *See* “Digital Output Configuration” on page 23

The SC5000 Controller is divided into two parts:

- The upper part (alloy case) contains the Controller's digital section; here you can find the four Ethernet M12 connectors, the removable SD-Flash memory, the display, the keypad and the LEDs.
- The lower part (plastic case) contains the connection board, the place for the optional Fieldbus modules and the connector panel.

The simple and sturdy mechanical structure makes the SC5000 Controller the ideal solution for industrial environments.

The SC5000 Controller is fully compatible with DS8110 and DX8210 scanners.

The SC5000 Controller allows connection to the Trigger and Encoder/Tach. PNP inputs are available via M12 circular connectors, placed on the lower front panel.

This configuration covers a great part of all the possible user's needs.



The Trigger and Encoder signals must be supplied to only one device, therefore, if you connect the Trigger or the Encoder to the SC5000 and a CBX box is required, you can not connect another Trigger or Encoder source to the CBX510!

General View



① Indicator LEDs

② Display

③ HMI 5-Key Keypad

④ Mounting Holes (2)

⑤ Host Interface Panel (Fieldbus Models)

⑥ Trigger Input Connector

⑦ Encoder/Tach Input Connector

⑧ SC5000 to CBX510 Connector (for Serial Host and I/O) (with IP65 protection cap not shown)

⑨ Power Connector

⑩ Ethernet Configuration Connector

⑪ Ethernet Host Connector

⑫ EBC Scanner Network Connector

⑬ EBC Scanner Network Connector

⑭ Front Panel Connector Guard (not shown)

Guide to Installation

The following can be used as a checklist to verify all the steps necessary to complete installation of the SC5000 Controller.

1. Read all information in the section “Compliance” at the beginning of this manual.
2. Correctly mount the SC5000.
3. Connect complete system cabling according to the signals required for the application. This includes – EBC cluster cabling, encoder, package presents sensor, host communications connections, power, etc. (See section 2.3)
4. Power up system.
5. Connect a PC to the SC5000 CFG port.
6. Perform a “Discover Scanners”.
7. Configure bar code menus, host messages, PackTrack settings, etc.
8. Execute the Backup procedure.
9. Exit the configuration program and run your application.

The installation is now complete.



If required, mount the cable protection bracket onto the SC5000 front cover.

Setting Up a Redundant (REDS) System

When setting up a redundant (REDS) system requiring two SC5000 Controllers, follow these steps:



See Baggage Handling Airport Array Redundant System manual.

1. Build the internal EBC network. Connect the REDS system devices, consisting of two SC5000's and at least one DS8110 or DX8210. The topology forms a ring closed at the two SC5000's.
2. The default values of both SC5000 are as follows:

Topological Role:Master Alone
Redundancy Role:None
Host IP Address:172:27:101:220
Host Net Mask255:255:0:0
Cfg IP Address:192:168:3:100
Cfg Net Address:255:255:255:0
Cluster:Empty

Change the following:
Topological Role:Master Alone
Master Working: Active
Master Protecting: Standby

3. Run the network discovery task from the W/A (Working/Active) controller.
4. Configure the Working/Active Controller through the configuration port.



Each configuration change of the Working/Active Controller will be automatically applied to the Protecting Standby Controller.

At the end of this step, the Cluster of the two SC5000's must contain all present slaves. Connect the Host ports of the two Controllers to the customer's intranet.

5. Run the Backup procedure from the Active Controller and it will be performed on both.

Model Description

The SC5000 Controller is available in the following versions:

Model	Description	Part Number
SC5000-1000	Standard Controller version	935750001
SC5000-1100	Profibus Controller version	935750002
SC5000-1200	Profinet Controller version	935750003

LED Indicators



System Signal LEDs

#	Name	Color	State	Function
1	POWER	**BLUE**	ON OFF	SC5000 Powered No Power
2	TRIG	**GREEN**	ON OFF	Photoelectric Sensor Active Photoelectric Sensor Not Active
3	SW-TRIG	**GREEN**	ON OFF	Software Trigger Acknowledge Active Software Trigger Acknowledge Not Active



Activity on Input 1 causes both the TRIG and SW-TRIG LEDs to activate simultaneously. The SW-TRIG LED is driven by a Fieldbus Host when Start Input from Bus is enabled.

4	TACH	**GREEN**	Blinking OFF	Encoder Active Encoder Inactive
5	IN3	**GREEN**	ON OFF	Input 3 Active Input 3 Inactive
6	IN4	**GREEN**	ON OFF	Input 4 Active Input 4 Not Inactive
7	OUT1	**YELLOW**	ON OFF	Output 1 Active Output 1 Inactive
8	OUT2	**YELLOW**	ON OFF	Output 2 Active Output 2 Inactive
9	OUT3	**YELLOW**	ON OFF	Output 3 Active Output 3 Inactive
10	OUT4	**YELLOW**	ON OFF	Output 4 Active Output 4 Inactive

System Event Status LEDs

#	Name	Color	State	Function
11	STATUS	**GREEN** / **RED**	ON Green ON Red OFF	Controller Status OK Scanner Cluster Failure Controller Not Ready
12	EBC	**GREEN** / **YELLOW**	ON Green ON Yellow OFF	EBC Network OK EBC Network Warning EBC Network Not Ready

Ethernet Status LEDs

#	Name	Color	State	Function
13	CFG	**YELLOW**	Blinking	Ethernet CFG Port Activity
14	HOST	**YELLOW**	Blinking	Ethernet HOST Port Activity
15	ETH2	**YELLOW**	Blinking	EBC Port 2 Activity
16	ETH1	**YELLOW**	Blinking	EBC Port 1 Activity

Accessories

The complete list of reading station accessories are presented here and are available on request. Not all accessories are relevant to building a reading station based on the SC5000 Controller.

Category	Description	Part Number
Cables and Terminators		
Ethernet Cables	ETH CABLE M12-M12 1M (straight-straight) Scanner ETH1 or ETH2 straight to Scanner EBC ETH1 or ETH2 straight	93A050065
	ETH CABLE M12-M12 3M (straight-straight) Scanner ETH1 or ETH2 straight to Scanner EBC ETH1 or ETH2 straight	93A050066
	ETH CABLE M12-M12 5M (straight-straight) Scanner ETH1 or ETH2 straight to Scanner EBC ETH1 or ETH2 straight	93A050067
	ETH CABLE M12-M12 1M (straight- 90°) SC5000 ETH1 or ETH2 90° to Scanner EBC (ETH1 or ETH2) straight	93A050068
	ETH CABLE M12-M12 3M (straight- 90°) SC5000 ETH1 or ETH2 90° to Scanner EBC (ETH1 or ETH2) straight	93A050069
	ETH CABLE M12-M12 5M (straight- 90°) SC5000 ETH1 or ETH2 90° to Scanner EBC (ETH1 or ETH2) straight	93A050070
	ETH CABLE M12-RJ45 5M (90°-RJ45) SC5000 CFG 90° to Laptop RJ45 for setup or to SC5000 HOST 90° to Ethernet Host RJ45	93A050088
	CAB-ETH-M01 M12-IP67 1M (straight- RJ45) Scanner to the Host or Configuration PC	93A051346
	CAB-ETH-M03 M12-IP67 3M (straight- RJ45) Scanner to the Host or Configuration PC	93A051347
	CAB-ETH-M05 M12-IP67 5M (straight- RJ45) Scanner to the Host or Configuration PC	93A051348
	ETH CABLE M12-M12 2mt LENGTH (90°- 90°)	93A050106
	ETH CABLE M12-M12 5mt LENGTH (90°- 90°)	93A050107
REDs Cables	ETH CABLE M12-M12 1M (90°- 90°) SC5000 Working ETH1 or ETH2 90° to SC5000 Protecting ETH1 or ETH2 90°	93A050087
	REDS POWER ALARM CABLE 5M PWR-480B to CBX510 power alarm connections	93A050086
EBC Patch Cable	ETH CABLE M12-M12 0.5M (straight-straight) Female to Female EBC patch cable; close the EBC when a scanner is sent to repair, only for Master/Slave	93A050085

Category	Description	Part Number
Interface Cable	SC5000 to CBX510 for Serial or I/O connections	93A050071
CBX Cables	CAB-DS01-S M12-IP67 1M Scanner to CBX for Serial or I/O connections	93A050058
	CAB-DS03-S M12-IP67 3M Scanner to CBX for Serial or I/O connections	93A050059
	CAB-DS05-S M12-IP67 5M Scanner to CBX for Serial or I/O connections	93A050060
AS-I Terminal	AS-I CABLE TERMINAL for AS-I branch topology wiring	93ACC0083
Power Cables	PWR CABLE, AS-I, 2 Wires, 10M (Backbone with caps)	93ACC0081
	PWR CABLE, AS-I, 2 Wires, 25M (Backbone with caps)	93ACC0082
	PWR CABLE M12- ASI standard 1M (Node)	93ACC0067
	PWR CABLE M12- ASI standard 2M (Node)	93ACC0068
	PWR CABLE ext. M12 Male-M12 Fem 3M for PG-240	93ACC0149
	PWR CABLE ext. M12 Male-M12 Fem 5M for PG-240	93ACC0150
	PWR CABLE, CAB-LP-05 M12 Female-Free Wires 5M for alternative power connections	93A050037
Connection Boxes		
	CBX100 Compact	93A301067
	CBX100 Compact All in One (includes BM100)	93A301076
	CBX510 Modular	93A301087
	CBX510 Modular All in One (includes BM100)+BA200	93A301091
Backup Module	BM100 Backup Module	93ACC1808
Mounting Hard-ware	BA200 Mounting Adapters (to Bosch or 80/20 Frames)	93ACC1822
Fieldbus Modules	BM300/310 Profibus Module STD/IP65	93ACC1810, 93ACC1811
Fieldbus Modules	BM700/710 Profinet Module STD/IP65	93ACC1816, 93ACC1886
Connector Module	BA500 M12 4P F. Panel Conn (Trigger)	93ACC1854
Controllers		
	SC5000-1000 Standard System Controller	935750001
	SC5000-1100 Profibus System Controller	935750002
	SC5000-1200 Profinet System Controller	935750003
Mounting Hard-ware	BA200 Mounting Adapters (to Bosch or 80/20 Frames)	93ACC1822
Mirrors		
	GFC-8110 Close Distance Mirror	93A251034

Category	Description	Part Number
Power Supplies		
	PG-100-K03 POWER SUPPLY 60W KIT (US) w/ M12 cable	93ACC0058
	PG-100-K01 POWER SUPPLY 60W KIT (EU) w/ M12 cable	93ACC0059
	PG-100-K02 POWER SUPPLY 60W KIT (UK) w/ M12 cable	93ACC0060
	PG-240-K03 POWER SUPPLY 240W 8 Port M12 (US) w/o M12 Cable	93ACC0144
	PG-240-K01 POWER SUPPLY 240W 8 Port M12 (EU) w/o M12 Cable	93ACC0145
	PWR-480B POWER UNIT 110/230VAC 24V	93ACC0076
Sensors		
	MEP-593 PHOTOCELL KIT PNP (PH-1) with Free Wires	93ACC1791
	MEP-604 PHOTOCELL KIT PNP M12-M12 Photocell with M12 connector for SC5000	93ACC0140
Encoders		
	OEK-2 OPTICAL ENCODER KIT (CAB 10M +SPRING)	93ACC1770
	OEK-4 ENC KIT PNP 250PPR + M12-M12 CABLE	95B082040
	OEK-4 ENC KIT PNP 250PPR + M12-FREE CABLE	95B082050
Field Mount Connectors	FMC-5000 2xM12 TRIG+ENC INPUT KIT Connectors for PLC signal to SC5000 (Tilt-Tray or Cross-Belt applications)	93ACC0181
Mounting Brackets		
L-Bracket	DS8110 L-shape Mounting Bracket	93ACC0080
Miscellaneous		
Air Cleaning System	ACS-DS8110 Air Cleaning System for DS8110	93ACC0084

Chapter 2
Mechanical & Electrical Installation

To install the system follow the given procedure:

1. Select the mounting location and mount the SC5000 Controller.
2. Select the preferred power source to power the SC5000 through the M12 Male 5p. connector. *See "General View" on page 3.*
3. Proceed with system electrical connections.
4. Connect to the Configuration PC and modify the configuration parameters


Package Contents

Verify that the SC5000 Controller and all the parts supplied with the equipment are present and intact when opening the packaging; the list of parts includes:

- SC5000 Controller
- Protection guard for the Ethernet connectors, with its fixing screws
- SC5000 Quick Reference Guide
- Mounting template
- Mounting screws




Overall Dimensions

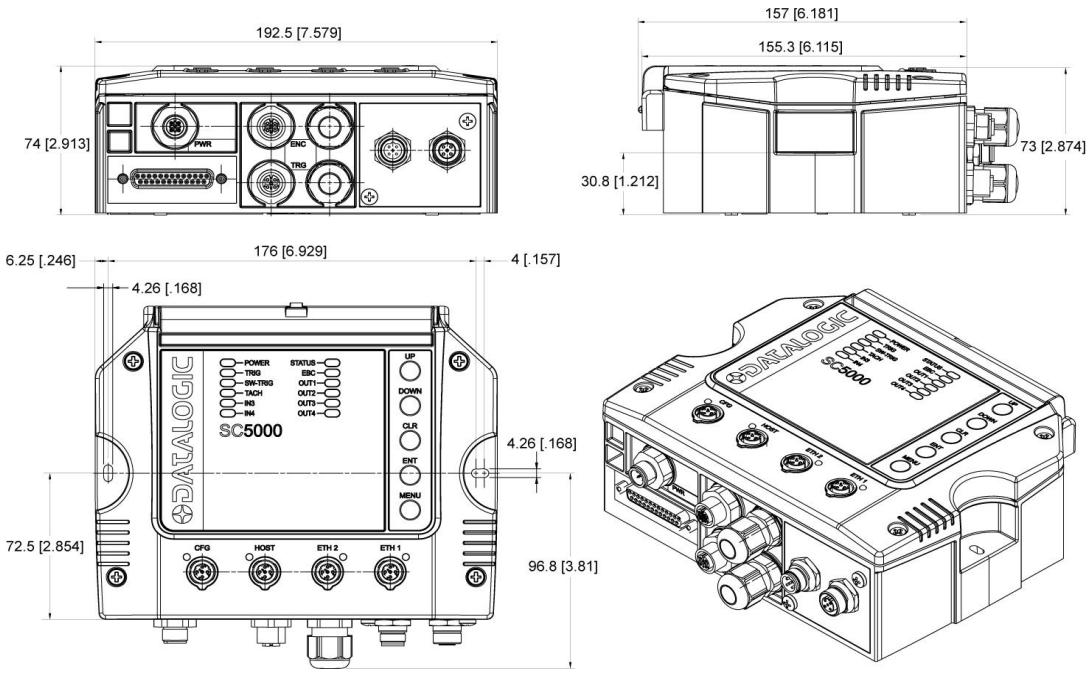


Mechanical Mounting

SC5000 can be mounted to various wooden or plastic surfaces using two self threading screws (3.9 x 45 mm) and washers.

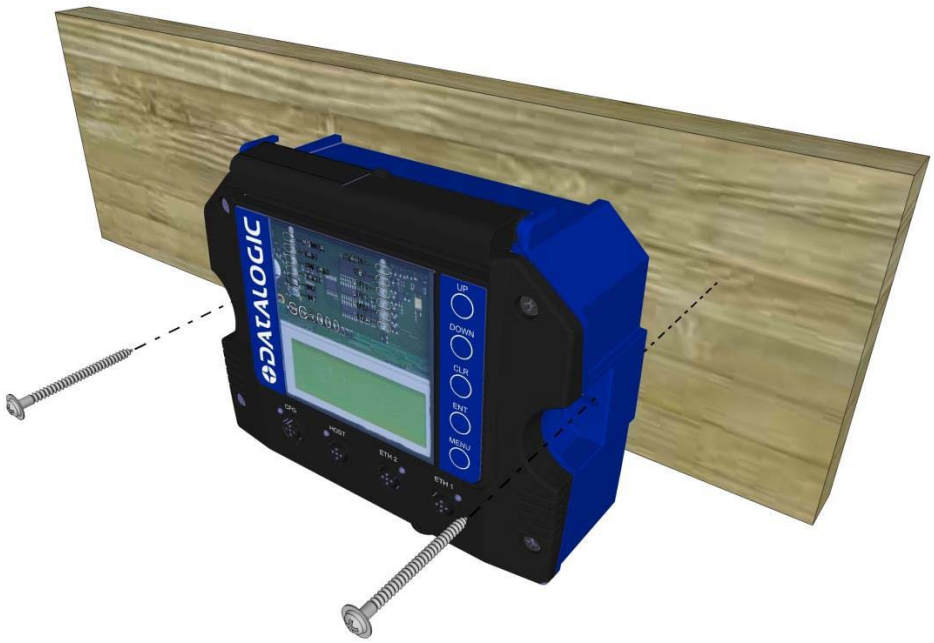

Mounting to other surfaces such as concrete walls or metallic panels requires appropriate user-supplied parts (screws, screw anchors, nuts, etc.).

SC5000 can also be mounted to a Bosch frame or 80/20® frame using the following mounting accessories: BA200 (93ACC1822).

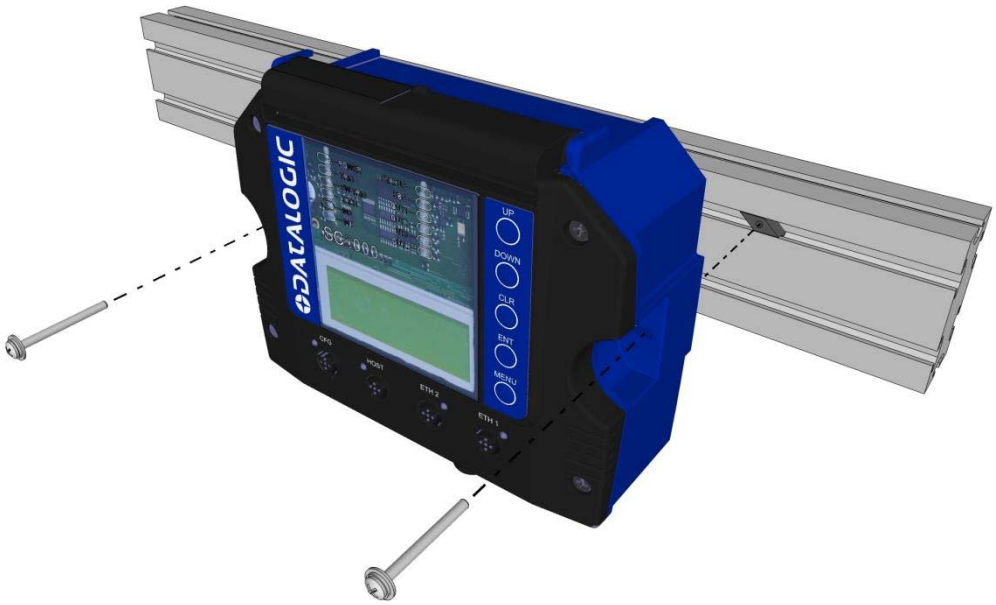


Electrical Connections

The connectors available for each controller model are the following:

Controller Model	Connector	Type
All models	Power	M12 Male 5p. A-Coded
	Serial and Extended I/O	25-pin female
	Trigger	M12 Female 4p. A-Coded
	Encoder/Tachometer	M12 Female 5p. A-Coded
	Some connections need to be hardwired to the SC5000 terminal blocks.	
	Ethernet (x4)	4x M12 Female 4p. D-Coded
SC5000-1100	Profibus (x2)	M12 Male 5p. B-Coded + M12 Female 5p. B-Coded
SC5000-1200	Profinet (x2)	M12 Female 4p. D-Coded + M12 Female 4p. D-Coded

Power Connector Pin-Out Table

A recommended power supply and cabling is available with the SC5000 Controller. However, if your installation requires custom power supply wiring, the pin-outs of the unit power connector are provided below for your convenience.
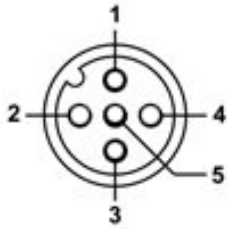
<table>
<tr><td colspan="2" rowspan="3">24V - - - 4A MAX</td><td colspan="2">POWER Input</td></tr>
<tr><td>Unit Connector (shown)</td><td>Mating cable connector</td></tr>
<tr><td>5-PIN M12-TYPE MALE</td><td>5-PIN M12-TYPE FEMALE</td></tr>
<tr><td rowspan="6">MALE 5-PIN M12-TYPE

</td><td>Pin</td><td colspan="2">Function</td></tr>
<tr><td>1</td><td colspan="2">+24 VDC</td></tr>
<tr><td>2</td><td colspan="2">n/c</td></tr>
<tr><td>3</td><td colspan="2">dc return</td></tr>
<tr><td>4</td><td colspan="2">n/c</td></tr>
<tr><td>5</td><td colspan="2">protective earth (chassis)</td></tr>
</table>



If a CBX510 connection box is connected to the SC5000 controller, it obtains power directly from the SC5000 controller through the 25-pin to 25-pin cable.

In cases where the AS-I cabling is not used, the alternative CAB-LP-05 cable can be used to connect the power supply to the controller. Connect the Brown/White pair to +24 Vdc and the Blue/Black pair to 0 V- (GND).


Main Serial Communications Interface

The opto coupled main serial interface is compatible with the following electrical standards:

- RS232
- RS422 full-duplex

RS232 Interface

The main serial interface is used for communication with the Host computer and allows transmission of code data. It is always advisable to use shielded cables. The overall maximum cable length must be less than 15 m (49.2 ft). The following positions of the SC5000 spring clamp connector (row 4) are used for RS232 interface connection:

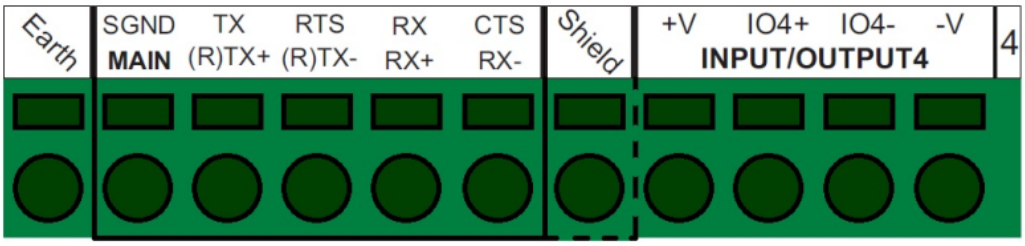


Name	Function
SGND	Signal ground (isolated)
TX	Transmit
RTS	Request to send
RX	Receive
CTS	Clear to send

As suggested above, the cable shield should be connected in the 'Shield' position.

The RTS and CTS signals control data transmission and synchronize the connected devices. If the RTS/CTS hardware protocol is enabled, the scanner activates the RTS output to indicate a message can be transmitted. The Host must activate the CTS input to enable the transmission.




RTS/CTS lines should only be connected if the Main serial port handshaking is configured for **Hardware (RTS/CTS)**.

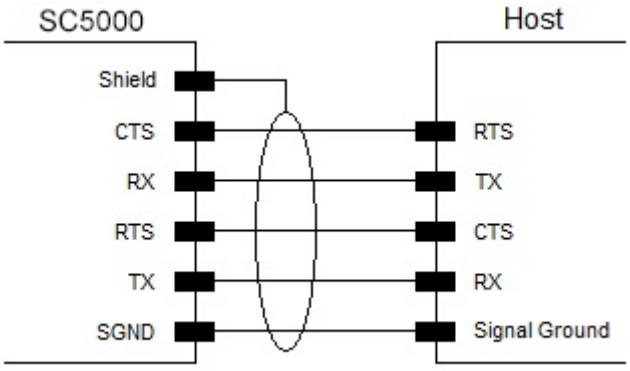


RS422 Full-Duplex Interface

The RS422 full-duplex interface is used for non-polled communication protocols in point-to-point connections over longer distances (max 1200 m / 3940 ft) than those acceptable for RS232 communications or in electrically noisy environments. The following positions of the SC5000 spring clamp connector (row 4) are used for RS422 full-duplex interface connection:

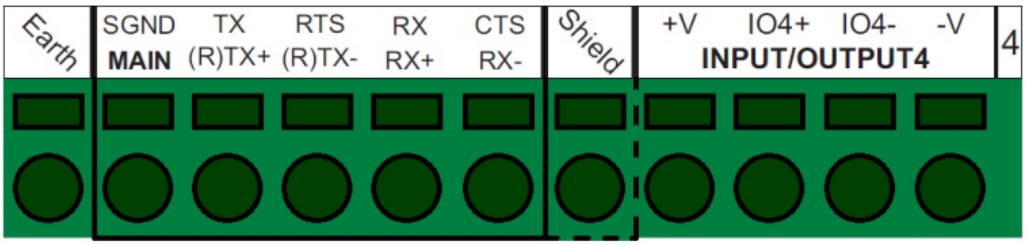


Name	Function
SGND	Signal ground (isolated)
TX+	RS422 output (+)
TX-	RS422 output (-)
RX+	RS422 input (+)
RX-	RS422 input (-)

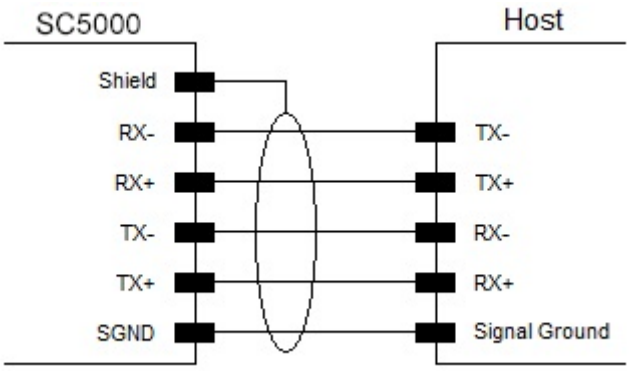

WARNING

For applications that do not use RS422 RX signals, do not leave these lines floating but connect them to SGND as shown below.

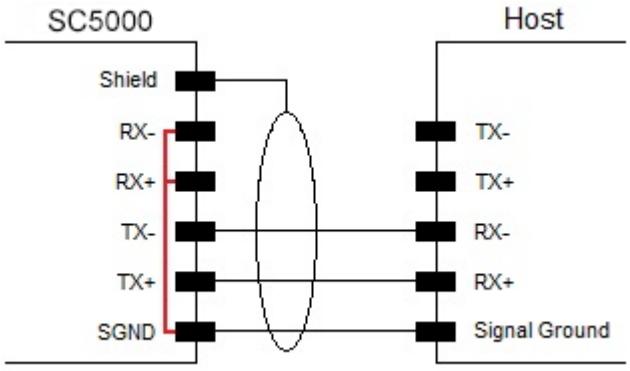


Auxiliary Serial Interface

This interface is available through the SC5000.The auxiliary serial interface is equipped with RS232 interface connections. In addition to being an alternative serial interface, it can be used to connect a hand-held reader to the reading station in a pass through configuration. Data Transmission can be enabled or disabled on this interface through the configuration parameters.

The following pins inside the SC5000 are used for RS232 interface connection:

Pin	Name	Function
2	TX	Transmit
3	RX	Receive
5	GND	Ground

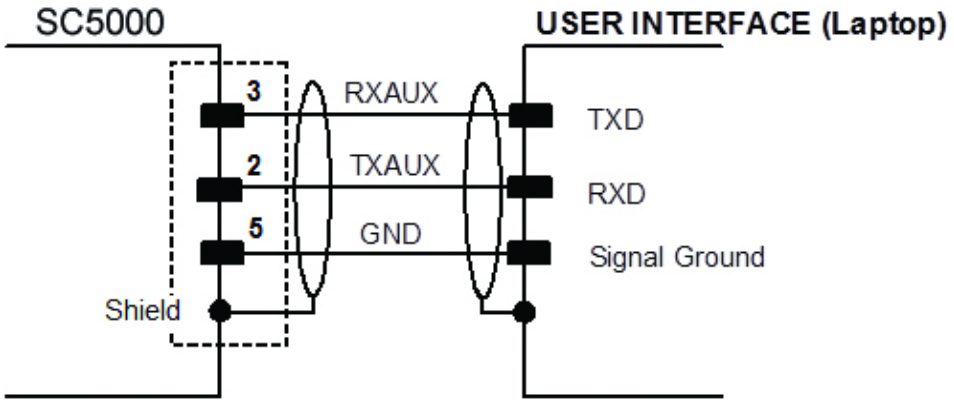


The 9-pin. connector is normally used for quick/temporary connection. For a more permanent connection you can also use the SC5000's spring clamp connectors, in particular the positions labeled as RX AUX, TX AUX and SGND AUX.

Ethernet Interface

Four standard M12 4-pin D-Coded female connectors are provided on the SC5000's upper metal cover for the Ethernet connections: CFG, HOST, ETH2 and ETH1.

CFG is used for configuration purposes; HOST is used to connect the SC5000 to an Ethernet Host; ETH2 and ETH1 are reserved for building the EBC cluster; typically the cluster members are DS8110/DX8210 scanners.

This interface is IEEE 802.3 10 BaseT and IEEE 802.3u 100 BaseTx compliant.

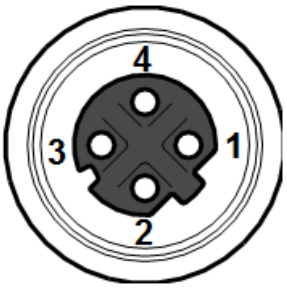

Ethernet Network Connector Pinout		
Pin	Name	Function
1	TX +	Transmitted data (+)
2	RX +	Received data (+)
3	TX -	Transmitted data (-)
4	RX -	Received data (-)


Profibus Interface

The Profibus interface is only available in the SC5000-1100 Profibus model and allows inserting the controller in a Profibus network.


A pair of Male and Female M12 5-pin B-Coded connectors are provided on the SC5000's rightmost front panel for Profibus connections.

Water Tight Connectors

PB-IN (Profibus In) M12 5P Male (B-coded)	
Pin	**Function**
1	+5V Bus
2	A Line (-)
3	GND Bus
4	B Line (+)
5	Shield

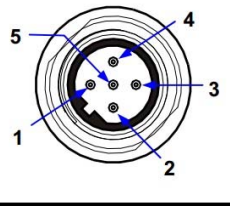

PB-OUT (Profibus Out) M12 5P Female (B-coded)	
Pin	**Function**
1	+5V Bus
2	A Line (-)
3	GND Bus
4	B Line (+)
5	Shield

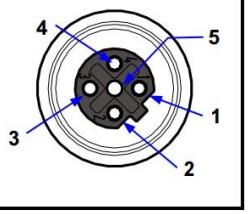

The Profibus interface is used for communication with a PROFIBUS DP Host and allows expanding the networking and remote diagnostic capabilities of the controller.




Bus termination switches are located on the back of the connector panel for the Profibus IP65 connection.

ONLY the last slave node on the Profibus network must be terminated and this can be done in one of two ways:

- Connect a standard Profibus terminator onto the M12 Female connector, (i.e. Lumberg "SAC-5P-M12MS PB TR" terminator). In this case ALL the bus termination switches must be OFF.
- If no standard Profibus terminator is used, set ALL the bus termination switches to ON. In this case install a connector plug onto the M12 Female connector to maintain the IP rating.


ALL Profibus slave nodes other than the last one, must have ALL the switches set to OFF.

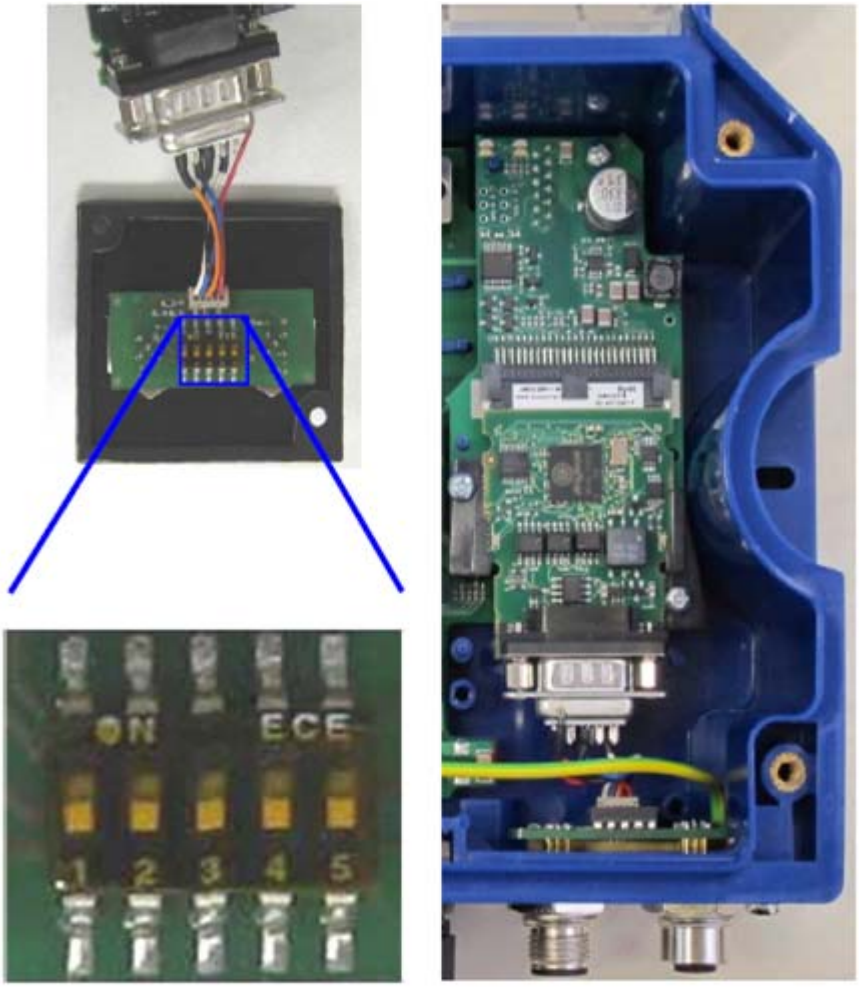

Profinet Interface

The Profinet interface is only available in the SC5000-1200 Profinet model and allows inserting the controller in a Profinet-IO network.

Two standard M12 4-pin D-Coded female connectors are provided on the SC5000's rightmost front panel for Profinet connections.

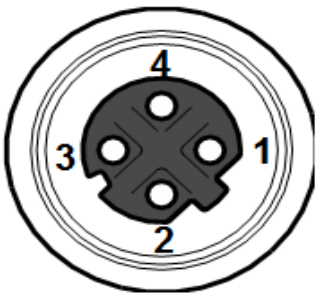

Ethernet Network Connector Pinout		
Pin	Name	Function
1	TX +	Transmitted data (+)
2	RX +	Received data (+)
3	TX -	Transmitted data (-)
4	RX -	Received data (-)

The Profinet interface is used for communication with a PROFINET-IO Host and allows expanding the networking and remote diagnostic capabilities of the controller.



PLC Signal Connections through SC50000 Connectors

If the Presence Sensor and Encoder signals are provided by a PLC, two accessory field connectors can be wired on site. The two connectors are contained in the FMC-5000 accessory, 93ACC0181.

Open the SC5000 and make the following changes on the Trigger and Encoder connections:

SC5000 WIRING CHANGES

1. Disconnect the white jumpers:
   - Encoder from -V to ENB
   - Presence Sensor from -V to I1B
2. Change the position of the brown wires: 0.
   - Encoder from +V to ENB
   - Presence Sensor from +V to I1B

PLC to S5000

1. Wire the Presence Sensor and Encoder signals coming from the PLC to the SC5000 connectors referring to the diagram on the connector packages and the wiring tables below.



Presence Sensor Signal		
Pin	Trigger (PNP)	SC5000 signal
2		nc
3	GND	-V
1	+V	+V
4	SIGNAL	I1A


Encoder Signal		
Pin	Encoder (PNP)	SC5000 signal
2	nc	nc
3	GND	-V
1	+V	+V
4	SIGNAL	ENA
5	Shield (optional)	Shield

2. Connect the SC5000 connectors to the relative SC5000 connectors *(see "General View" on page 3)*.

Encoder and Sensor Wiring to the SC5000


PNP Connections


The SC5000 is pre-wired for PNP device connections. Connect the PNP photocell M12 connector to the SC5000 TRG connector. Connect the PNP encoder M12 connector to the SC5000 ENC connect.

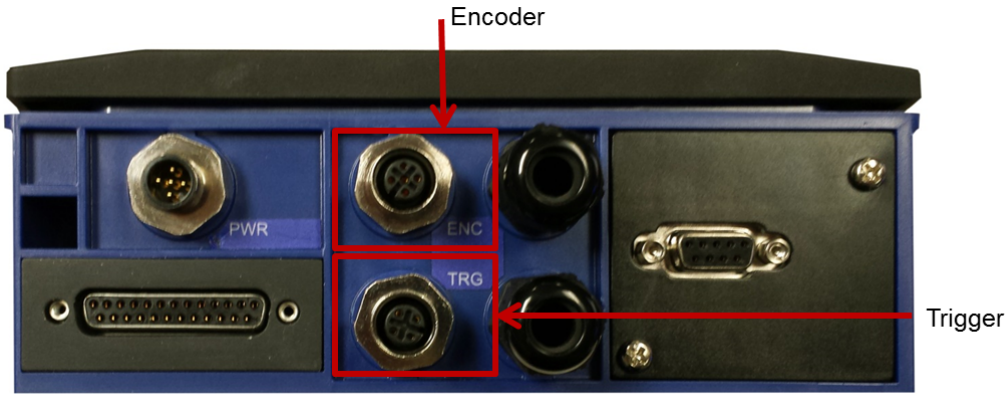

NPN Connections


NPN Device connections require opening th SC5000 and connecting the photo-cell and encoder as illustrated below.

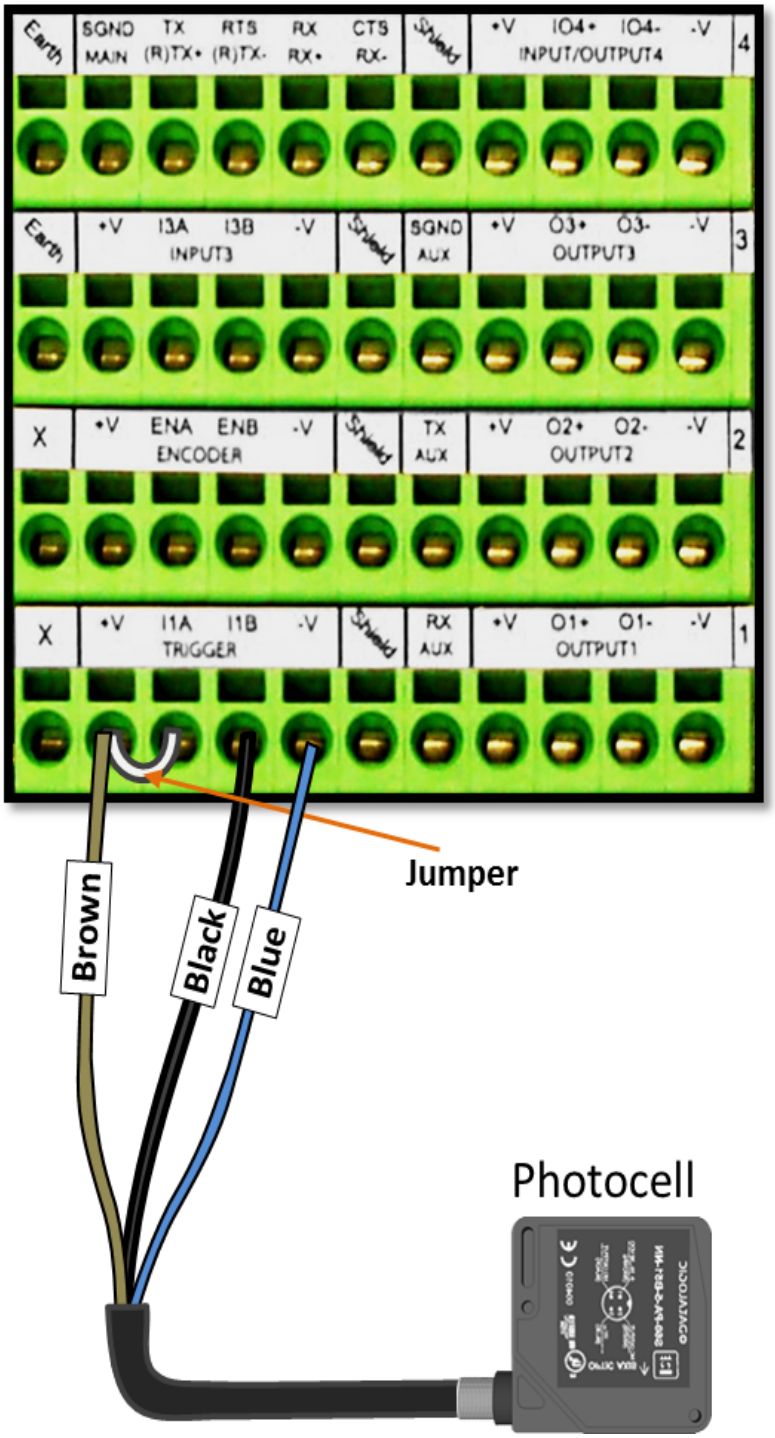

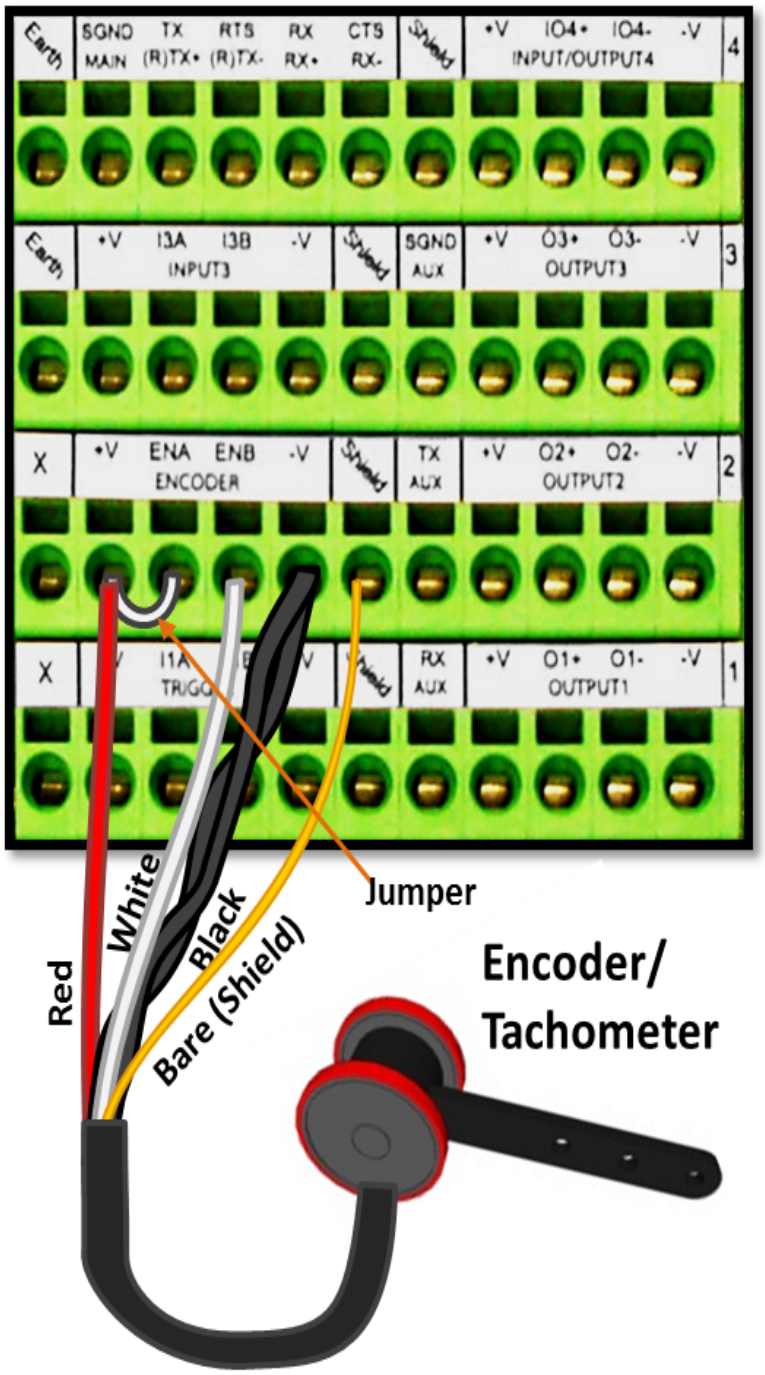
Earth
SGND
MAIN
TX
(R)TX+
RTS
(R)TX-
RX
RX+
CTS
RX-
Shield
+V
IO4+
IO4-
-V
INPUT/OUTPUT4
4
Earth
+V
I3A
I3B
-V
INPUT3
Shield
SGND
AUX
+V
O3+
O3-
-V
OUTPUT3
3
X
+V
ENA
ENB
-V
ENCODER
Shield
TX
AUX
+V
O2+
O2-
-V
OUTPUT2
2
X
I1A
TRIGG
Shield
RX
AUX
+V
O1+
O1-
-V
OUTPUT1
1
Red
White
Black
Bare (Shield)
Jumper
Encoder/
Tachometer

Digital Output Configuration

The SC5000 includes up to 4 opto-isolated outputs are available, 1 - 3 are dedicated, 4 is software configurable. The e-Genius Modify Settings | Digital I/O window includes options for outputs 1 and 2 with Primary and secondary Activation Event options including Complete Read, Partial Read, No Read, Trigger On, Trigger Off, Multiple Read, Right Match and Wrong No Match.

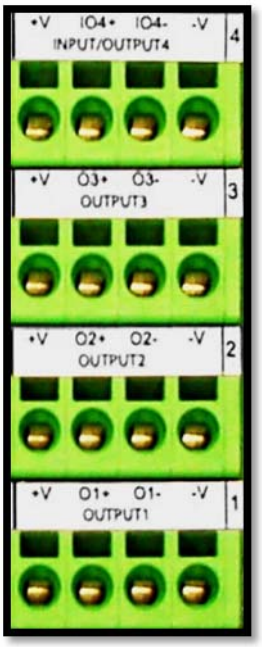

Outputs 1-4


Maximum Voltage 30V

Collector Current (pulse) 130 mA Max.

Collector Current (continuous) 40 mA Max.

Saturation Voltage (VCE) 1 V at 10 mA Max.

Maximum Power Dissipation 90 mV at 50 degrees C (ambient temperature)

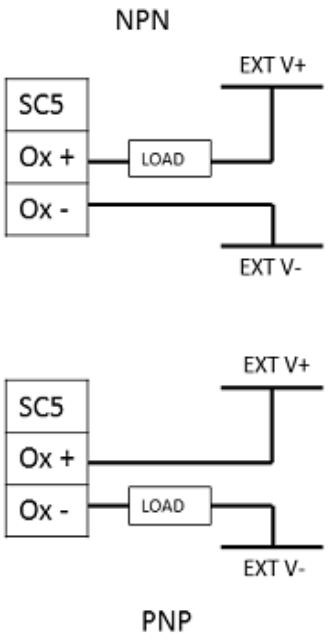


Unpowered Outputs (Using isolated external power supply).



Wiring diagram applies to all four outputs.

Powered Outputs

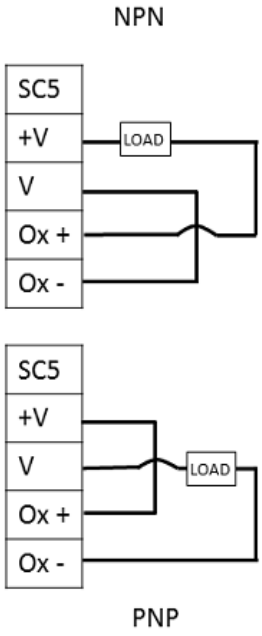


Digital Input Configuration

The SC5000 includes two general purpose isolated inputs, INPUT3 and INPUT/OUTPUT4. INPUT4 is shared with OUTPUT4 so it must be configured using e-Genius software. Note this wiring also applies to the CBX510 when it is used as the external wiring interface point.

	Inputs 3-4
	Operating Voltage 10-30 VDC
	Current Draw: Typical 5 mA

Example INPUT Wiring (Using Isolated Inputs):

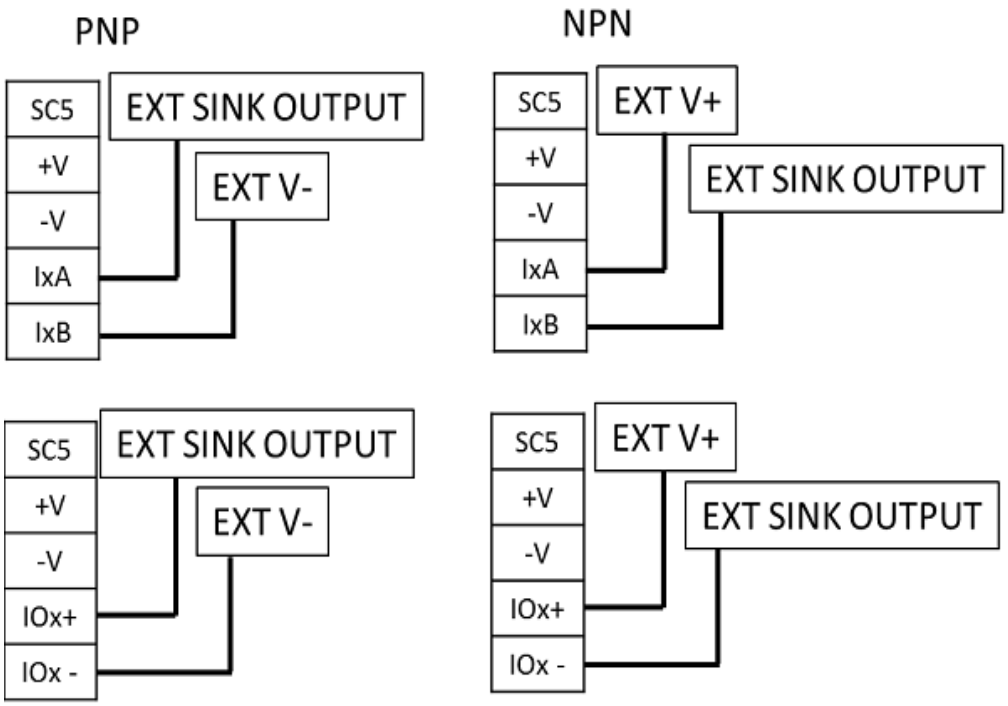

Grounding


In order to avoid any problems with electrical noise that could negatively affect system function, make sure that:


1. The AC power cable coming into the PWR box is always provided with a Ground and connected to the proper connector (Protective Earth – PE).
2. The structure where the readers, controllers, encoders/tachometers, and photoelectric sensors are mounted is grounded to the conveyor or to the PE terminal inside the PWR.
3. The Shield wires from the Encoder/Tachometer and photoelectric sensor cables are connected to the proper *Shield* terminal in the CBX box.
4. Normally, steps 1 through 3 will guarantee proper function. In case of problems such as transmission of strange or wrong characters, devices stop working without any reason, or other unexpected behavior, try connecting


the SC5000 or Controller Earth terminal to the PE terminal inside the PWR box.

WARNING

Use caution when using flat power cables.

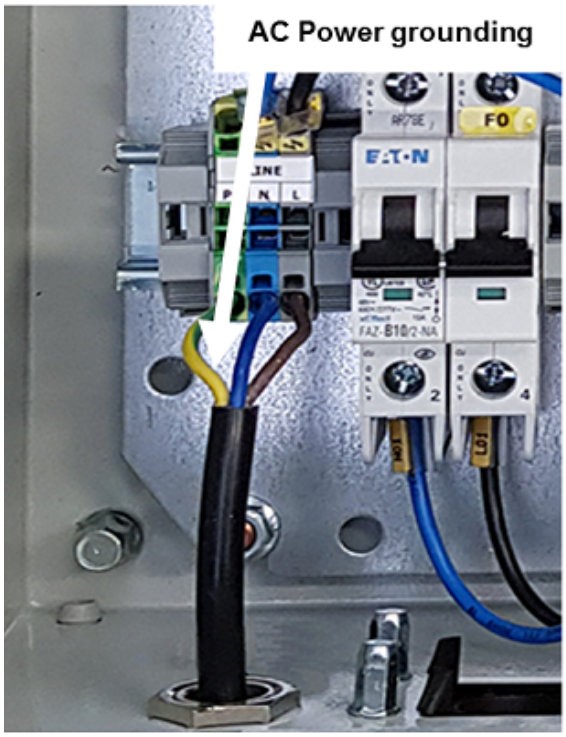

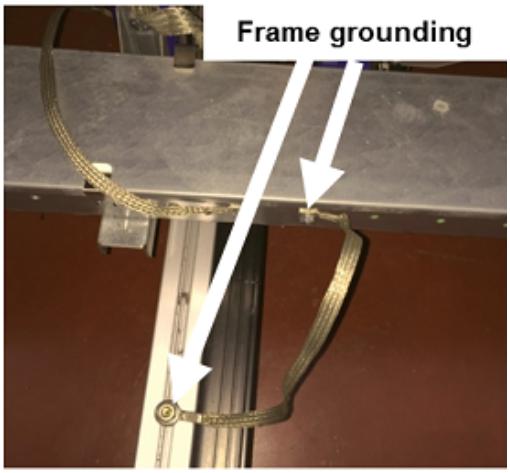

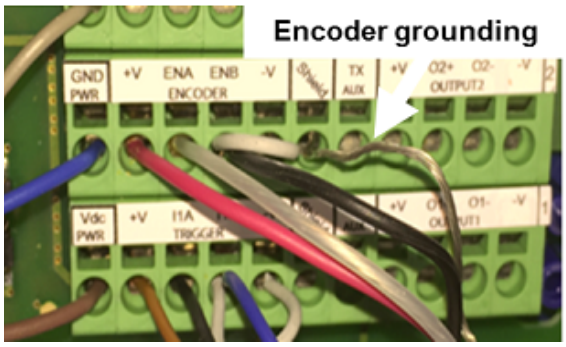



Typical Layouts

The following typical layouts refer to system hardware configurations, but also require the correct setup of the software configuration parameters.

Other layouts require the use of a specific SC5000 Controller model.

The accessories and cables indicated in the following figures are Datalogic products. We suggest their use to guarantee the correct system functioning.

Large Synchronized Network Layout


When building a large local EBC (Ethernet Based Connectivity) network, an SC5000 Controller should be used together with a PWR-480B power supply unit. In this case the SC5000 unit acts as the system master and is connected to the host through one of its interfaces.

- The SC5000 can be connected to the Host in several different layouts depending on the controller model.

- The SC5000 Standard models provide both Ethernet connections (direct or through a Hub/Switch) and point-to-point connections on the Main interface using either RS232 or RS422 full-duplex; Fieldbus models, additionally provide the model specific Fieldbus: Profibus, Profinet;
- All scanners act as slaves and are connected to the SC5000 through the EBC interface.

External devices such as a presence sensor and an encoder are all connected either to the SC5000 through its M12 circular connectors, or to the CBX510 connection box (connected to the Controller), wiring the signals through the CBX510 compression connectors.

SC5000: Basic Layout: Ethernet TCP/IP to Host

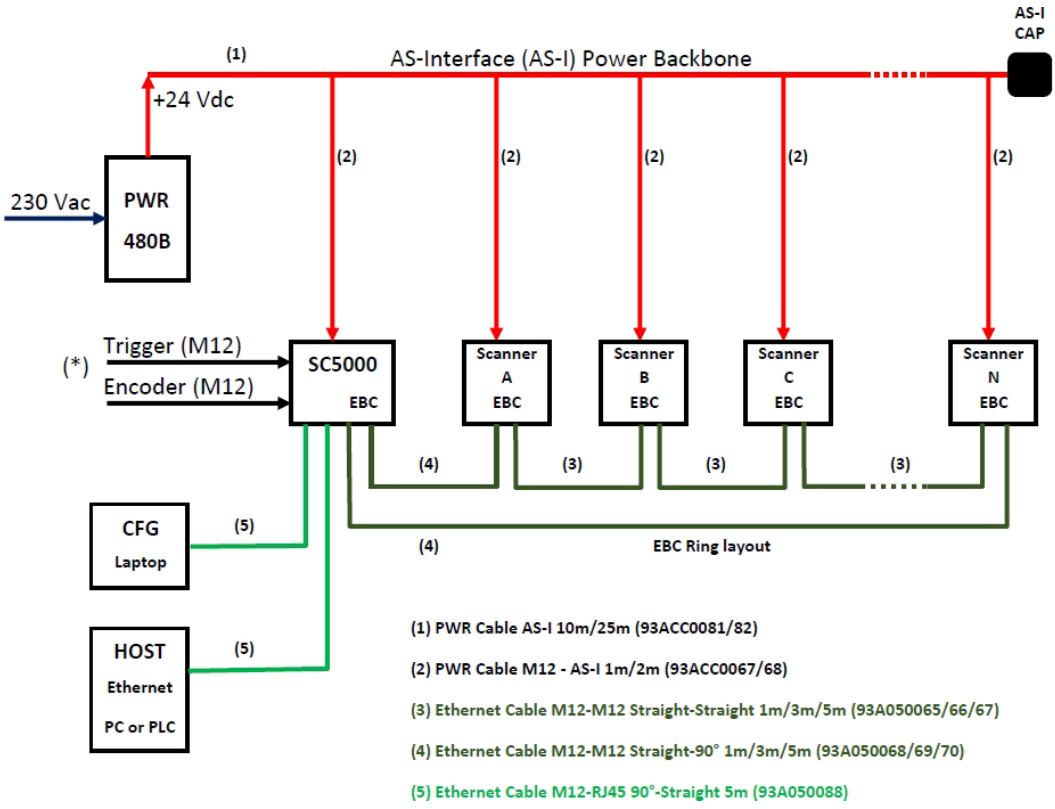


SC5000: Basic Layout: COM to Host


If the Host supports a COM communication type (RS232 or RS422) rather than the Ethernet one, use the CBX510 accessory, as shown below.

The remaining part of the layout (scanners, PWR etc) does not change.

As already mentioned, the CBX510 can also be used to wire the Trigger and Encoder signals (and other I/O) as an alternative to the M12 connection.

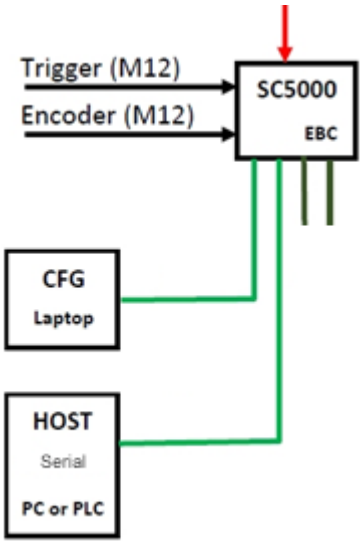


SC5000:BasicLayout:Fieldbus to Host

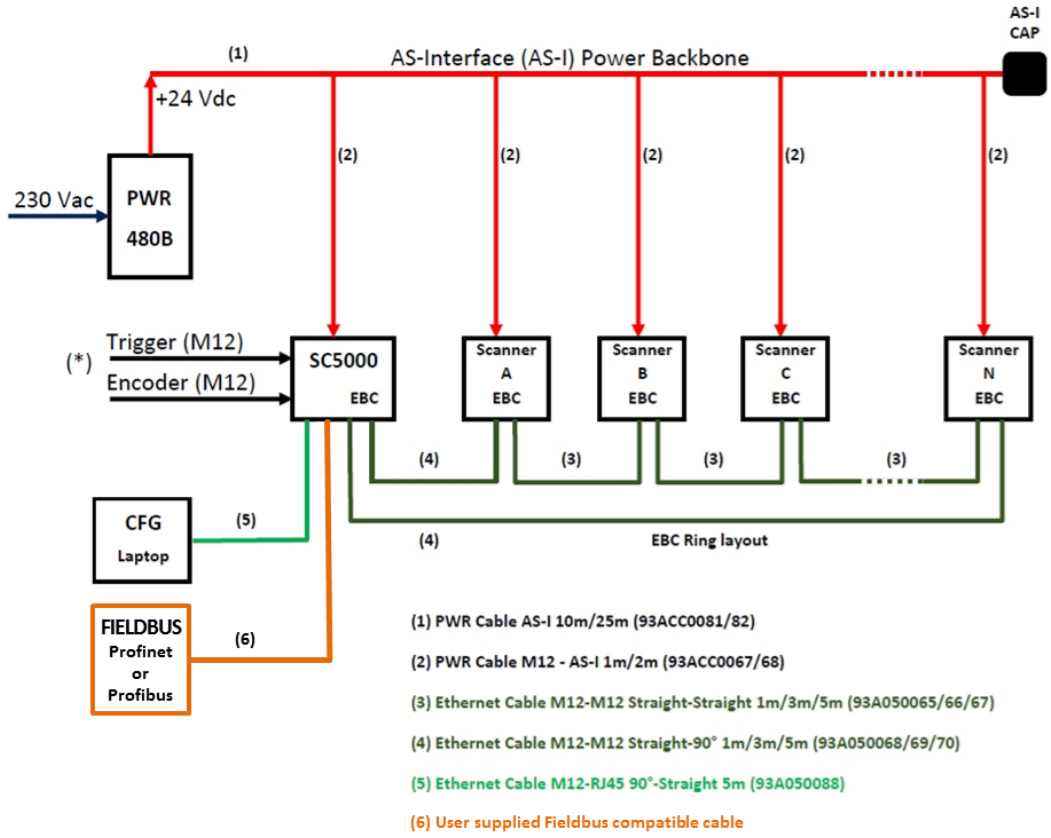


NOTE

In Fieldbus to Host layout, the SC5000 is a dedicated Fieldbus model (Profinet or Profibus).

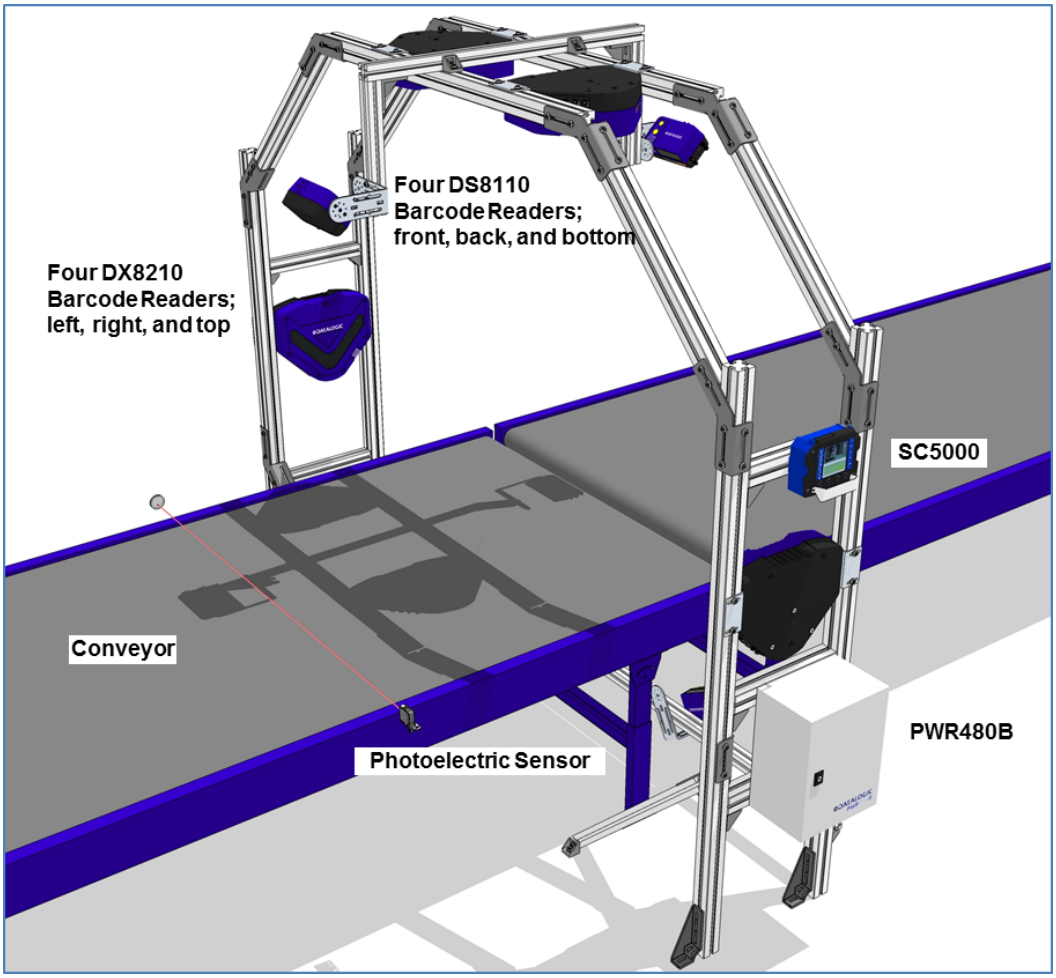

For applications having regular shaped packs, the default settings are sufficient, but for Airport applications working in PackTrack Operating Mode, irregular shaped packs can cause PS signal glitches resulting in false "packs too short" or "packs too close" errors.

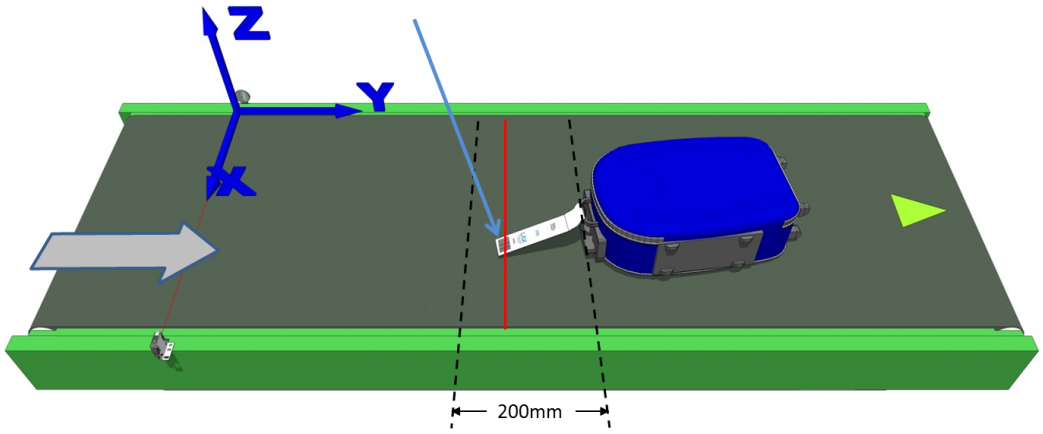

To correct this, set the following Operating Modes parameters: Minimum Distance Between Packs = 200 mm, Minimum Pack Length = 200 mm, Window Dimension = 200 mm.

Redundant System Layout


For large local EBC networks, a redundant system (REDs) can be configured in which two SC5000 Controllers are used together with their respective PWR power supply units. The scanners are distributed equally between the PWR units. In this

case one of the SC5000 Controllers is dedicated as the **Master Working** or active unit while the other functions as a dedicated **Master Protecting** or backup unit.

To set up a redundant system:

1. Connect a system of two SC5000 and at least one DS8110 or DX8210 (a mix of more than one scanner is typical). The network consists of a ring closed at the two SC5000 Controllers.
2. Power up the system.
3. In **e-Genius**, set one of the SC5000 Controllers with a Role of Master Working, and the other with the Role of Master Protecting *(see "Redundant Operation" on page 167)*.
4. In the **e-Genius** menu, navigate to **Modify Settings** | **System Info** and click **Discover Scanners**.

SC5000: Redundant System Layout with Ethernet TCP/IP to Host

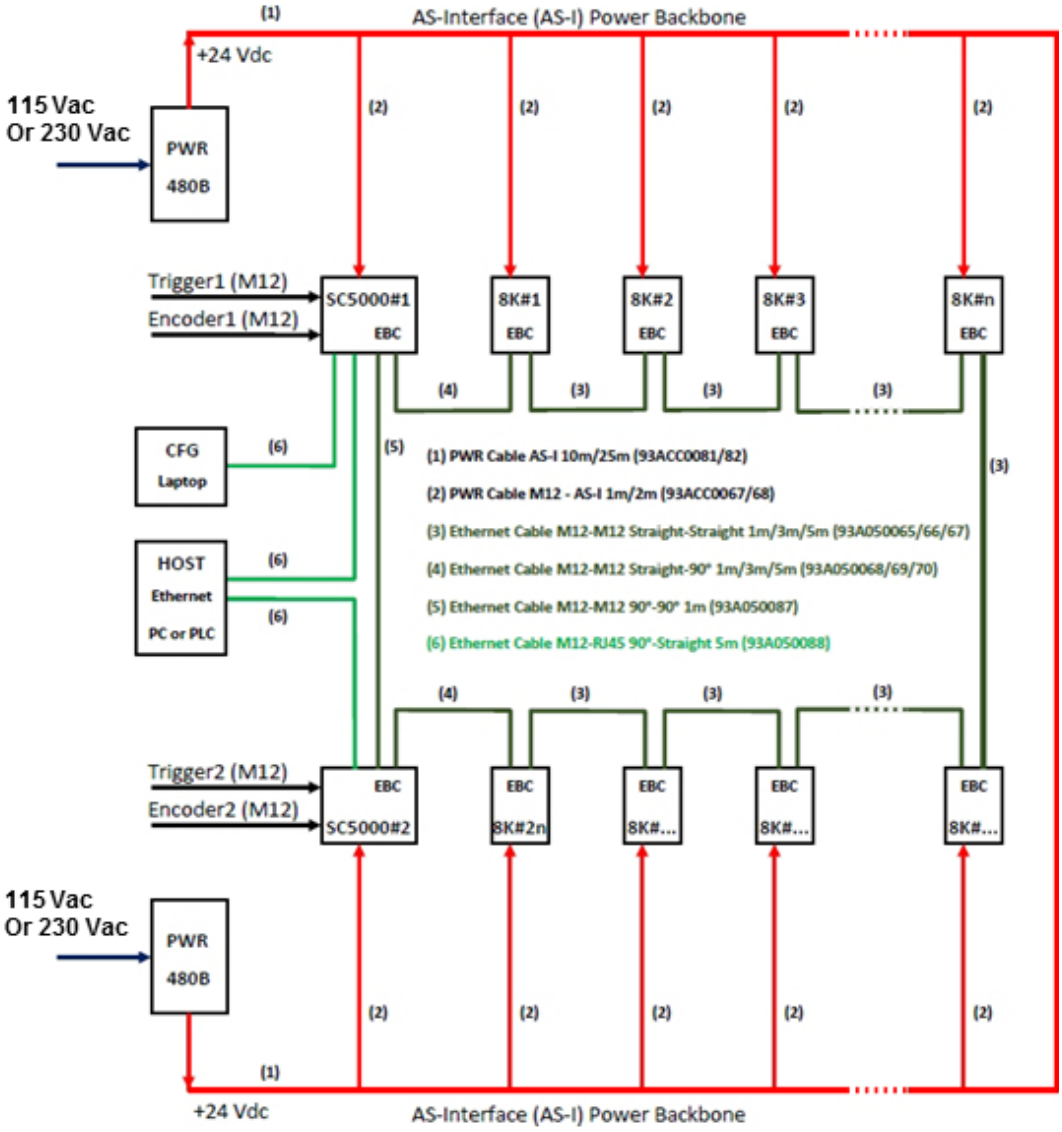


SC5000: Redundancy Layout with Host Supporting Serial COM Communications

If the Host supports serial COM communications (type RS232 or RS422) rather than the Ethernet one, use one CBX510 accessory for each SC5000 controller, as shown below.

The remaining part of the layout (scanners, PWR etc.) does not change.

Moreover, for Redundancy layouts, it is recommended to connect the PWR-480B signals 13/14 (DC OK, normally closed pair), to a free input port in the SC5000; this should be done for each set PWR480B-CBX510-SC5000. In this way each controller can monitor its Power Source cabinet, to signal an alarm in case of a PWR failure.

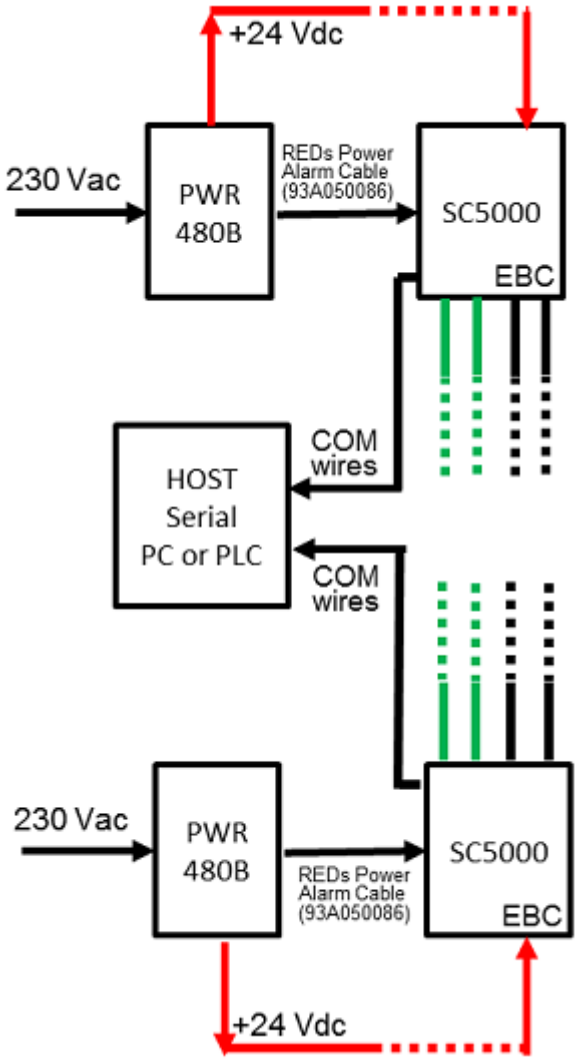



SC5000: Redundancy Layout with Host Supporting a Single Serial Communication Port

If the Host only supports a single COM port (RS232 or RS422) rather than Ethernet, use one CBX510 accessory for each SC5000 controller, as shown below.

The remaining part of the layout (scanners, PWR etc) does not change.

In this case, it is necessary to connect the Host (RS232 or RS422) serial interface to a user supplied relay placed inside one of the PWR-480Bs. The relay is also connected to both SC5000 RS232 or RS422 Main Interfaces; one to the Working Controller (in the normally closed state and the other to the Protecting Controller in the open state. A free output from the SC5000 controller will be configured to command the relay so that any event that causes the Redundancy switch will connect the Active Serial Interface to the Host.

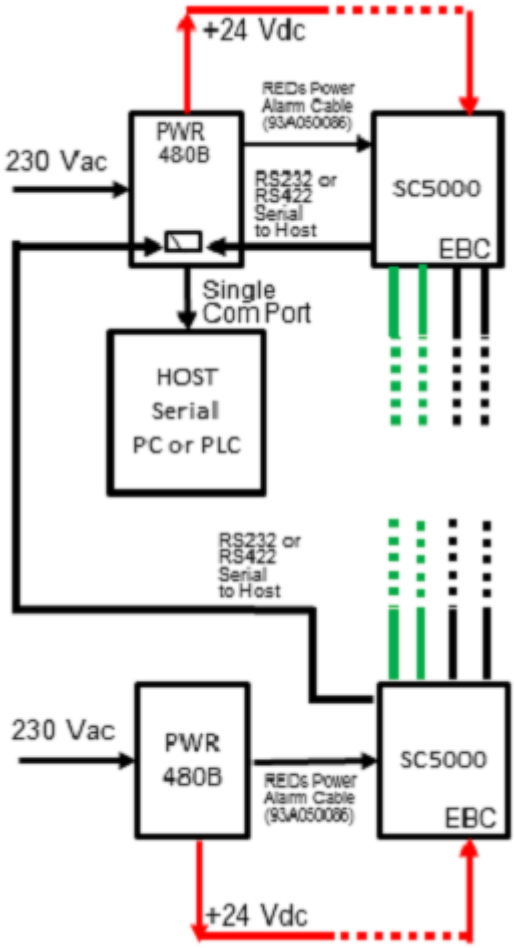

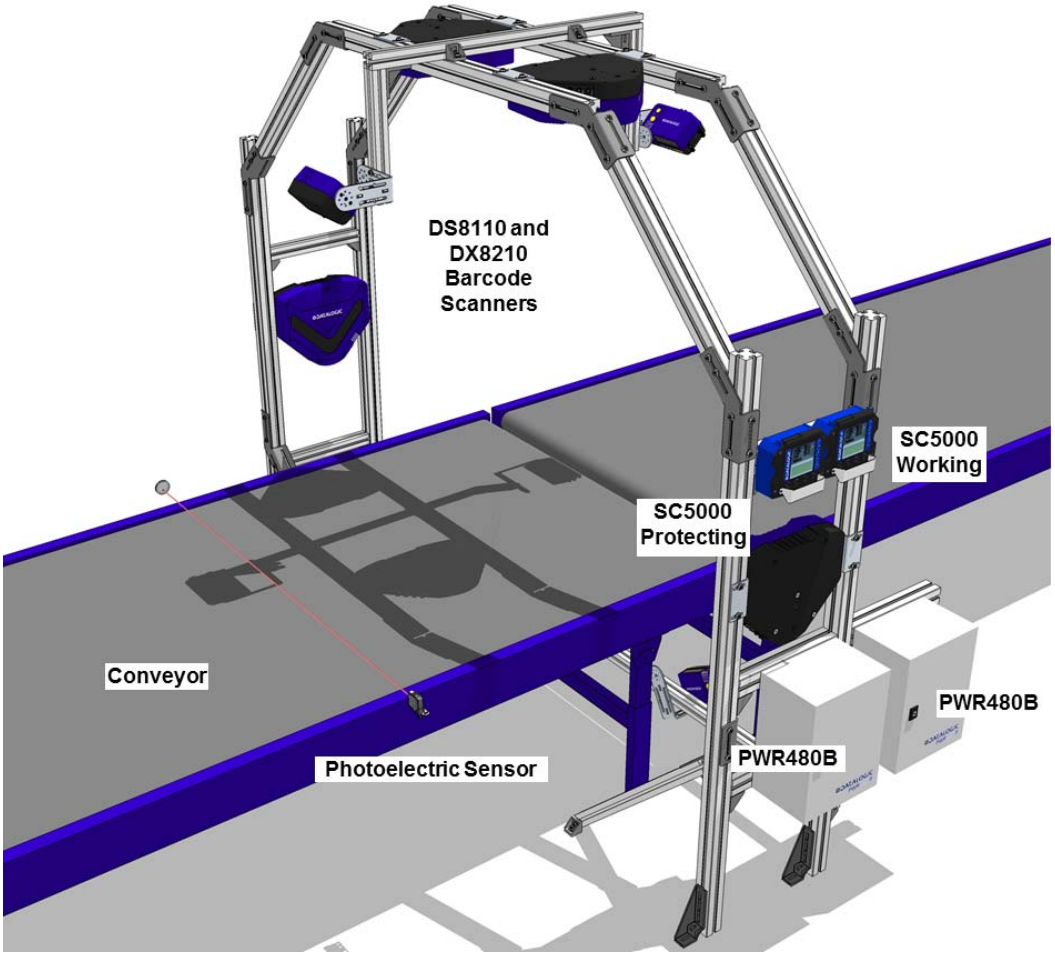

Keypad and Display

The SC5000 display shows different messages according to the following operating modes. Use the SC5000 keypad to scroll through the windows or navigate in the menu.

Symbols	Meaning
UP	Scroll up
DOWN	Scroll down
CLR	Clear
ENT	Enter
MENU	Menu

How to Get to the Boot Loader

To run the SC5000 Boot Loader:

1. Disconnect power from the SC5000.
2. Press and hold the MENU button on the SC5000, and reapply power to the unit. The Boot Loader opens.

How to Default the SC5000

1. Disconnect power from the SC5000.
2. Press and hold the **UP** and **CLR** buttons, and reapply power to the unit. The unit properties are defaulted.

How to Get to the Menu Functions

With the SC5000 powered up, press the buttons **ENTER** and **MENU** at the same time.


Standard Mode

Upon startup, the Diagnostic Mask window is displayed by default. Using the **UP** and **DOWN** arrow keys it is possible to scroll through the following windows:

1. Diagnostic Mask Window
2. Reading Performance Window
3. Reading Mask Window
4. I/O Status Window
5. Conveyor Speed
6. System Info Window
7. Last Code & Read Mask
8. Alarms

Diagnostic Mask Window (Default Window)

This window illustrates the status of each node (of each scanner of the cluster).

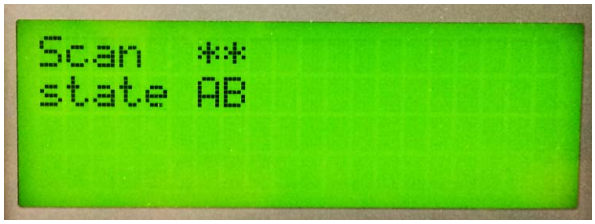

The slave scanners are listed as letters (**A**, **B**, **C**, etc.) [or numbers (**01**, **02**, **03**, etc.) depending on the *System.Global.ClusterInfo.UserInterfaceType* configuration].

Above each scanner position a symbol indicates the scanner status according to the following convention:

–	From the startup the node has not been discovered.
?	At the startup of the system the node has been discovered but it does not answer to the master.
*	The node status is OK.
!	The node returns an error code to the diagnostic Laser Off.
&	The node returns an error code to the diagnostic Motor Off.
%	The node returns a generic error.


Other messages can also be displayed:

Empty scan cluster	No scanner has been discovered within the cluster.
No slave expected	A scanner not expected by the system configuration has been discovered.
Energy Saving	Energy Saving feature has been activated.

Reading Performance Window


This window displays the following data:

- Number of processed parcels
- Number of Good Reads
- Number of No Reads
- Number of Multiple Reads

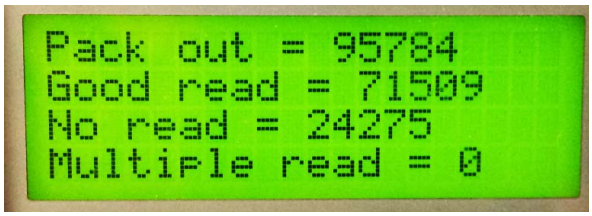

Reading Mask Window

This window indicates the node that performed a reading of the codes enabled on the master.

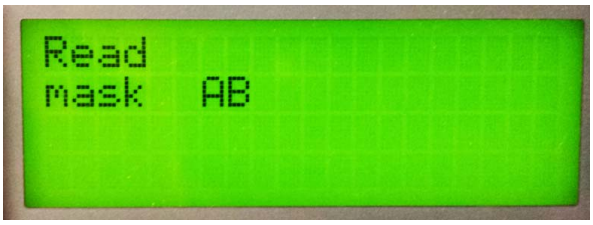

The following indicators are used:

*	The node read a barcode enabled on the master.
<space>	The node read no barcode.

I/O Status Window

This window provides data concerning the digital input/output status.

0 = Low Level Signal

1 = High Level Signal



Conveyor Speed Window

This window provides data concerning the conveyor speed.



System Info Window

This window provides information about the software release.




For the Profibus model the Profibus Node Address is also displayed.

Last Code & Read Mask

This window is available only when enabling the *Last Code & Reading Mask Window* parameter. It displays the following data fields.

- Last read code (shown truncated if longer than 18 digits)
- List of nodes that performed the reading
- Statistics (Good Read Rate, No Read Rate, Multiple Read Rate, Partial Read Rate) calculated on the last 100 codes or in continuous mode depending on the
- *Last Code & Reading Mask Window* parameter selection.

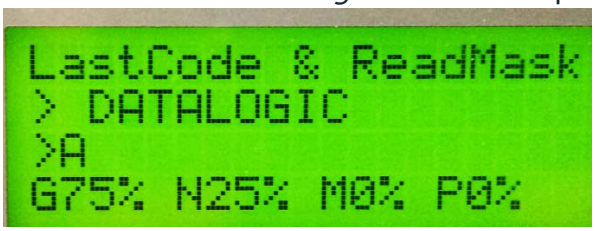

Alarms

Specific diagnostic alarms are available only when they are enabled.



Up to four alarms can be displayed at a time (one per line). They are generated by the network or by the SC5000.

All alarms are ordered according to their priority (failure messages have priority over warning messages).

A failure message causes the Status LED to light up red.

If the Display Warnings as Alarms parameter is enabled, a warning message causes the Status LED to blink red.

Setting the SC5000 Clock to Support Date and Time

The SC5000 contains a battery backed up real-time clock. The clock can be set using the SC5000 display, so the date and time can be included in a host message.

To set the SC5000 clock, follow these steps:

1. Click **MENU** and **ENT** simultaneously to access the Menu of the SC5000 display.
2. Click **ENT** to select **SETUP** and access Setup options.



3. Click **DOWN** to proceed to the Clock option.

There are two Clock options:

- **Disp Clock** – displays the clock date and time
- **Set Clock** – allows you to set the clock date and time



4. Click **DOWN** to proceed to Set Clock and press **ENT**.

5. To set the clock, move to each number using **ENT** to move to the right and **CLR** to move to the left. The **UP** and **DOWN** buttons change the values. Proceed to the correct value for each digit.



6. When you have entered the correct date and time, proceed to the rightmost digit and click **ENT**. The following prompt appears.



7. If the date and time are valid, click ENT to save. If the date or time is invalid, the cursor will jump back to the invalid value for correction.

8. To exit the setup options, click **CLR.**

Redundancy Mode

When working in a redundant system (REDs), the SC5000 displays different windows according to its redundancy role (refer to the SC5000 Help On-Line for further details).

SC5000 Active Controller Window

The SC5000 working as active controller displays the diagnostic mask window, as if it is working in a single master network.

SC5000 Standby Controller Window

This window is displayed on the SC5000 working as standby controller. It illustrates the topology redundancy role of the controller:

“Protecting/Standby” or “Working/Standby“

Menu Mode

For security purposes, the menu mode is entered by pressing the Enter and Menu keys at the same time. To navigate in the menus the keypad keys are used as follows:

- Press Enter to select an item or enter a branch level.
- Press Clear to exit an item without saving or return to the previous branch level.
- Press the Up or Down arrow keys to scroll through a branch list.

It is possible to access the System menu, Setup parameters menu:

Menu	Branch	Branch	Note
System			
	Info	Shows the System Info Window	
	Reset	Reset the system	(asks for confirmation)
	Restore	Complete Restore procedure	(asks for confirmation)
	Backup	Complete Backup system configuration	(asks for confirmation)
	Mib Dist	Distribute the MIB on the tunnel	(asks for confirmation)
	SW Dis	Distribute the SW on the tunnel	

The Backup and Restore procedures can also be performed by GUI. See *"Utilities / Backup or Restore" on page 168*

Menu	Branch	Branch	Note
Setup			
	Time		Set system time: Up & Down to change values, Enter to change fields, at last field Enter exits saving new values. Not yet supported
	Date		Set system date: Up & Down to change values, Enter to change fields, at last field Enter exits saving new values. Not yet supported
	Ethernet		Ethernet interface
		Host IP	Set IP Address of the Host Eth port
		Cfg IP	Set IP Address of the Cfg Eth port
		GW address	Set IP address of the gateway for the Host port
		Host Mask	Set the netmask of the Host Eth port.
		Cfg Mask	Set the netmask of the CfgtEth port.
		Mac address	Show the mac address.

	Profibus addr		Profibus node address (only Profibus models)
	SD Card		
		Format	Format the SD card Disk
		Info	Shows SD capacity, free and used space
	Statistics	Reset Statistics	Resets Statistical Counters
REDS			
	Working		Force SC5000 topology role to Working
	Protecting		Force SC5000 topology role to Protecting
	Active		Force SC5000 redundancy role to Active. This item is enabled only if the SC5000 has redundancy role == StandBy
	Standby		Force SC5000 redundancy role to Standby. This item is enabled only if the SC5000 has redundancy role == Active
Error Messages See 'Error Codes and Resolutions" on page 203.			

Chapter 3
E-Genius

The SC5000 Controller provides fully automated, industrial quality control for Datalogic linear and omnidirectional barcode identification systems. The user interface provides an easy-to-use series of configuration and diagnostics features that enable you to set up your Scanning System.

Getting Started

The **SC5000 Controller is**designed for ease-of-setup. **e-Genius** is a browser-based application you will use to define operating parameters, monitor read quality, construct output messages, and view diagnostics. **e-Genius** enables you to easily configure, fine-tune, and monitor your scanning system operation.

Prerequisites

Before configuring your SC5000 or you will need the following:

Computer	Laptop
Browser	Internet Explorer 11 (or later) Firefox 30 (or later) Chrome 36 (or later)

Starting e-Genius

To access e-Genius:




Before starting up or testing a scanner, it must be connected to a CBX510 Connection Box or an SC5000 Controller depending on the system configuration.

1. Connect your computer to the SC5000 CFG port using either ETH CABLE M12-RJ45 5M 90°-RJ45 or CBL-1534-0.2 ADAPT.CABLE ETH M12-TO-RJ45F. If the CFG port is taken, the HOST port can be used.
2. Turn on your computer.
3. If you are connecting to a stand-alone unit (not connected to an in-house network), you must configure your PC's IP Address to be in the same network as the unit's IP Address.

4. Open a web browser and enter the IP address for the SC5000 Controller. If the correct IP address is entered, the **e-Genius** Log On window will appear.


The default setup IP address for all **SC5000 Controllers** is: 192.168.3.100 (CFG) and 172.27.101.220 (Host).

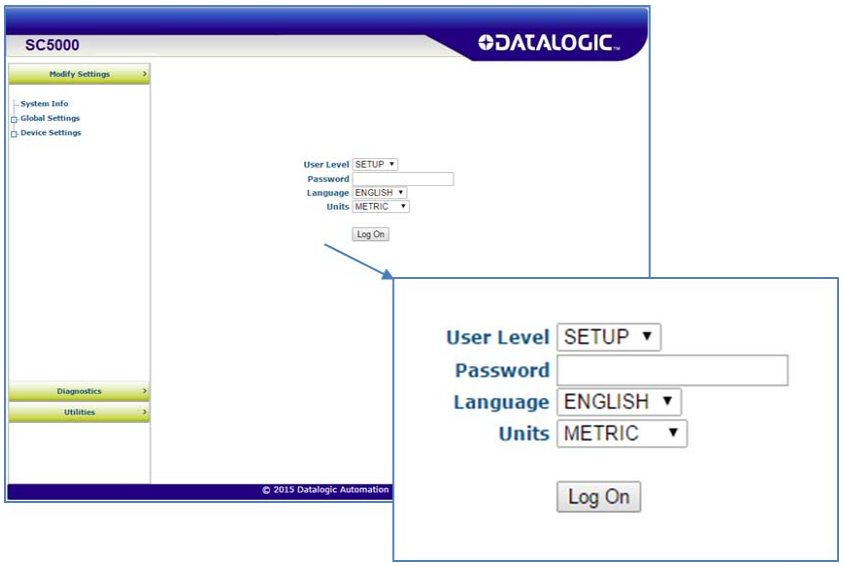

5. Enter the **Password** (default is DLA) for your system in the fields provided.
6. Select a language from those available in the **Language** drop-down list.
7. Select **METRIC** or **IMPERIAL** from the **Units** drop-down list.
8. Click **Log On**.

If the password is valid, the application enables all functions available to the user and displays the main window.

If the password is not valid, the application displays a results box with the message, **"Incorrect Password."** Click **OK** to return to the **Log On** window and enter the correct user name and password. If you don't know the password, query your system manager.

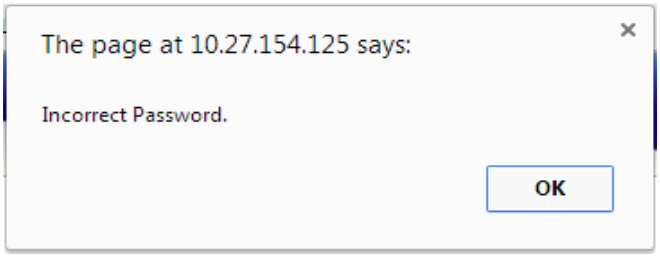


Monitor Mode


If you do not have a valid password and simply wish to view the settings, diagnostics and utilities of the SC5000, you can use Monitor mode.

To use Monitor Mode:

1. At the default IP Address, Select **User Level** > **Monitor Mode**.

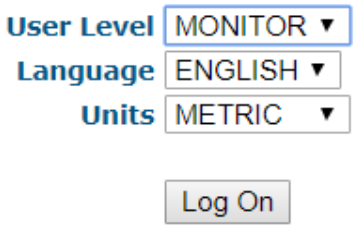

2. Click Log On and you will access the e-Genius application in Monitor Mode.

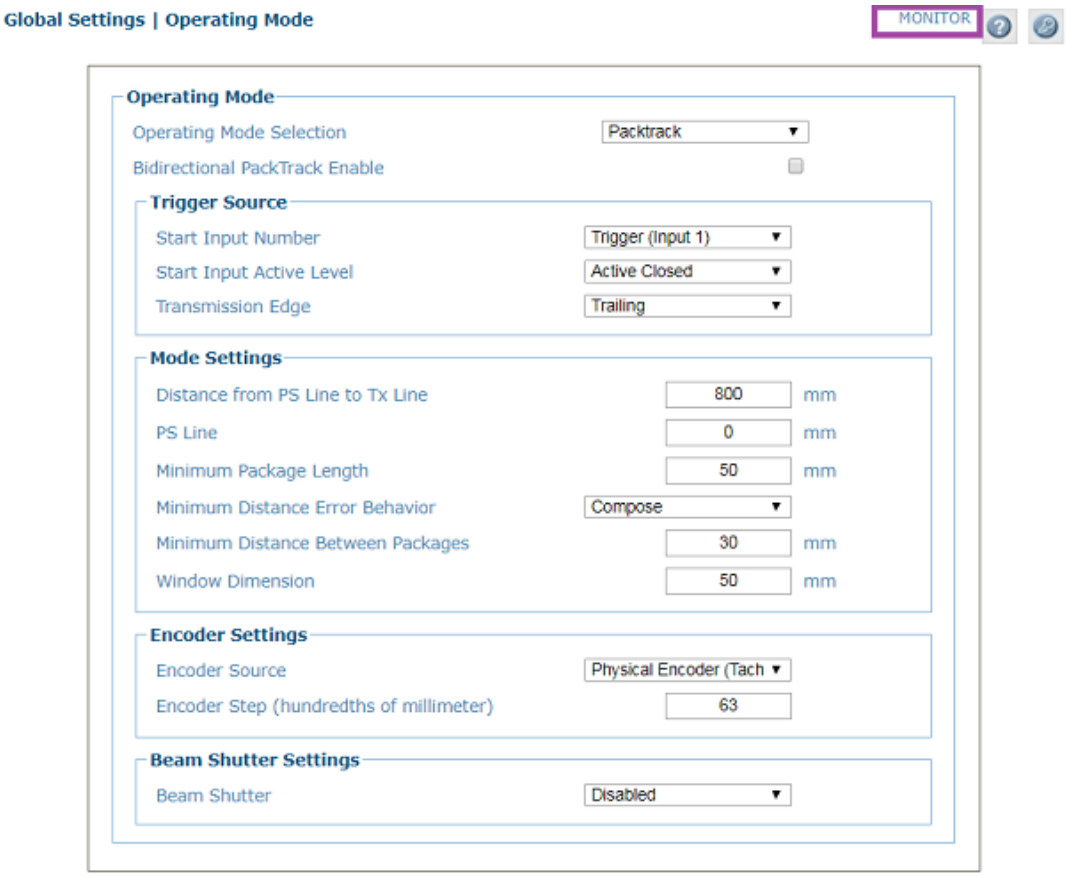

To log out of e-Genius:

Click  at the upper right corner of the **e-Genius** window to Log Out. When logged out, the Log On window will appear.

e-Genius Basics

e-Genius Menu Tree

The functions that you can select are displayed in a menu tree on the left-hand side of the reader/controller **e-Genius**. The function list is organized much like the hierarchy of a file system, where you can expand items that are preceded by a box ( ) to further sub-levels until you find a function of interest.


Sub-levels appear indented below the items from which they are expanded. Clicking the box again will collapse that branch of the menu. You can expand no further when an item is not preceded by a box.

The reader/controller **e-Genius** menu tree appears with no items expanded. Click the folders to display the active window for the setup function and/or expand the folders to view any additional setup features.

Entering Text Using the Text Entry Tool

In cases where text needs to be entered to create message headers, trailer, custom messages, or for other reasons, the **Text Entry Tool** pencil icon " " will be displayed.

Click to open the **Text Entry Tool.**

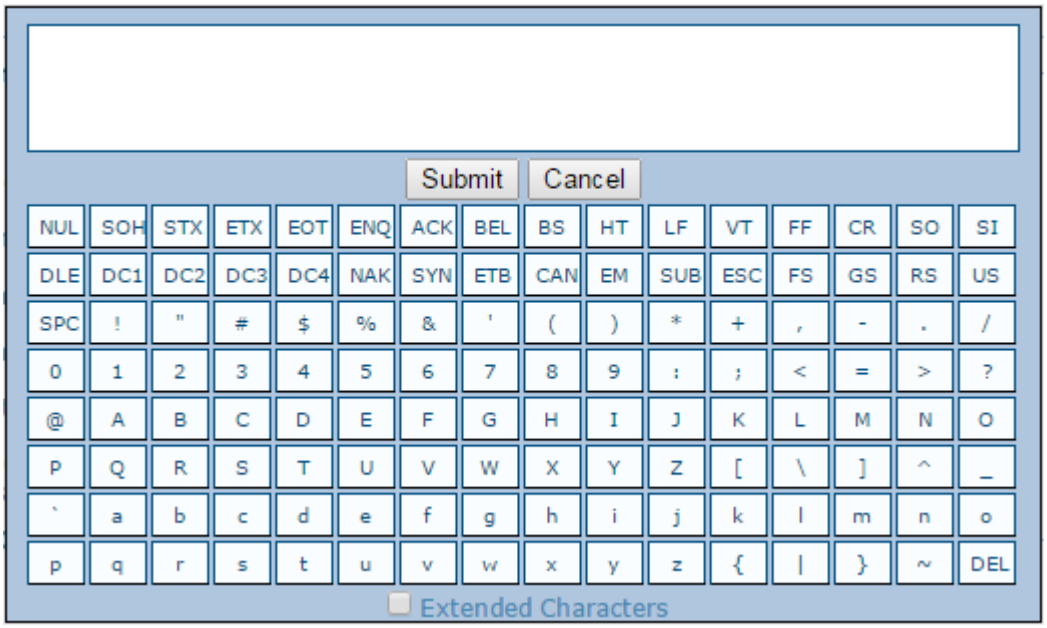

NOTE

The text Entry Tool is needed to enter unprintable/untypable characters. For example, <CR> is a single character presented as a string for easier reading. The character must be entered with the text entry tool, if typed normally it will be recognized as a string and not as a single character.

You can enter text in the text field by typing, or click on the character buttons to create your message. Select the **Extended Characters** check box to reveal a new set of control characters.

Click **Submit** to save your text to the origin window text field, or click **Cancel** to return to original window without transferring text.

Update and Reset Buttons

The **Update All**, **Reset All**, and **Reset Page** buttons provide the following functions:

- **Update All**: Click to save all pending parameter changes (across active windows)
- **Reset All**: Click to revert all pending parameter changes (across active windows) to their last saved values
- **Reset Page**: Click to revert pending parameter changes on the current page to their last saved values

Disabled Check Boxes

In some sections of the SC5000 software a check box may appear with a gray box surrounding it. The gray box indicates that the option is not available for the configuration you have defined.




Getting Help

e-Genius provides complete online help.

To access the complete help system:

Select **Utilities** | **Help** in the **e-Genius** menu tree. The help **Welcome** window appears. The **Welcome** page provides important product information as well as three ways to find specific help information: **Contents, Index,** and **Search.**

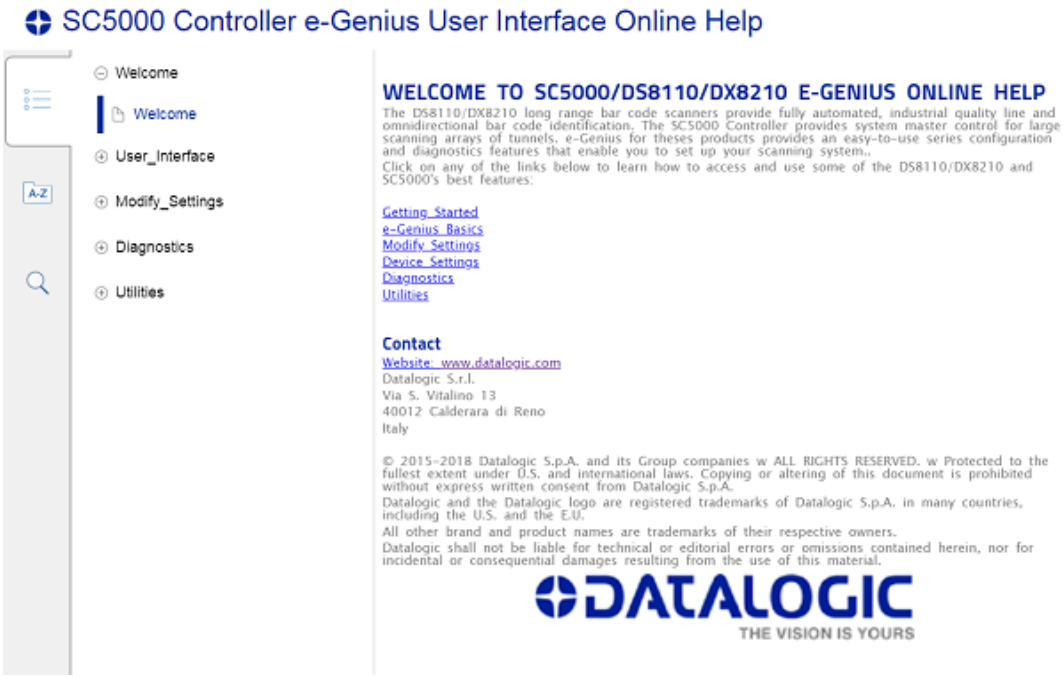

To display contextual help for a current window:

1. Click the Help Icon  displayed at the top right of the screen. A help window appears, providing you with information for that specific page.


2. Click the Table of Contents or Search options on the left side of the help window to access Contents, Index, and Search options.

System Information

Use **System Info** to identify and name the scanning system (whether it includes one scanner or an array), indicate Master or Standalone systems, discover the scanners included in the system, and distribute software from the Master scanner to Slave scanners.

To view and edit system information:

1. In the menu under **Modify Settings**, click System Info. The System Info window opens.

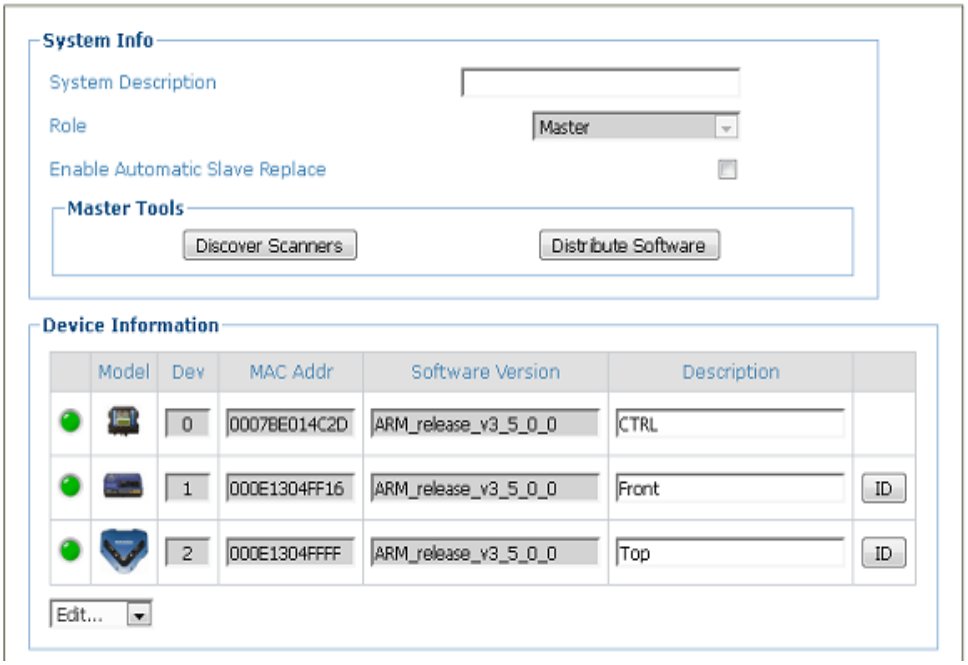

2. Enter the appropriate information in the form as described below:

System Info

System Description

Enter a name to identify this scanning system in the System Description text field.

Role

Select Standalone or Master from the drop-down list. Standalone (not controllers) indicates a scan point with a single barcode scanner. Master indicates that the system is made up of more than one barcode scanner in a master and slave configuration.

NOTE **The SC5000 Controller will always be shown as Master and cannot be changed.**

Enable Automatic Slave Replace

There are two ways to replace a defective scanner:

If the check box is not selected: The replacement will be done only by pressing the RESTORE key on the scanner or using the Edit drop-down.


If the check box is selected: The replacement will be completely automatic. This will work also as Hot-Automatic-Replacement without turning the system power off and on.

Master Tools

These options are shown if Master is selected and is the default option for the SC5000.

Discover Scanners

Click **Discover Scanners** to automatically find all of the scanners in an array. The discovered scanners will be listed in the Device Information portion of the window. This step is only done during initial configuration and is not a troubleshooting option.

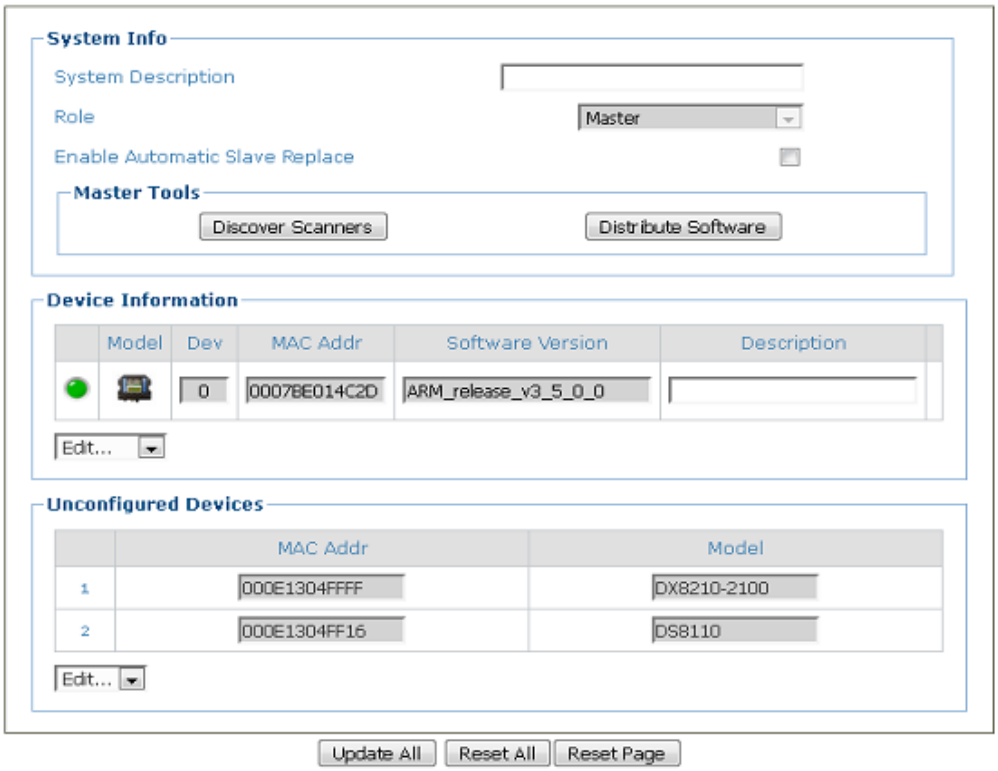

Distribute Software

Click **Distribute Software** to send the current software residing on the master scanner to all of the slave scanners listed in the Device Information section of the window.

Device Information

Status

Green = No errors and ready to read

Gray = Unit not connected (unit not seen by master)

Red = Error. If you click on the red circle it will take you to the status viewer page for more info on the error

Model

Displays an image of the scanner/controller model.

Dev

Displays the system designation for the device.

MAC Address

Displays the MAC Address (Media Access Control Address) for the device.

Software version

Displays the device installed software version.

Description

Enter a user-defined description of the device.

ID

Click ID to visually identify a scanner in an array/tunnel. When clicked, all the scanner lasers will turn off except for the selected scanner, whose laser will blink for 20 seconds.

Edit

Select to Remove, Reassign, Add, or Replace from the Edit drop-down list to complete the following actions:

Remove: When selected, you can select the scanner to remove from the Dev/MAC Address drop-down list. Click OK to remove the selected scanner from the system.

Reassign: When selected, the Dev column of the selected slave scanner (selected with ID) presents a drop-down list of Dev numbers. Select a different number to reassign the scanner.




These options are for units not in the cluster, that have been discovered.

Add: This is an option under the Edit drop-down list in the Unconfigured Devices section of the screen. Click **OK** to add the selected device to the system.

Replace: This is an option under the Edit drop-down list in the Unconfigured Devices section of the screen. When selected, you can select from a list of slave scanners (Those with a gray indicator, meaning the unit is not connected) in the system using MAC Address and Dev drop-down lists. Click **OK** to replace the selected scanner with the Unconfigured Device.

Hybrid Devices

A Hybrid System is one in which the SC5000 communicates with another device, generally an AV7000 Camera, DM3610 Dimensioner, scale, or Matrix device. These are considered the Hybrid Devices and when your SC5000 is connected to them, they will appear in the Hybrid Devices section of the System Information window. Such a system is described as hybrid because it combines messages from a subsystem and the SC5000 system into one message communicated to the host.

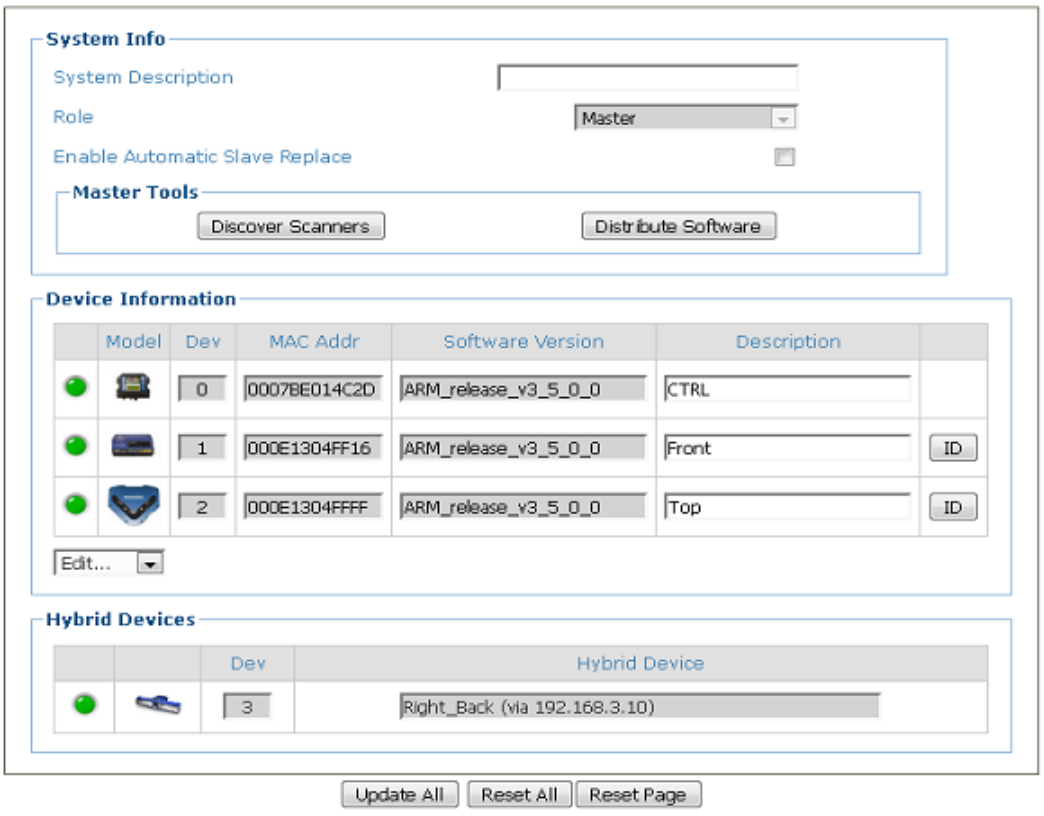

Status

Green = No errors and ready to read

Gray = Unit not connected (unit not seen by master)

Red = Error. If you click on the red circle it will take you to the status viewer page for more info on the error

Model

Displays an image of the scanner/controller model.

Dev

Displays the system designation for the device.

Hybrid Device

Description and IP Address for the Hybrid Device

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click Reset Page to revert to the previous saved values on the current page.

Modify Settings

Use the Modify Settings Menu selections during initial setup to configure your scanning system. If necessary, you can later make modifications to the configuration using the same menu selections.

"System Information" on page 46


Global Settings

- "Operating Mode" on page 51
- "Barcode Settings Table" on page 67
- "Barcode Configuration" on page 74
- "Serial Ports" on page 101
  - "Serial Ports | Main Port" on page 104
  - "Aux Serial Port" on page 105
- "Ethernet" on page 107
  - "Ethernet | Line Settings" on page 108
  - "Ethernet | User Sockets" on page 110
  - "Ethernet | Ethernet_IP" on page 114
  - "Ethernet | WebSentinel" on page 118
- "Fieldbus" on page 120
- "Messaging" on page 125
  - "Messaging | Message Format" on page 126
  - "Messaging | Message Builder" on page 138
  - "Messaging | Statistics" on page 144
  - "Messaging | Protocol Index" on page 146
  - "Messaging | Pass-Thru" on page 150
  - "Messaging | Diagnostics Messages" on page 152
- "Digital I/O" on page 155
- "Diagnostics" on page 158
- "Energy Saving" on page 162
- "HMI Settings" on page 166
- "Redundant Operation" on page 167
- "Hybrid Configuration" on page 169

Operating Mode


Use Operating Mode to select an operating mode and configure that mode's related parameters. The three operating modes available are **On Line**, **Continuous**, and **PackTrack,** and the available settings differ depending on the operating mode selected.

Online: In the Online operating mode, the reading phase is defined as the time between a Phase ON and Phase OFF event. The Phase events can be signals coming from one or two external presence sensors connected to the scanner inputs or serial start/stop strings sent from the host over the serial interface or Ethernet input.

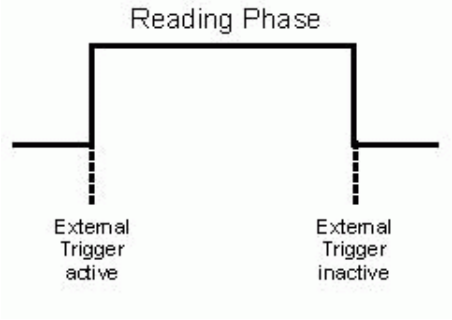


Continuous: In the Continuous operating mode the reading phase is always active and allows the reading of two or more codes when placed along the same scan line. Code transmission is identical to the other operating modes except that there is no transmission on the serial port in case of a No Read condition.

PackTrack: Datalogic's patented parcel tracking system which improves the reading features in omnidirectional stations. In particular, PackTrack manages 6-sided reading systems when it is impossible to detect the real position of the code on the parcel. The technology allows for smaller gaps between packages and overcomes the need for additional accessories. It can also be used in bidirectional systems, in which you may want to read codes going forward or reverse.

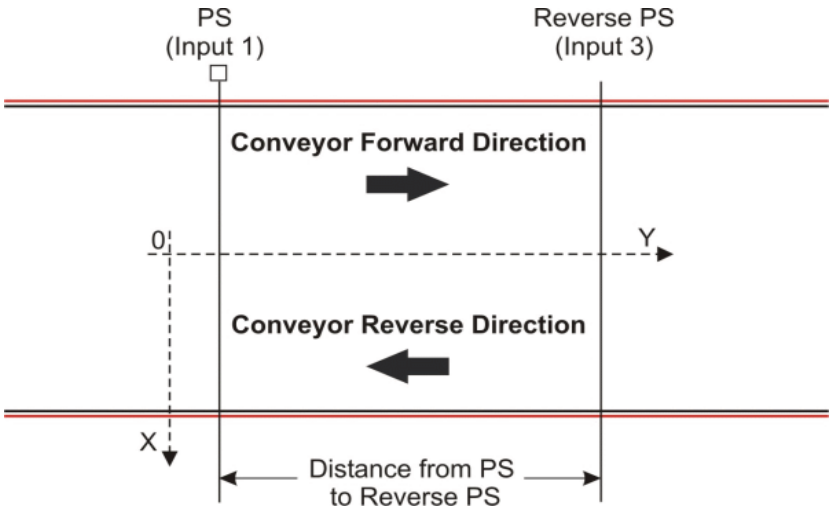

To edit the system Operating Mode:

1. In the menu under **Modify Settings**, navigate to **Global Settings | Operating Mode**. The **Operating Mode** window opens.

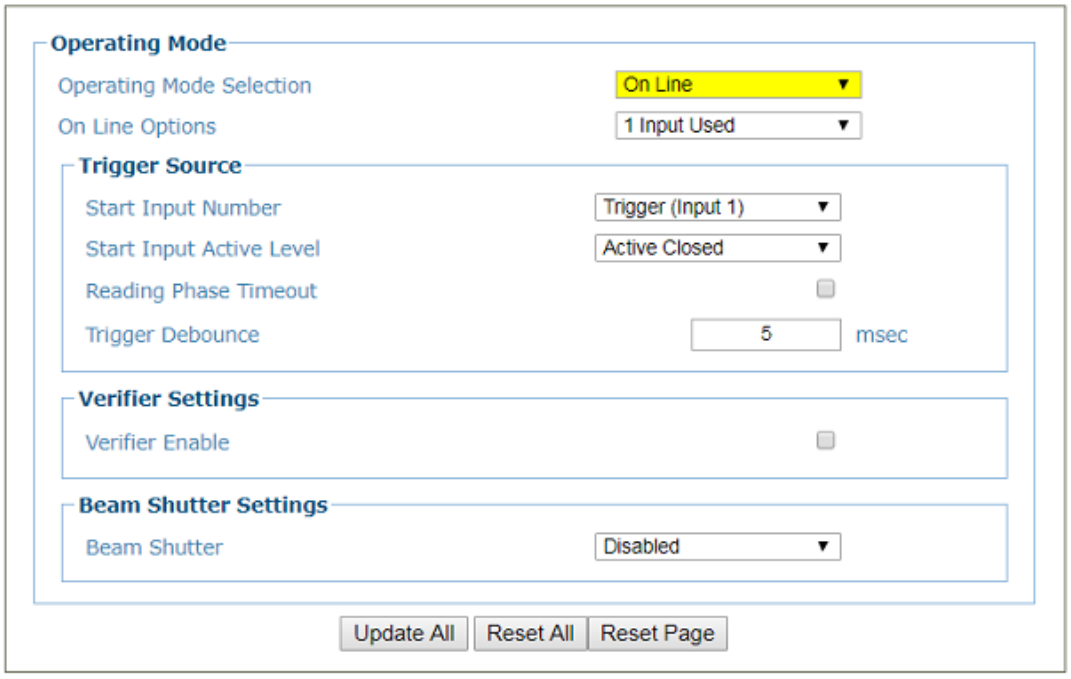


2. Enter the appropriate information in the form as described below:

Operating Mode

Select **On Line, Continuous**, or **PackTrack** from the Operating Mode Selection drop-down list.

ONLINE MODE

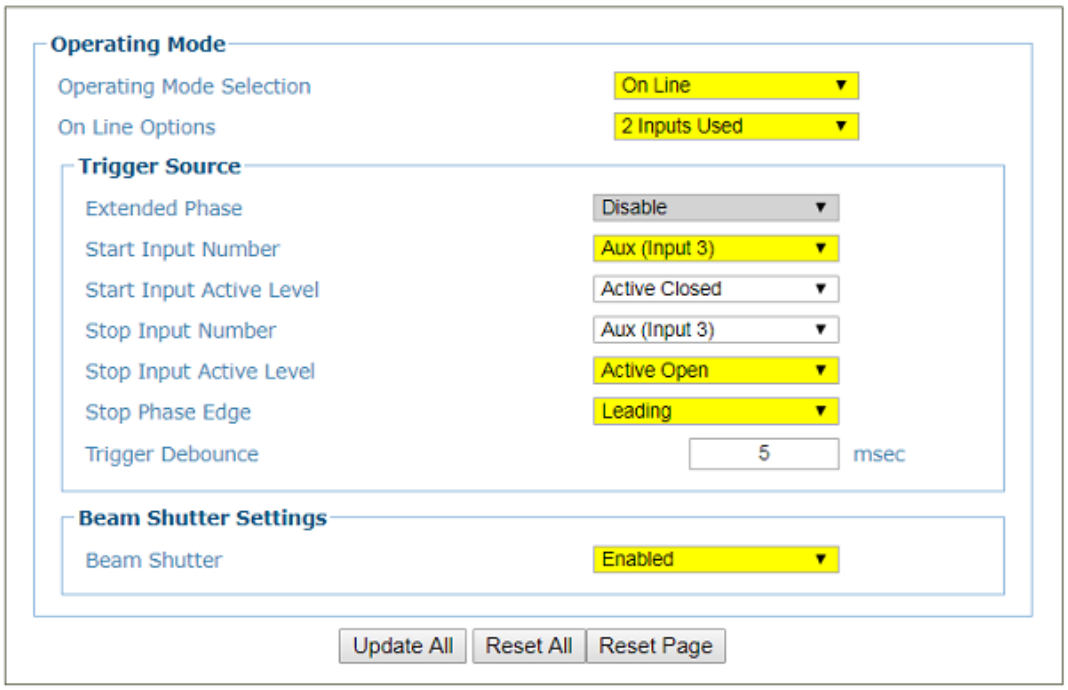

On Line Options

Select **1 Input Used**, **2 Inputs Used**, or **Serial/Network** from the On Line Options drop-down list. Each selection has a different set of parameters as described below.

1 Input Used

The reading phase takes place during the active phase of the presence sensor, when the scanner tries to acquire and correctly decode the code. If the operation is successful, the barcode characters are transmitted on the serial interface or Ethernet input in the format defined by the current configuration and the right output event is raised at the end of the photoelectric sensor's active phase. If a

code cannot be decoded, a no read message is sent and the no read event is raised at the end of the photoelectric sensor's active phase.

2 Inputs Used

The reading phase is defined by 2 inputs. It starts when the Start Input is activated and stops when the Stop Input is deactivated (unless the Extended Phase is enabled).


Serial/ Network

In Serial/On-Line mode the reading phase starts when the Serial Start_String is received on the serial interface and ends when the Serial Stop String is received or when a programmed Reading Phase Timeout expires.

If decoding is correct, the data is transmitted on the serial port as defined by the configuration. The output line selected for the right output event is activated and the relative message is transmitted on the serial interface or Ethernet input.

In case of a bad read, a no read message is transmitted on the serial interface. The output line selected for the no read event is activated and the relative message is transmitted on the serial interface or Ethernet input.

Trigger Source: 1 Input Used

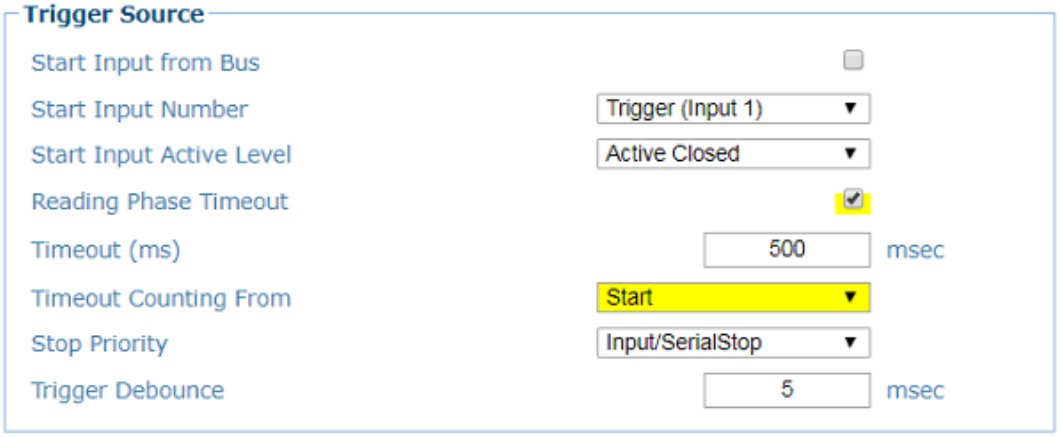



The Start Input from Bus parameter is only available for Fieldbus Hosts.

Start Input from Bus

if checked, allows the Fieldbus Master to drive the Reading Phase. For Profinet or Profibus interfaces, it allows the Fieldbus Master to drive the reading phase via bit 7 in Byte 0 (LSB) of the Output Area. For EtherNet/IP, it allows the EtherNet/IP Client to drive the reading phase via bit 7 in Byte OutputBits of the DL_OutputStruct.

Start Input Number

Select the Input Number from the selections available in the drop-down list. Options are; Trigger (Input 1), Aux (Input 3), or I/O 4 (Input 4)

This option defines the numbered input that will start the trigger cycle.

Start Input Active Level

Select Active Open or Active Closed from the drop-down list.

Active Open: The input is active when there is no current flowing through IN pins. The input from the trigger source is normally closed. The scanner goes into trigger mode when the input source is opened.

Active Closed: The input is active when current flows through IN pins. The input from the trigger source is normally opened. The scanner goes into trigger mode when the input source is closed.

Reading Phase Timeout

Select the check box to define a timeout for the On Line Serial mode and the On Line 1 Input mode.

Timeout (ms)

Enter a timeout in milliseconds (from 40 to 15000 ms) in the field provided. The Timeout represents the period of time for the reading phase.

Timeout Counting From

Select Start or Stop from the drop-down list.

When Start is selected, the Timeout used to determine the reading phase will begin from the Start Input or Serial Start String (normal operation)

When Stop is selected, the Timeout used to determine the reading phase will begin from the Stop Input or Serial Stop String (effectively extending the reading phase).

Stop Priority

Available only if Timeout Counting From is Start. Select Input/SerialStop or Always Timeout.

Trigger Debounce

Enter a value in milliseconds that specifies the debounce time of the trigger input signal.

This amount of time is the minimum amount of time in milliseconds the photo detector should be blocked for the SC5000 to consider an object to scan, reducing false triggers. A typical value is 5 msec. This value must be significantly less than the amount of time from the trigger to read line.

Verifier Settings



Verifier Enable

Select the check box to enable the Code Verifier operating mode.

Verifier Code

Click to activate the Text Entry Tool and create the string text used as the match code to the decoded codes. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Store Input

Select an option from the drop-down list to define the number of the input used to automatically store the verifier code. This input must be activated before the reading phase starts, the verifier code must be read and then after the end of the reading phase the input must be deactivated.

Active Level

Select Active Open or Active Closed from the drop-down list to choose the active state of the input.

Active Open: The input is active when there is no current flowing through IN pins. The input from the verify mode source is normally closed. The scanner goes into trigger mode when the input source is opened.

Active Closed: The input is active when current flows through IN pins. The input from the verify mode source is normally opened. The scanner goes into trigger mode when the input source is closed.

Wrong Code Tx

Select the check box to enable the transmission of the Wrong Code (Non-Valid Code).


Wrong String Tx

Select the check box to enable the transmission of the Wrong String (Non-Valid String) message. This message will be sent if code data does not match verified code entered.

Wrong String

Click to activate the Text Entry Tool and enter the string text to be used when the wrong code is detected.

Trigger Source: 2 Inputs Used

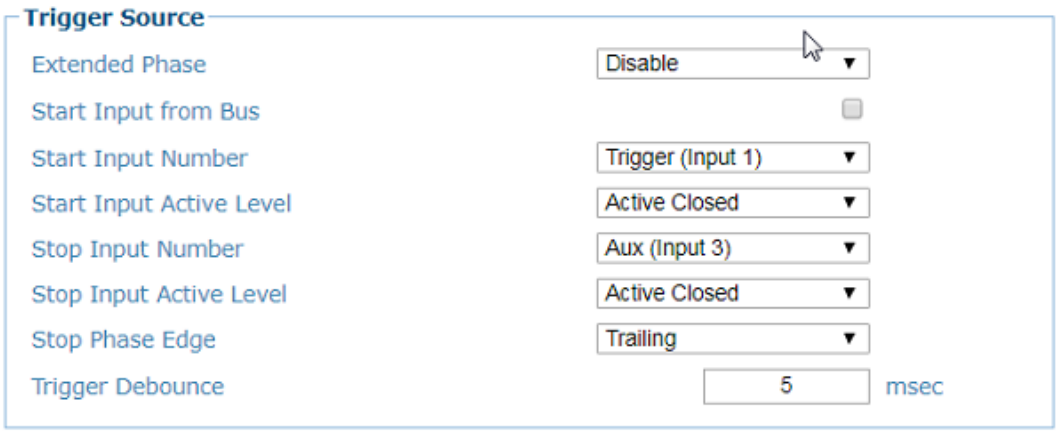

The reading phase is defined by 2 inputs. It starts when the **Start Input** is activated and stops when the **Stop Input** is deactivated (unless the Extended Phase is enabled).

Extended Phase

Available only for the On Line/2 Inputs option. It allows the Stop Input to end the reading phase only if the Start Input is also deactivated. Select Disable or Enable from the drop-down.

Start Input from Bus

if checked, allows the Fieldbus Master to drive the Reading Phase. For Profinet or Profibus interfaces, it allows the Fieldbus Master to drive the reading phase via bit 7 in Byte 0 (LSB) of the Output Area. For EtherNet/IP, it allows the EtherNet/IP Client to drive the reading phase via bit 7 in Byte OutputBits of the DL_OutputStruct.

Start Input Number

Select the Input Number from the selections available in the drop-down list. Options are; Trigger (Input 1), Aux (Input 3), or I/O 4 (Input 4)

This option defines the numbered input that will start the trigger cycle.

Start Input Active Level

Select Active Open or Active Closed from the drop-down list.

Active Open: The input is active when there is no current flowing through IN pins. The input from the trigger source is normally closed. The scanner goes into trigger mode when the input source is opened.

Active Closed: The input is active when current flows through IN pins. The input from the trigger source is normally opened. The scanner goes into trigger mode when the input source is closed.

Stop Input Number

Select the Input Number from the selections available in the drop-down list. Options are; Trigger (Input 1), Aux (Input 3), or I/O 4 (Input 4)

This option defines the numbered input that will stop the trigger cycle.

Stop Input Active Level

Select Active Open or Active Closed from the drop-down list to define the active state of the input.

Active Open: The input is active when there is no current flowing through IN pins. The input from the trigger source is normally closed. The scanner goes into trigger mode when the input source is opened.

Active Closed: The input is active when current flows through IN pins. The input from the trigger source is normally opened. The scanner goes into trigger mode when the input source is closed.

Stop Phase Edge

Select Trailing or Leading from the drop-down list to define the signal edge of the stop input used by the scanner as reference for ending the reading phase:

Trailing: The reading phase ends when the pack has completely passed by the stop input.


Leading: The reading phase ends as soon as the stop input detects the front edge of the package.

Trigger Debounce

Enter a value in milliseconds that specifies the debounce time of the trigger input signal.

This amount of time is the minimum amount of time in milliseconds the photo detector should be blocked to be considered an object to scan, reducing false triggers. A typical value is 5 msec. This value must be significantly less than the amount of time from the trigger to read line.

Trigger Source: Serial/Network

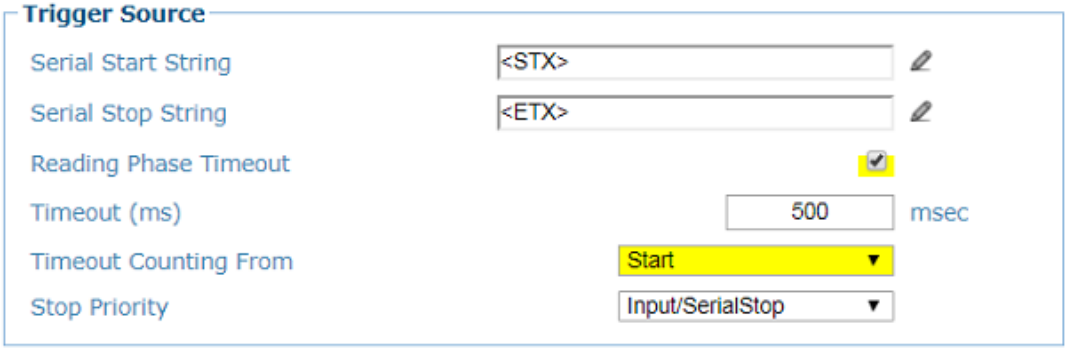

In Serial/On-Line mode the reading phase starts when the Serial Start String is received on the serial interface and ends when the Serial Stop String is received or when a programmed Reading Phase Timeout expires.

If decoding is correct, the data is transmitted on the serial port as defined by the configuration. The output line selected for the right output event is activated and the relative message is transmitted on the serial interface or Ethernet input.

In case of a bad read, a no read message is transmitted on the serial interface. The output line selected for the no read event is activated and the relative message is transmitted on the serial interface or Ethernet input.

Serial Start/Stop String (max.32 chars)

Available only for Online/Serial/Network options. Click to activate the Text Entry Tool and create the string text used to signal the beginning of the reading phase. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text. This is only available if Online option has been selected.

The Serial Start string must be different from the Serial Stop string and Motor ON/OFF strings. When ACK/NAK Protocol or Energy Saving is enabled, the Serial Start/Stop Strings cannot contain ACK/NAK characters.

Reading Phase Timeout

Select the check box to define a timeout for the On Line Serial mode and the On Line 1 Input mode.

Timeout (ms)

Enter a timeout in milliseconds (from 40 to 15000 ms) in the field provided. The Timeout represents the period of time for the reading phase.

Timeout Counting From

Select Start or Stop from the drop-down list.

When Start is selected, the Timeout used to determine the reading phase will begin from the Start Input or Serial Start String (normal operation)

When Stop is selected, the Timeout used to determine the reading phase will begin from the Stop Input or Serial Stop String (effectively extending the reading phase).

Stop Priority

This is available when Start is selected from the Timeout Counting From drop-down list. Select Input/Serial Stop or Always Timeout from the drop-down list. ??Input/Serial Stop: The Stop Input Number or Serial Stop String defines the end of the reading phase. Timeout has a lower priority. ??Always Timeout: The reading phase always stops when the selected timeout expires.

Beam Shutter Settings


Beam Shutter

Select Disabled, Triggered, or Enabled from the drop-down list. The Beam Shutter turns the laser off. The Beam Shutter option can be used to increase the overall laser diode life when used in high ambient temperature applications (over 35° C); reduce power consumption; and to turn off the laser for safety purposes.

- **Disabled:** The laser is always on.
- **Triggered:** The laser is turned off as soon as the code(s) are read or when the reading phase ends. The laser is turned on again when the next reading phase starts.
- **Enabled:** The laser is always off and all operations are suspended.

Continuous Mode

The reading phase is always active and allows reading two or more codes when placed along the same scan line. Code transmission is identical to the other operating modes except that there is no transmission on the serial port in case of a No Read condition. Allows the reading of one or more codes.

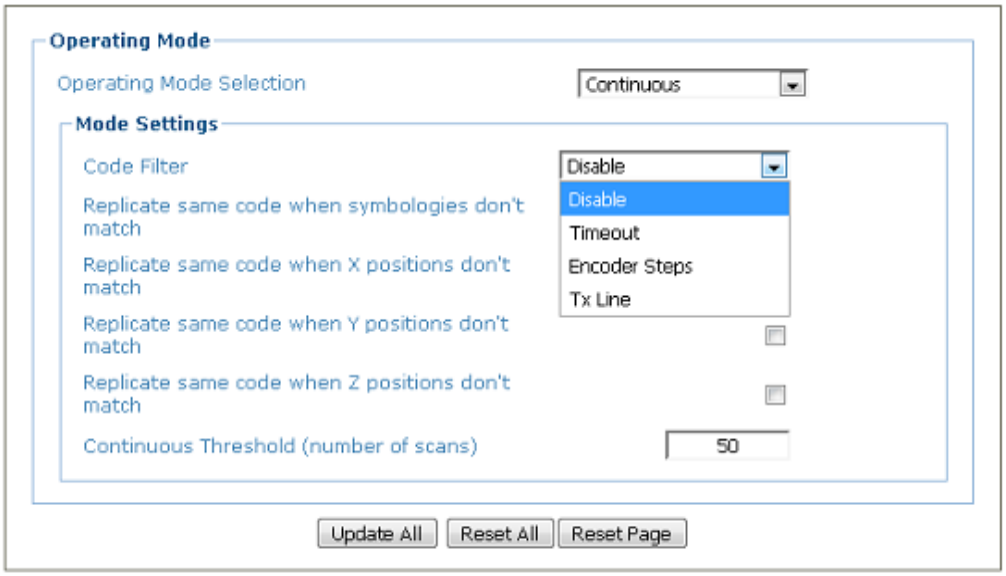

Mode Settings

Code Filter

Select Enable, Disable, Timeout, Encoder Steps, or Tx Line from the On Line Options drop-down list. This parameter determines criteria for flushing entries from the code filtering list depending on the type of list management:

The **Code Filter Depth parameter**, when not = 0, manages a FIFO (First In First Out) list of codes which are compared for filtering. The Timeout and Encoder Steps values are in addition to the cyclical flushing of entries when the FIFO list depth is exceeded.

When **Code Filter is set to Tx Line** an internal list is managed where each entry is flushed when the Tx Line distance is exceeded.

The application program inherently compares codes based on content and code length.

Each Code Filter criteria has its own relative value parameter.

Disable: No additional criteria are applied. If code filtering is enabled through the Code Filter Depth parameter, the FIFO list is only modified by new code

entries (FIFO list depth exceeded).
Enable: Enables code filtering options.
Timeout: A timeout measured in milliseconds is also applied to each code read. The current code read will be flushed from the list when the timeout expires.
Encoder Steps: a threshold measured in encoder steps is also applied to each code entry. The current code entry will be flushed from the list when the number of encoder steps is exceeded. See Filter Number of Encoder Steps.
Tx Line: The distance measured in mm to the transmit line is applied to each code entry. The current code entry will be flushed from the list when the distance in mm is exceeded. When Tx Line is selected, all the networked scanners must have been calibrated using PackTrack (See PackTrack in the DS8110 and DX8210 Reference Manuals).



When Code Filter = Tx Line:

The Code Filter Depth parameter is no longer available because the application program manages an internal list which depends solely on the number of codes decoded before the Tx Line is reached.

Any code which is determined to be identical to a code in the list by comparing the filter conditions will be discarded, and to increase precision the code in the list will have its x, y, z position coordinates adjusted as the average between the two readings.

x=x1+x2/2 , y=y1+y2/2 , z=z1+z2/2



Code Filter options vary based on what is selected; Enable, Timeout, Encoder Steps or Tx Line.

Code Filter Depth

In **Continuous mode**, Code Filter Depth is used to avoid multiple reads of the same code. The entered value (other than zero) defines the number of codes to memorize in a FIFO (First In First Out) list.

When a code is read, it is compared to the list. The application program inherently compares codes based on content and code length. If the list contains a code identical to the current code being read, the current code is discarded. If not, the current code is accepted and added to the list in the first position; the remaining codes in the list are shifted. If the list is full the oldest code in the list will be flushed.

When = 0, there is no FIFO list and there is no filtering.

Selection:a value from 0 to 127

Example:

Code Filter Depth = 3

List	Code Read	Accepted
xxx (no codes in list)	A	Yes
Axx	B	Yes
BAx	B	No
BAx	C	Yes
CBA	D	Yes
DCB	A	Yes
ADC	A	No

Filter Timeout Value


Enter a timeout value in milliseconds. A code entry is flushed from the list when the timeout expires.

Filter Number of Encoder Steps

Enter a number of encoder steps from 1 to 15000. This parameter sets the number of Encoder Steps after which the FIFO (First In First Out) list entry is flushed.

Distance from PS Line to Tx Line

Enter the distance along the Y axis from the PS (photoelectric sensor) to the TX Line (transmit).

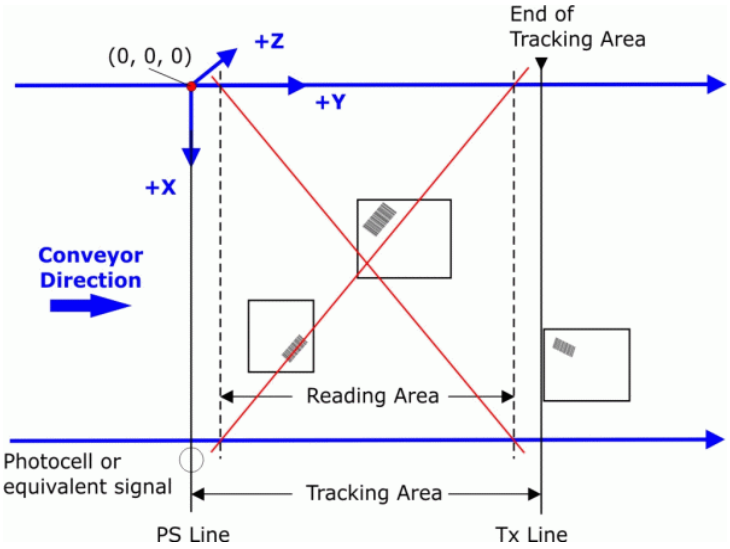

NOTE

Tracking starts 10 cm [4 inches] before and stops 10 cm [4 inches] after the Reading Area in order to ensure the barcode is assigned to the correct package.

Replicate same code when symbologies don't match

Select the check box to enable a further code filter condition according to which a read code is added to the list or discarded. This parameter is available if the Code Filter Depth value is other than zero or if the Code Filter value is Tx Line.

In addition to the inherent content and code length comparison, this parameter compares the code type (symbology). If the current code being read is identical to any code contained in the list by: content, length and type, the current code is discarded. If not, the current code is accepted and added to the list in the first position; the remaining codes in the list are shifted. If the list is full the oldest code in the list will be flushed.

Replicate same code when X positions don't match

Select the check box to enable a further code filter condition according to which a read code is added to the list or discarded. This parameter is available if the Code Filter Depth value is other than zero or if the Code Filter value is Tx Line.

In addition to the inherent content and code length comparison, this parameter compares the X coordinate code position. If the current code being read is identical to any code contained in the list by: content, length and X coordinate code position, the current code is discarded. If not, the current code is accepted and added to the list in the first position; the remaining codes in the list are shifted. If the list is full the oldest code in the list will be flushed.

Replicate same code when Y positions don't match

Select the check box to enable a further code filter condition according to which a read code is added to the list or discarded. This parameter is available if the Code Filter Depth value is other than zero or if the Code Filter value is Tx Line.

In addition to the inherent content and code length comparison, this parameter compares the Y coordinate code position. If the current code being read is identical to any code contained in the list by: content, length and Y coordinate code position, the current code is discarded. If not, the current code is accepted and added to the list in the first position; the remaining codes in the list are shifted. If the list is full the oldest code in the list will be flushed.

Replicate same code when Z positions don't match

Select the check box to enable a further code filter condition according to which a read code is added to the list or discarded. This parameter is available if the Code Filter Depth value is other than zero or if the Code Filter value is Tx Line

In addition to the inherent content and code length comparison, this parameter compares the Z coordinate code position. If the current code being read is identical to any code contained in the list by: content, length and Z coordinate code position, the current code is discarded. If not, the current code is accepted and added to the list in the first position; the remaining codes in the list are shifted. If the list is full the oldest code in the list will be flushed.


Continuous Threshold (number of scans)

Enter an N number of scans without a code allowed in order to assure code identification in the reading zone. Enter a value from 10 to 32665.

See “Encoder Settings” on page 64

OPERATING MODEL: PACKTRACK

Refer to PackTrack in the DS8110 and DX8210 Reference Manuals for physical PackTrack installation procedures.

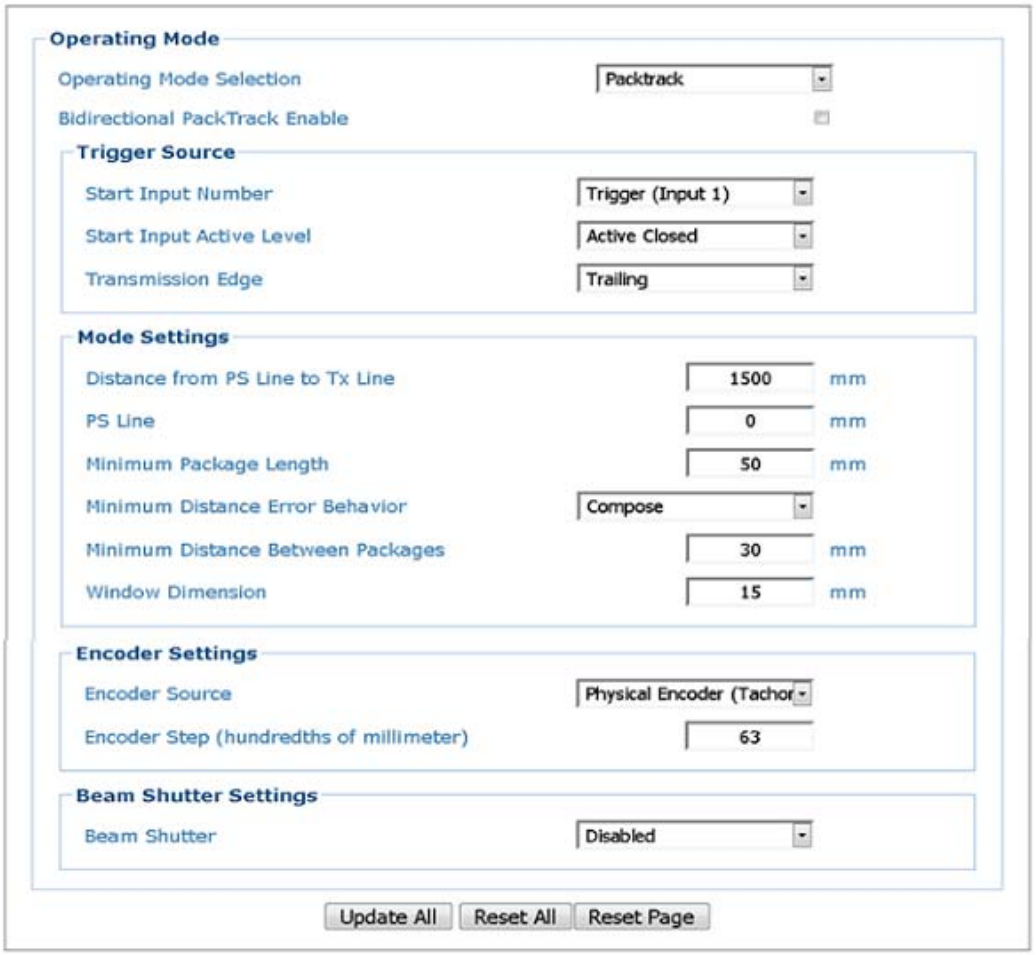

Bidirectional PackTrack Enable (SC5000 Only)

Select the check box to enable. If enabled, conveyor direction parameters are made available (forward or reverse).


Example:

Start Input Number= Input 1

Reverse Start Input = Input 3

Direction Input = Input 4

Reverse Start Input Active Level = Closed with reverse conveyor direction /Open with forward conveyor direction

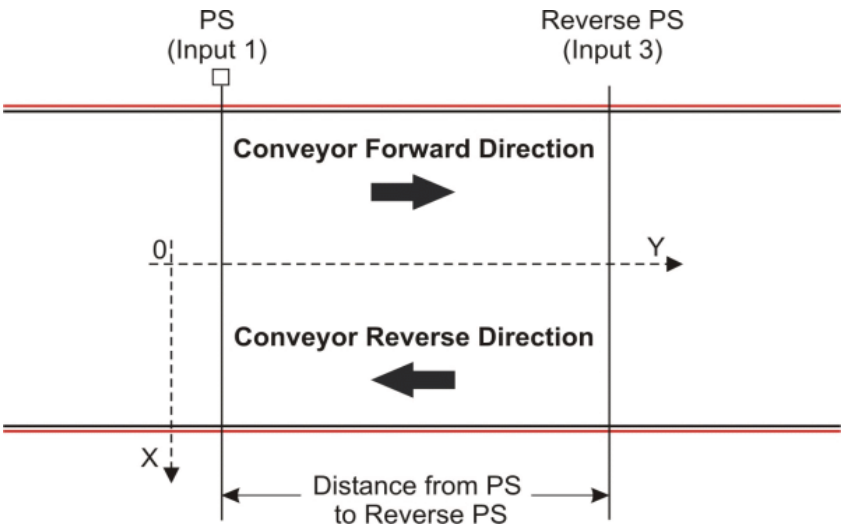

Trigger Source

Select the source of the trigger from the drop-down list.

Start Input Number

Select the Input Number from the selections available in the drop-down list. Options are; Trigger (Input 1), Aux (Input 3), or I/O 4 (Input 4)

This option defines the numbered input that will start the trigger cycle.

Start Input Active Level

Select Active Open or Active Closed from the drop-down list.

Active Open: The input is active when there is no current flowing through IN pins. The input from the trigger source is normally closed. The scanner goes into trigger mode when the input source is opened.


Active Closed: The input is active when current flows through IN pins. The input from the trigger source is normally opened. The scanner goes into trigger mode when the input source is closed.

Transmission Edge

Select Trailing or Leading from the drop-down list to define the signal edge of the stop input used by the scanner as reference for ending the reading phase:

Trailing: The reading phase ends when the pack has completely passed by the stop input.
Leading: The reading phase ends as soon as the stop input detects the front edge of the pack.

Bidirectional PackTrack Settings

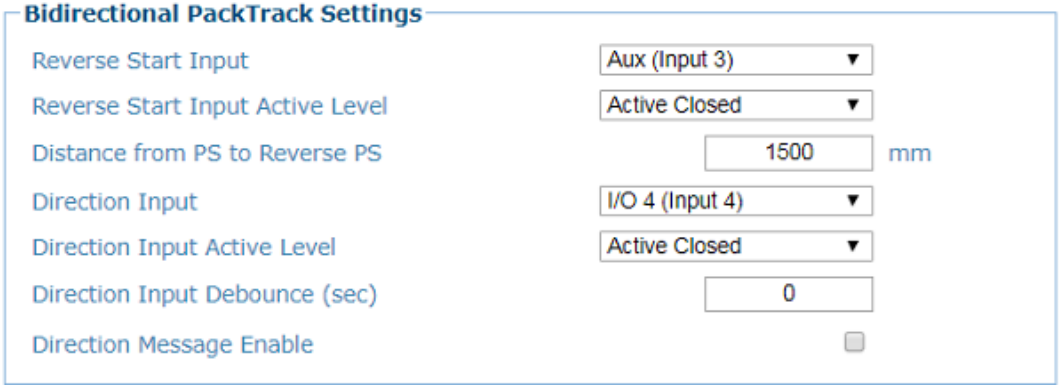

Reverse Start Input

Select Trigger (Input 1), Aux (Input 3), or I/O 4 (Input 4) from the drop-down list. This defines the number of the input to be used as presence sensor when the conveyor has a reverse direction.

Reverse Start Input Active Level

Select Active Closed or Active Open from the drop-down list. This defines the logical level of the input indicating the reverse direction of the conveyor.

Distance from PS to Reverse PS

Enter a value to define the distance (mm [in]) between the PS (conveyor with forward direction) and the Reverse PS (conveyor with reverse direction).

Direction Input

Select Trigger (Input 1), Aux (Input 3), or I/O 4 (Input 4) from the drop-down list. This defines the number of the input transmitting information about the conveyor's current direction.

Direction Input Active Level

Select Active Closed or Active Open from the drop-down list. This defines the active state of the Reverse Presence Sensor Input.

Active Closed: The input is active when there is no current flowing through IN pins

Active Open: The input is active when current flows through IN pins

Direction Input Debounce (sec)

Enter a value in seconds that specifies the debounce time of the direction input signal.

Direction Message Enable

Select the check box to enable the sending of a direction message.

Direction Message Transport

Select from the drop-down on which port the Direction message will be sent.

Direction Message Interval

Enter a value in seconds that specifies how frequently the direction is sent.

Forward Direction Message

Enter a text string to be sent when the conveyor is going in the forward direction.


Reverse Direction Message

Enter a text string to be sent when the conveyor is going in the Reverse direction.

Mode Settings

Distance from PS Line to Tx Line

Enter the distance along the Y axis from the PS (photoelectric sensor) to the TX Line (transmit).

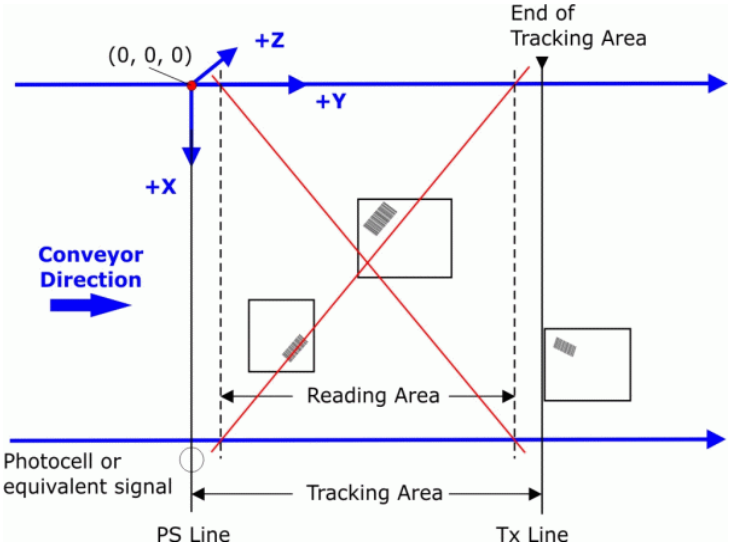


NOTE

Tracking starts 10 cm [4 inches] before and stops 10 cm [4 inches] after the Reading Area in order to ensure the barcode is assigned to the correct package.

PS Line

This parameter defines the read signal Y coordinate (mm) referred to the origin of co-ordinates used for PackTrack™ configuration (see below).

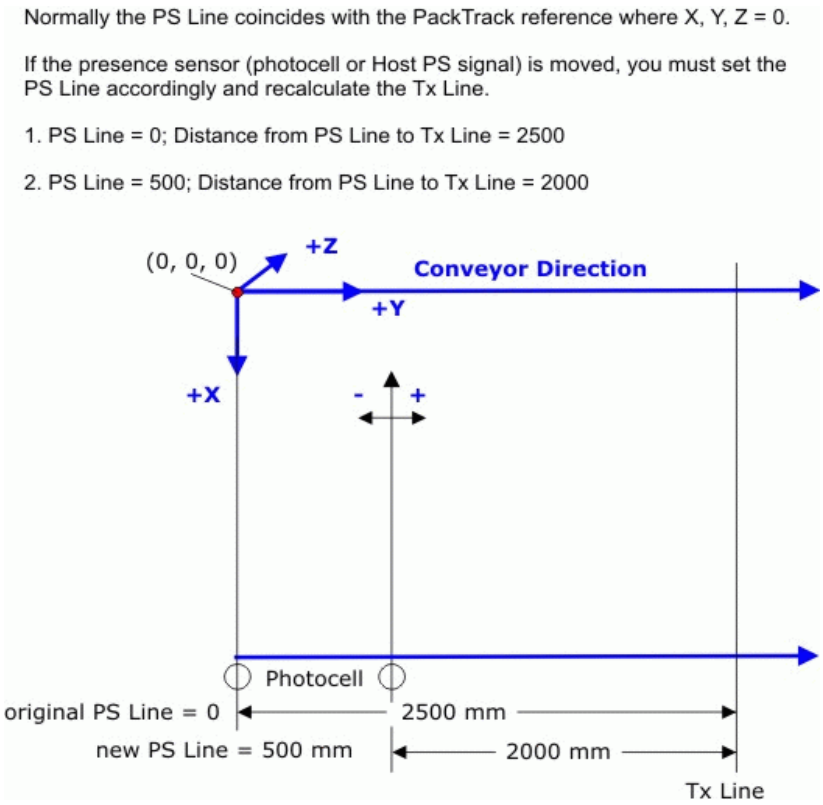

Minimum Package Length

Enter the minimum length of a pack in the space provided (mm, in).

Minimum Distance Error Behavior

Select Ignore Error, Compose, or Discard Last from the drop-down list.

Ignore Error: the occurred error is ignored
Compose: Enter the Minimum Distance Between Packs in the field provided.
Discard Last: discards all received packs

Minimum Distance Between Packages

Enter the minimum distance (mm, in) between consecutive packs. This field is only available when Compose or Discard Last is selected for the Minimum Distance Error Behavior.


Window Dimension

Enter a Window Dimension in the field provided.

The measurement of a barcode position in absolute coordinates performed by the scanners may be affected by an error. PackTrack™ evaluation can fail in assigning the barcode for this reason. With the Window Dimension parameter, the Y coordinates that delimit the pack can be virtually extended to improve the assigning success rate (see the following figure).

If the minimum distance between two consecutive packs is less than twice the value of the Window Dimension, the window is dynamically resized (dynamic window) to half the distance between the two packs. The code will be assigned within the Window Dimension of the closest pack.

If the minimum distance between two consecutive packs is more than twice the value of the Window Dimension, the code will be assigned within the Window Dimension itself.

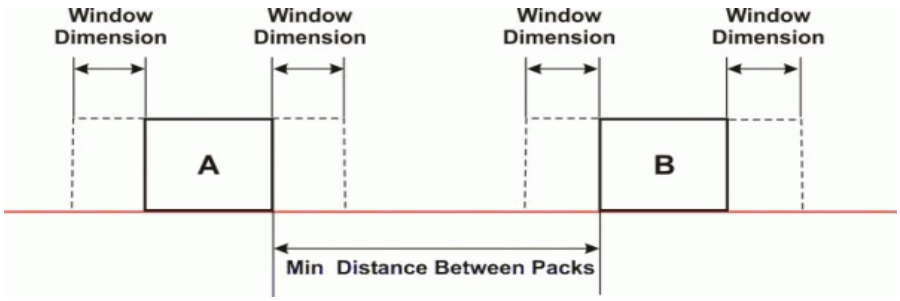

Encoder Settings


Encoder Source

Select Constant Speed (Internal), Physical Encoder (Tachometer), or Derived Encoder (PLL) from the drop-down list:

Constant Speed (Internal): Allows the user to specify the tach rate to be used (from .05 – 3.05 m/sec [from 10 – 600 ft/min]). No external hardware is used.



Physical Encoder (Tachometer): A physical encoder is connected to the Encoder input and is enabled.

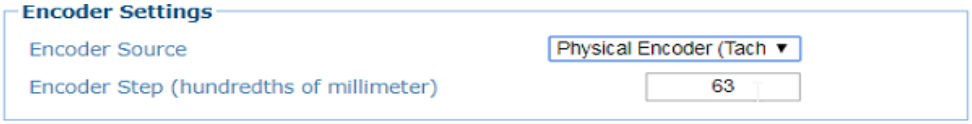

Derived Encoder (PLL): determines the encoder rate from an external signal. This is used in applications where the distance between fixed-sized packages/trays is constant.



Conveyor Speed (mm/sec)

This parameter is available only when the Physical Encoder is disabled. It defines the constant speed of the conveyor in mm/sec.

Encoder Step (Hundredths of millimeters)

Enter the step value of the encoder.

Encoder Step Settings Table:

Encoder Model	PPR (Pulses Per Revolution)	PPI (Pulses Per Inch)	Encoder Step Setting
OEK-4 (Dat-alogic)	250	20	63
OEK-2 (Pho-tocraft)	24	2	635
OEK-2	48	4	317
OEK-2	192	16	79
OEK-2	240	20	63

NOTE


The maximum allowed encoder frequency is 5 kHz (equivalent to an encoder set to 20 PPI with a conveyor speed of 381 m [1250 ft.] /minute.

Derived Encoder Input Source (SC5000 Only)

Select the input source from the drop-down list.

Derived Encoder Input Edge (SC5000 Only)

Select Rise to Rise, Fall to Fall, Rise to Fall, or Fall to Rise from the drop-down list. The selections represent the leading and trailing edges of the package, i.e.: Rise=Leading, Fall=Trailing.

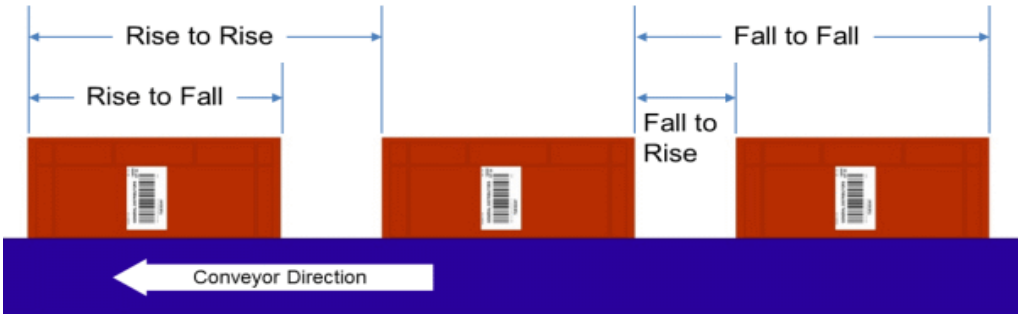

Derived Encoder Input Pulse Width (SC5000 Only)

Enter the width/distance (mm[in]) corresponding to the Derived Encoder Input Edge selected above.

Beam Shutter Settings

Beam Shutter

Select Disabled, Enabled, or Triggered from the drop-down list. The Beam Shutter turns the laser off and can be used to increase the overall laser diode life when used in high ambient temperature applications (over 35° C); to reduce power consumption; or to turn off the laser for safety purposes.

- **Disabled:** The laser is always on.
- **Triggered:** The laser is turned off as soon as the code(s) are read or when the reading phase ends. The laser is turned on again when the next reading phase starts
- **Enabled:** The laser is always off and all operations are suspended.

PackTrack Beam Shutter Timeout

Select a time value from the drop-down list. This parameter is available only when Operating Mode = PackTrack™ and Beam Shutter = Triggered. By setting this parameter the laser is turned off as soon as the selected timeout expires. The next trigger signal will turn the laser back on.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Barcode Settings Table

Use the **Barcode Settings Table** to select and configure the barcodes to be read in your application.

To edit the Barcode Settings:

1. In the menu under Modify Settings, navigate to **Global Settings | Barcode Settings.** The Barcode Settings window opens.

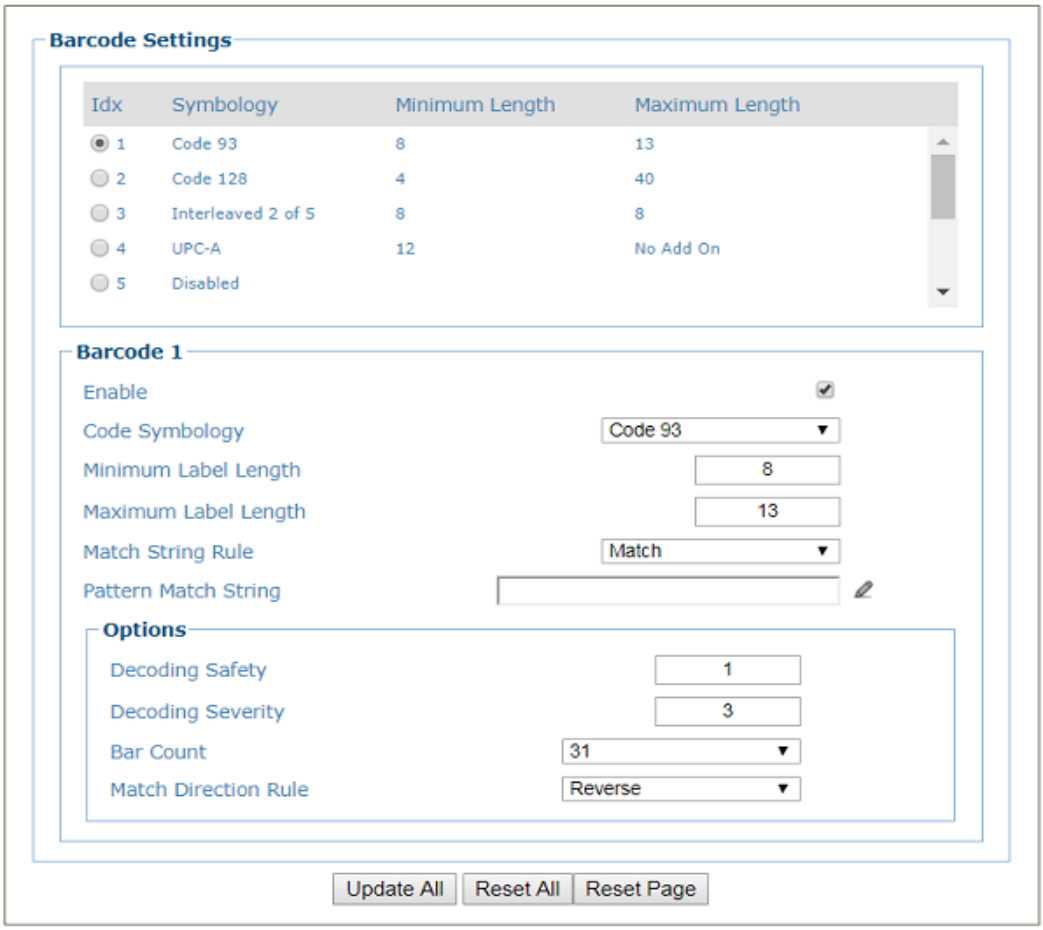

2. Enter the appropriate information in the form as described below:

Top Panel

Displays a list of barcodes that have been added to the system with the following columns:

Idx

Select the Idx for the row/barcode you wish to enter or edit.

If a row is disabled, a barcode type can be selected and configured for that row.
If a barcode type is displayed in the selected row, its configuration can be edited.

Symbology

Displays the name of the barcode symbology for that row. If no symbology has been added for a row, disabled is displayed.

Minimum Length

Displays the minimum barcode character length for that row's symbology.

Maximum Length

Displays the maximum barcode character length for that row's symbology.

Barcode n

Input fields will vary depending on the selected symbology. You can set up to 10 bar codes.

Enable

Select the Enable check box to activate the selected barcode. Deselect the Enable check box to disable the selected barcode. When the check box has been selected, configuration and code type options are displayed

Code Symbology

Select a barcode symbology from those available in the Code Symbology drop-down list.

EAN Add On

This options is only available for EAN and UPC options.

Select No Add On, 2 digits Add On, or 5 digit Add On from the EAN Add On drop-down list. Selecting 2 digit Add On or 5 digit Add On adds that many digits as a supplement to the barcode. EAN is the acronym for International Article Number, previously known as European Article Number.

Minimum Label Length

Enter the minimum character length for the selected barcode. 2D will appear if a 2D code symbology is selected.

Maximum Label Length

Enter the maximum character length for the selected barcode. 2D will appear if a 2D code symbology is selected.

Match String Rule

Select Match or Do Not Match from the drop-down list. This parameter defines the matching rule, which defines which codes can be transmitted.

Match: All codes matching the Pattern Match String will be transmitted
Do Not Match: All codes not matching the Pattern Match String will be transmitted

Pattern Match String (max. 200 chars)

Click to activate the Text Entry Tool and create a pattern match string. A code can also be identified by its content. A pattern matching string is programmable for each code.

It is possible to define the matching string by inserting:

all printable characters
* = defining any string consisting of an undefined number of characters (it may be empty)
? = identifying any character to be found in the position indicated within the string

If your application requires inserting ?, * and NUL as characters, it is necessary to use the following syntax:

? character = <NUL>?
* character = <NUL>*
NUL character = <NUL>00
other extended ASCII characters = <NUL>xy, where xy identifies the character hex value

Examples:

Match a code starting with 123 string and followed by any string of characters:

Match String = 123*

Example Code = 123aC53

Match a code ending with 123 string preceded by any string of characters:

Match String = *123

Example Code = 41pO123

Match a code having 123 string in any position:

Match String = *123*

Example Code = 41pO123253

Match a code starting with 123 string followed by three generic characters and an undefined string of characters, in this case no character:

Match String = 123???*

Example Code = 123ad2

Match any code of four characters:

Match String = ????

Example Code = gT6k

Match a code with 6 characters in any position having 12 as central characters:

Match String = *??12??*

Example Code = datal12og35

The following is an example of a very complex string where ? and* are used both as commands and as characters:

Match String = *45<NUL>??*??AC<NUL>*251?*


Example Code = GEN45?3iusdsAC*2516300

NOTE **For Codabar codes the start/stop characters must be considered in the match conditions. For all codes which use check digits, if the Check Digit is transmitted, it must be considered in the match conditions.**


NOTE **Input fields will vary depending on the selected symbology.**

OPTIONS

Code 128

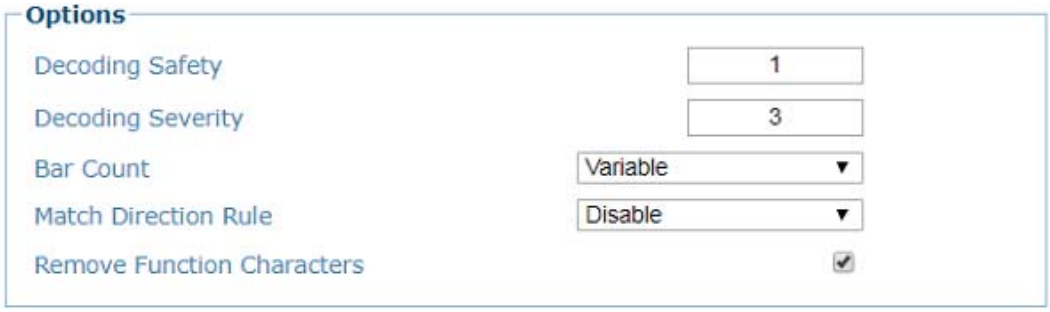

GS1-128(EAN128), Code 93

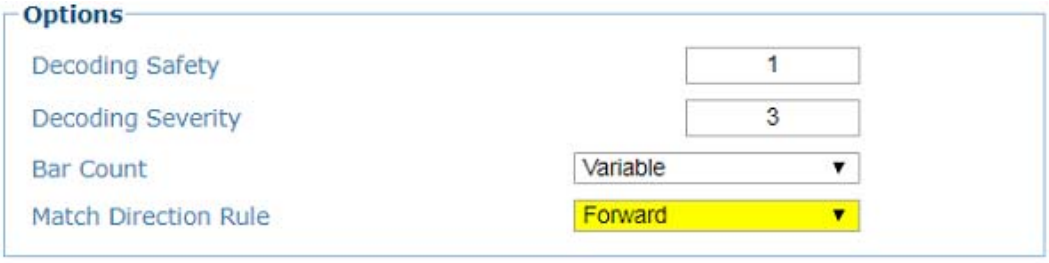

WARNING **Contact Datalogic Technical Support before modifying the Decoding Safey or Decoding Severity parameters.**

Decoding Safety

Enter a number from 1 to 100 (1 = control disabled) in the field provided. It verifies that an N number of decodes are performed with the same result before code reading is accepted as valid. Only available when Reading Mode is Linear.


Decoding Severity

Enter a number from 1 to 5 (1 = lowest severity level and 5= highest severity level). During decoding poorly printed or damaged codes can be discarded because they do not match the expected code. The Decoding Severity defines a ratio between the actual and the expected code image. The lower the ratio, the higher the difference between images. Setting a low value increases the possibility for decoding errors.

Bar Count

Select Variable or an available value from the drop-down list. The Bar Count allows you to further specify the number of elements in the read code for Code 128, GS1-128, Code 93, ISBT 128 or Code 39 Full ASCII. For these codes, the same number of barcode elements (bars + spaces) can be associated with a different number of characters.

Variable: to select the correct number of characters, set Label Length to the desired fixed value and Bar Count to Variable

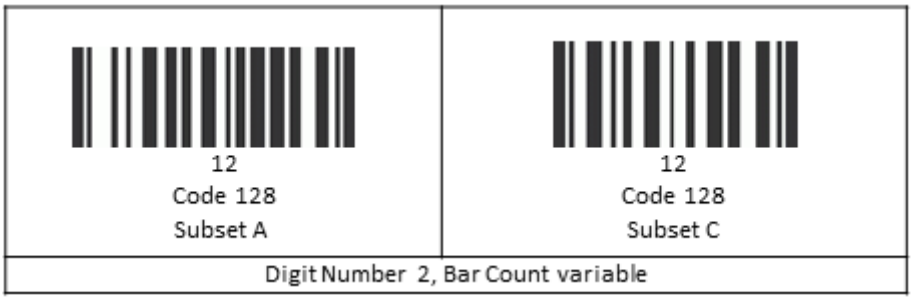

Code 128 or GS1-128: from 25 to 499 - a variable number of characters in steps of 6.
Code 93 or ISBT 128: from 25 to 385 - a variable number of characters in steps of 6.
Code 39 Full ASCII: from 29 to 619 - a variable number of characters in steps of 10.

To select a particular barcode length in elements, set Bar Count to the desired fixed value and Label Length to Variable.



Match Direction Rule

Select Disable, Forward, or Reverse from the drop-down list. This parameter defines the direction, according to which a code can be transmitted. The direction refers to the code direction with respect to the scan line, in particular: Forward = the code start character precedes the stop character in the scan line (Start Ch + Code + Stop Ch); Reverse = the code stop character precedes the start character in the scan line (Stop Ch + Code + Start Ch)

Disable: All codes are transmitted no matter what the direction is
Forward: All codes having a forward direction are transmitted
Reverse: All codes having a reverse direction are transmitted

Remove Function Characters

Select the check box to remove functional characters.

Interleaved 2 of 5, Code 39



WARNING

Contact Datalogic Technical Support before modifying the Decoding Safey or Decoding Severity parameters.

Decoding Safety

Enter a number from 1 to 100 (1 = control disabled) in the field provided. It verifies that an N number of decodes are performed with the same result before code reading is accepted as valid. Only available when Reading Mode is Linear.

Decoding Severity

Enter a number from 1 to 5 (1 = lowest severity level and 5= highest severity level). During decoding poorly printed or damaged codes can be discarded because they do not match the expected code. The Decoding Severity defines a ratio between the actual and the expected code image. The lower the ratio, the higher the difference between images. Setting a low value increases the possibility for decoding errors.

Check Digit

Select the check box to improve decoding safety: it is generally the last digit aligned to the right of the code and verifies the validity of the preceding digits. The calculation technique and number of check digits depend on the code selected.

It is advised to enable the check digit whenever correct code identification is difficult.

Match Direction Rule

Select Disable, Forward, or Reverse from the drop-down list. This parameter defines the direction, according to which a code can be transmitted. The direction refers to the code direction with respect to the scan line, in particular: Forward = the code start character precedes the stop character in the scan line (Start Ch + Code + Stop Ch); Reverse = the code stop character precedes the start character in the scan line (Stop Ch + Code + Start Ch)

Disable: All codes are transmitted no matter what the direction is
Forward: All codes having a forward direction are transmitted
Reverse: All codes having a reverse direction are transmitted

EAN-13, EAN-8, UPC-A, UPC-E, All EAN-UPC, Aztec, DataMatrix. Maxicode



WARNING

Contact Datalogic Technical Support before modifying the Decoding Safey or Decoding Severity parameters.

Decoding Safety

Enter a number from 1 to 100 (1 = control disabled) in the field provided. It verifies that an N number of decodes are performed with the same result before code reading is accepted as valid. Only available when Reading Mode is Linear.

Decoding Severity

Enter a number from 1 to 5 (1 = lowest severity level and 5= highest severity level). During decoding poorly printed or damaged codes can be discarded because they do not match the expected code. The Decoding Severity defines a ratio between the actual and the expected code image. The lower the ratio, the higher the difference between images. Setting a low value increases the possibility for decoding errors.

Match Direction Rule

Select Disable, Forward, or Reverse from the drop-down list. This parameter defines the direction, according to which a code can be transmitted. The direction refers to the code direction with respect to the scan line, in particular: Forward = the code start character precedes the stop character in the scan line (Start Ch + Code + Stop Ch); Reverse = the code stop character precedes the start character in the scan line (Stop Ch + Code + Start Ch)

Disable: All codes are transmitted no matter what the direction is
Forward: All codes having a forward direction are transmitted
Reverse: All codes having a reverse direction are transmitted

Codabar



WARNING

Contact Datalogic Technical Support before modifying the Decoding Safey or Decoding Severity parameters.

Decoding Safety

Enter a number from 1 to 100 (1 = control disabled) in the field provided. It verifies that an N number of decodes are performed with the same result before code reading is accepted as valid. Only available when Reading Mode is Linear.

Decoding Severity

Enter a number from 1 to 5 (1 = lowest severity level and 5= highest severity level). During decoding poorly printed or damaged codes can be discarded because they do not match the expected code. The Decoding Severity defines a ratio between the actual and the expected code image. The lower the ratio, the higher the difference between images. Setting a low value increases the possibility for decoding errors.

Check Digit

Select the check box to improve decoding safety: it is generally the last digit aligned to the right of the code and verifies the validity of the preceding digits. The calculation technique and number of check digits depend on the code selected.

It is advised to enable the check digit whenever correct code identification is difficult.

Match Direction Rule

Select Disable, Forward, or Reverse from the drop-down list. This parameter defines the direction, according to which a code can be transmitted. The direction refers to the code direction with respect to the scan line, in particular: Forward = the code start character precedes the stop character in the scan line (Start Ch + Code + Stop Ch); Reverse = the code stop character precedes the start character in the scan line (Stop Ch + Code + Start Ch)

Disable: All codes are transmitted no matter what the direction is
Forward: All codes having a forward direction are transmitted
Reverse: All codes having a reverse direction are transmitted

Start/Stop Char Tx (Specific to Codabar)

Select Disabled, Lower Case, or Upper Case from the drop-down list. This parameter is available only for Codabar code symbologies. It allows transmitting the code start/stop character:

Disabled: The character is not selected;
Lower Case: The character is transmitted in lower case;
Upper Case: The character is transmitted in upper case.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Barcode Configuration

Use **Barcode Configuration** to configure how the system defines a no read bar-code, and configure and filter NOREAD messages.

To edit the Barcode Configuration:

1. In the menu under **Modify Settings**, navigate to **Global Settings | Barcode Configuration**. The **Barcode Configuration** window opens.

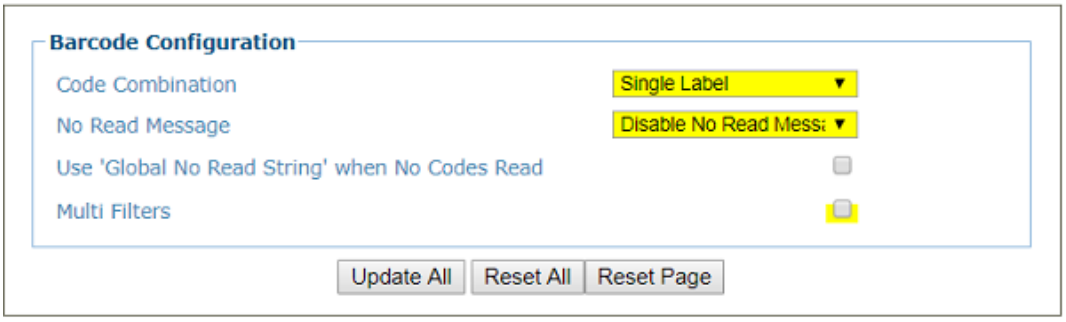

Code Combination

Select Single Label, Standard Multi Label, Logical Combination, or Code Collection from the drop-down list. The Code Combination parameter selects the decoding mode for the scanner.

Single Label "Single Label" on page 78: In this mode only one barcode can be read in each reading phase; however it can be determined automatically from up to 10 enabled codes. The scanner stops decoding as soon as a code is read.
If the code is not read during the reading phase, the No Read message is produced.

Standard Multi Label "Barcode Configuration | Standard Multi Label" on page 80: In Multi Label mode the barcodes selected (up to 10), will all be read in the same reading phase. If the reading phase terminates before all the codes are read, a Global No Read message will be produced, unless it is disabled, in which case a Local No Read will be produced.



In case of Multi Label, the codes will be distinguished EITHER by their symbology, OR by their contents. If two (or more) codes share the same symbology and same content, the scanner will perceive them as the same code.

Logical Combination "Barcode Configuration | Logical Combination" on page 85: In Logical Combination mode the codes of the groups defined by the Logical Combination Rule are read in the same reading phase.


Code Collection "Barcode Configuration | Code Collection" on page 96: In Code Collection mode expected codes are collected within a single reading phase in the order in which they are read. The No Read message is produced only if none of the codes are read. Up to 50 codes can be collected.

Understanding Barcode Configurations

Each barcode configuration code combination handles no read options differently. Below is an explanation of how they are handled.

No Read Messages

The **Barcode Settings Table** allows you to setup what types of barcodes will be decoded. You can set up to 10 bar codes. In the following example, four bar codes have been set.

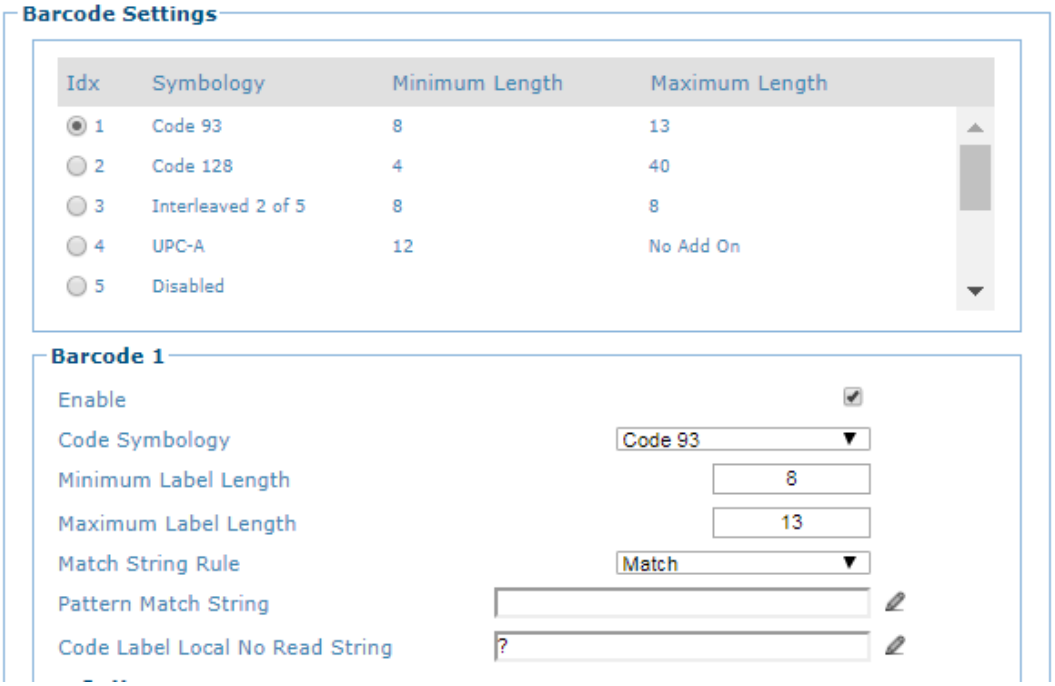


Barcode Configuration allows you to set up what will be transmitted once barcodes are read. You may read one or more barcode labels on a package at a time.

Global and Local No Read settings are available, as well as filter settings to reduce duplicate reading messages.


There are four Code Combination options: Single Label, Standard Multi Label, Logical Combination and Code Collection.

Single Label Local No Read Message

In the Barcode Settings Table, four bar codes have been enabled; Code 93, Code 128. I 2of5, and UPC-A. Only one bar code can be read in each reading phase, the first code read successfully is transmitted. If no codes are read a Global No Read message is transmitted.

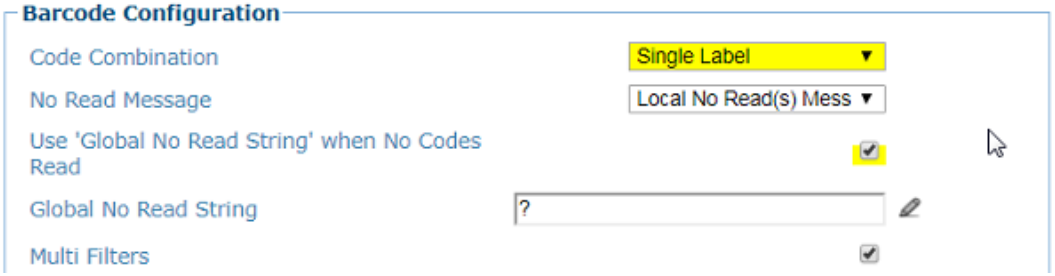


Local No Read cannot be selected for Single Label configurations.

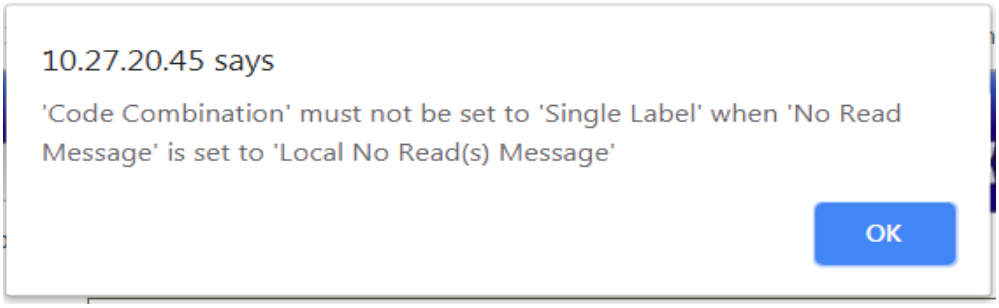

Single Label Global No Read Message

The Global No Read Message must be selected.

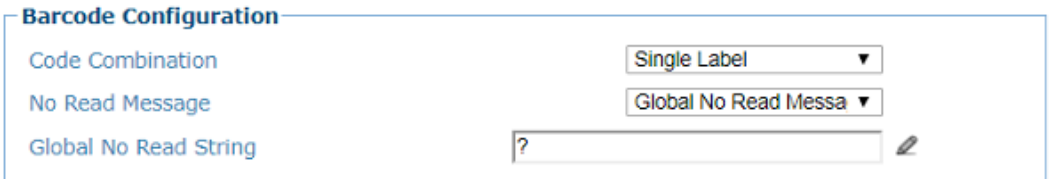


The same four bar codes have been enabled in the Barcode Settings Table and the first code decoded is transmitted: `#STX675898767566#CR#LF.` If no codes are read the Global No Read String is transmitted: `#STX???????#CR#LF`

Standard Multi Label Local No Read Message

Assuming the same four bar codes have been enabled in the Barcode Settings Table, we now select the Standard Multi Label Code Combination. This specifies that all of the bar codes may be read during the reading phase. If Local No Read Message is selected, a no read message is defined for each of the barcodes in the Barcode Settings Table.

When local no read is selected the No Read string is entered in the barcode settings table.

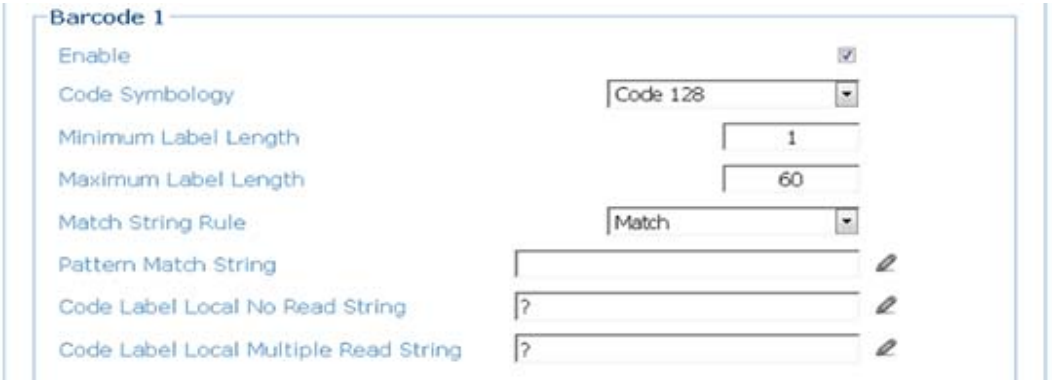


Let's assume two of the enabled codes were read and two were not, the message is transmitted as: `#STX?,1234567890123,?,675898767566#CR#LF`

This indicates that the first and third codes enabled did not read while the second and fourth did.

The multiple label options needs to be identified in the standard multi-label option.

Standard Multi Label Global No Read Message

Again the same four bar codes have been enabled in the Barcode Settings Table, and the Standard Multi Label Code Combination has been selected. However this time we select a Global No Read Message.

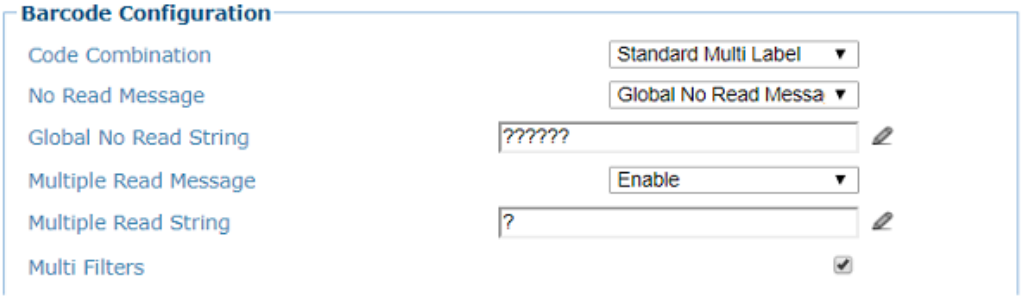

All 4 codes must be read during the trigger cycle.

STX002711000205487255091803497 6966,1234567890123,0467,675898767566#CR#LF

If all four codes are not read a single No Read message is transmitted:

#STX???????#CR#LF

Logical Combination Local No Read

As before four codes have been enabled. Four code groups have been defined and a logical combination rule states that code 1 and 2 and 3 and 4 must be read. Each one of the four codes is assigned to its own group. Local No Read Message is selected and a no read string is defined for each code. In this example the second code has not been read. Each group contains 1 possible code.

The transmitted message might look like this:

STX002711000205487255091803497 6966,?,0467,675898767566#CR#LF

This identifies that a no read message for the 2nd group, 2nd code has occurred.


Code Collection Global No Read

3 of the 4 codes enabled are read. Any number of codes read is transmitted. Only if all of the codes are not read is there a no read and it must be a Global No Read. The transmitted message might look like this:

#STX002711000205487255091803497 6966,1234567890123,675898767566 #CR#LF

Single Label

When **Single Label** has been selected from the **Code Combination** drop-down list, the Barcode Configuration window reveals related input fields.

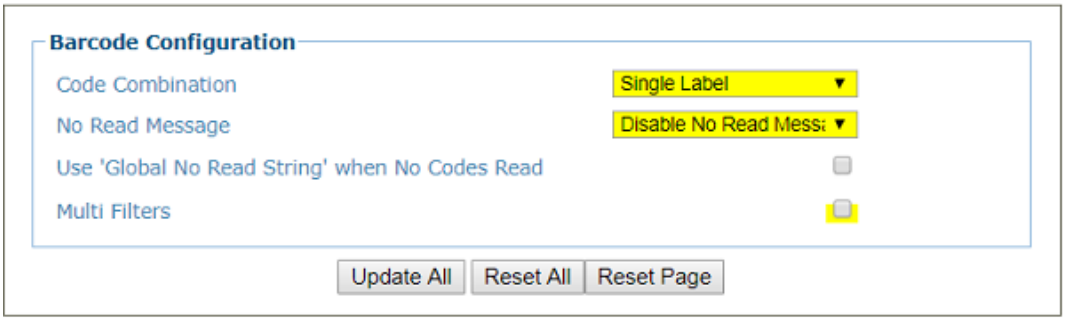

1. Enter the appropriate information in the form as described below:

Code Combination – Single Label has been selected.

No Read Message

Select Disable No Read Message, Global No Read Message, or Local No Read(s) Message from the drop-down list. The No Read condition occurs whenever a code cannot be read or decoded.

Disable No Read Message: The No Read Message is not transmitted.
Global No Read Message: The No Read String will be sent if the scanner is unable to decode one or more barcodes in the reading phase.
The Global No Read String is sent if none of the bar codes in the bar codes settings table are read. When any one of the bar cods in the table are read, then the local no read is used; if no bar codes are read then the Global No Read Message is transmitted if the options is selected.
Local No Read(s) Message: Do not use this option when working in Single Label mode. The Local No Read Message uses a not read message for each code selected. With the Standard Multi Label and Code Collection option the Local No Read messaged is defined in the barcode settings table located under the individual bar code option the local no read message is defined on the bar code configuration page. There is no local no read message in the single label option.

Use 'Global No Read String' when No Codes Read

Select the check box to allow the Global No Read String to be used if no codes at all are read. This option is not available when Global No Read Message is selected from the No Read Message drop-down list.

Global No Read String (max. 128 chars)

Click  to activate the Text Entry Tool and create a string to be displayed when Global No Read Message is selected from the No Read Message drop-down list.




These filter options are provided to eliminate false multiple reads.

Multi Filters

Select the check box to display the Multi-Filter Settings options.

Multi-Filter Settings

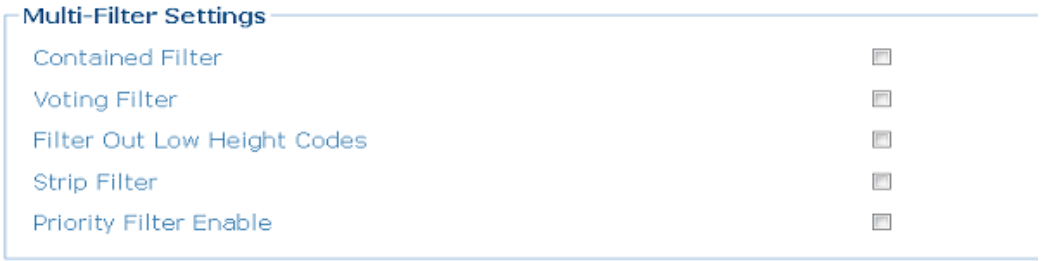

Contained Filter

Select the check box to reveal the **Max Number of Different Characters** field.

When checked, this filter attempts to eliminate false multiple reads by determining if a short code read is "contained in" (is a sub-string of), another longer code read.

This condition implicates that the short code is probably a misread of the same longer code and therefore should be ignored, (should not be considered as a multiple read of a different code).

This filter is based upon the following rules:

a multiple read condition occurs

all decoded codes of the same type are compared with each other

Rule 1: the shorter code is considered contained in the longer code if the character string is found in the same order; the longer code may have a single block of characters in any position (before, after or in between the compared strings)

Example: The code 123456 is considered contained in the following codes: 00123456, 12345600, 12378456.

The code 123456 is not considered contained in the following codes: 12346507 (string out of order), 12345700 (string not complete), 120378456 or 0012345600 (multiple blocks in the string).

Rule 2: the shorter code is not filtered by rule 1. In the longer code, all possible sub-strings of the same length as the shorter code string are compared with the shorter code string. The shorter code is considered contained in the longer code if the number of different characters between the compared codes is less than or equal to the Max Number of Different Characters. The shorter code will be filtered by rule 2.

Example:

If Max Number of Different Characters = 1:

The code 123456 is considered contained in the following codes: 12305600, 00123056, 8812305688 because there is only one different character in the compared string.

The code 123456 is not considered contained in 123066789 because there are two different characters in the compared string.



If the Contained Filter parameter is used when Message Tx Selection (see section "Special Host Protocol: None" on page 135) is set to On Decoding, the filter conditions may be satisfied before the reading phase ends resulting in possible successive multiple read errors.

Max Number of Different Characters

Enter a value from 0 to 5 in the field provided to define the maximum number of different characters allowed to still consider a code as being included in another code and therefore to be filtered.

If the number of different characters between the compared codes exceeds the value of this parameter, the codes are considered as different and will not be filtered (a multiple read of a different code occurs).

If the number of different characters between the compared codes is less than or equal to the value of this parameter, the short code is considered as a sub-string of the longer code and will be filtered (no multiple read occurs).

Examples:

If **Max Number of Different Characters** = 2:

The code 123456 read once, is considered the same as the following codes read multiple times: 133056, 123546, 123457 because there are two or less different characters by position in the compared codes.

The code 123456 read once, is not considered the same as the following codes read multiple times: 153246, 103057, 654321 because there are at least three different characters by position in the compared codes.

Voting Filter

Select the check box to reveal the Max Number of Different Characters field.

When checked, this filter attempts to eliminate false multiple reads by comparing the number of different characters by position between two codes of the same type and length. This condition implicates that reading a code of the same type and length having very few different characters is probably a misread of the code itself and therefore the code read the least number of times should be ignored, (should not be considered as a multiple read of a different code).

This filter is based upon the following rules:

a multiple read condition occurs;

the two codes are of the same type;

the two codes have the same length;

the number of different characters by position is equal to or less than the number defined by the Max Number of Different Characters parameter;

Message Tx Selection (see section “Special Host Protocol: None” on page 135) must be set to After Reading Phase Off.

Filter Out Low Height Codes

Select the check box to reveal the **Minimum Readings Difference Between Scanners** field.

Background: This option was developed for the airports systems where there are often tall bar height codes and low bar height codes with the same content attached to baggage. Travelers will often remove the large, tall bar height code, while leaving the smaller, low bar height codes attached to the bag. The next time they travel they may have multiple low bar height codes on their baggage plus the new tall bar height and low bar height codes for the new trip.

This option instructs the system to ignore low bar height codes, which are likely read only once or twice, in favor of tall bar height codes, which will likely be read multiple times.

This is used in tunnel applications where multiple barcodes are read and there is a need to filter out one of the barcodes. If less than x number of scanners read the barcode, then it will be considered a NOREAD for that code.

Minimum Readings Difference Between Scanners

Enter the minimum number of scanners that must read a barcode for it to be considered a valid read.

Filter Out Single Readings

If only 1 scanner reads a code it will be considered a NOREAD>

Strip Filter

Select the check box to display the Strip Filter Settings options. This is a second level filter that eliminates characters not managed or needed by the host.

Strip Filter Settings



Strip All Non Printable Chars

Select the check box to remove all non- printable ASCII characters from the code (000-020 and 127).

Char(s) to be Stripped

Click to activate the “Entering Text Using the Text Entry Tool” on page 43 and enter specific characters to be stripped from the code. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Strip Filter Collapse

Select the check box to remove the stripped characters from the code and, therefore, reduce the code length (collapsed). It can even be null.


Replacement Char

Click to activate the “Entering Text Using the Text Entry Tool” on page 43 and enter the substitution character to replace all the stripped ones. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

2. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Standard Multi Label

When **Standard Multi Label** has been selected from the **Code Combination** drop-down list, the Barcode Configuration window reveals related input fields.

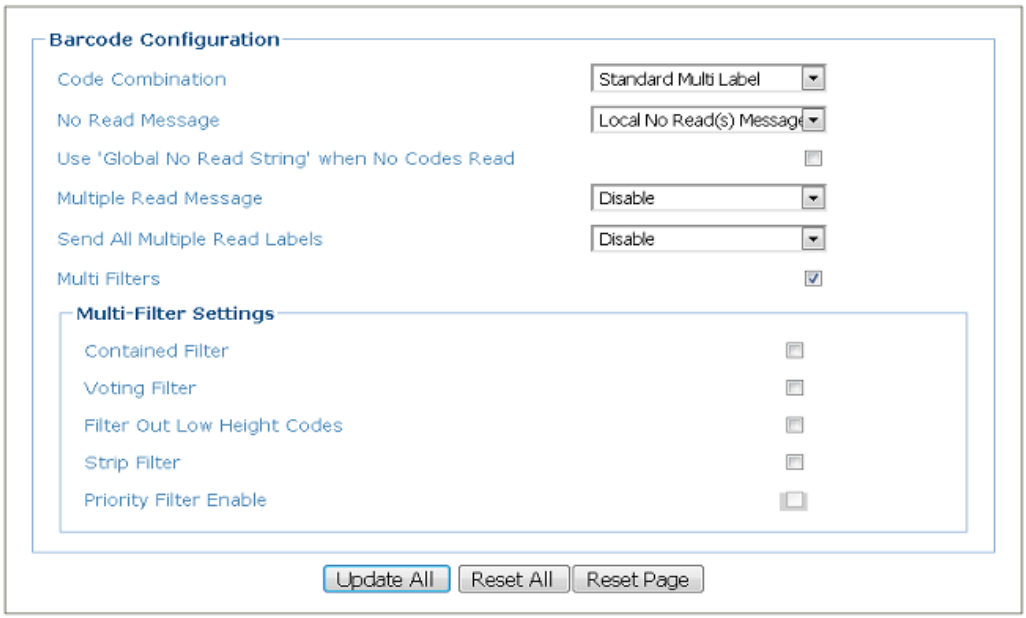

NOTE

In case of Multi Label, the codes will be distinguished EITHER by their symbology, OR by their contents. If two (or more) codes share the same symbology and content, the scanner will not perceive them as a unique code.

1. Enter the appropriate information in the form as described below:

Code Combination – Standard Multi Label has been selected.

No Read Message

Select Disable No Read Message, Global No Read Message, or Local No Read(s) Message from the drop-down list. The No Read condition occurs whenever a code cannot be read or decoded.

Disable No Read Message: The No Read Message is not transmitted.

Global No Read Message: The No Read String will be sent if the scanner is unable to decode one or more barcodes in the reading phase.

Local No Read(s) Message: This option is useful when one or more codes are not read in the reading phase or when more codes than the expected number set by the configuration parameters are read.

If working in Standard Multi Label mode, this option activates the Code Label Local No Read String and the Code Label Local Multiple Read String parameters which allow setting a Local No Read String and a Local Multiple string in the Barcode Settings Table for each defined code symbology.

Use 'Global No Read String' when No Codes Read

Select the check box to allow the Global No Read String to be used if no codes at all are read. This option is not available when Global No Read Message is selected from the No Read Message drop-down list.

Global No Read String (max. 128 chars)

Click to activate the Text Entry Tool and create a string to be displayed when Global No Read Message is selected from the No Read Message drop-down list. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

NOTE

These filter options are provided to eliminate false multiple reads.

Multiple Read Message

Select Disable or Enable from the drop-down list. This string will be sent if, during the reading phase, the scanner reads more than the number of the expected barcodes set by the configuration parameters.

Multiple Read String (max. 128 chars)

Click to activate the Text Entry Tool and create a string to be displayed in case of Multiple Read Message. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

This parameter is only available when Multiple Read Message is enabled and the No Read Message selection is different from Local No Read(s) String. It is possible to select either the ASCII or HEX value. If disabled, the scanner transmits the first code read.

Send All Multiple Read Labels

Select Enable or Disable. For Advanced Data Formats only, by enabling this parameter all multiple read labels will be included in the output message. They can be separated by the Multiple Read Separator.

Multiple Read Label Separator String (max. 128 chars):

The Multiple Read Label Separators (up to 128 bytes) are used to separate multiple read barcodes in the reading phase.


This is meaningful when the Code Combination parameter is set to Multi Label or Logical Combination and the Send All Multiple Read Labels parameter has been enabled.

If selected, they occur within the Code Field and are transmitted after each decoded multiple read barcode.

Multi Filters

Select the check box to display the Multi-Filter Settings options.

Multi-Filter Settings

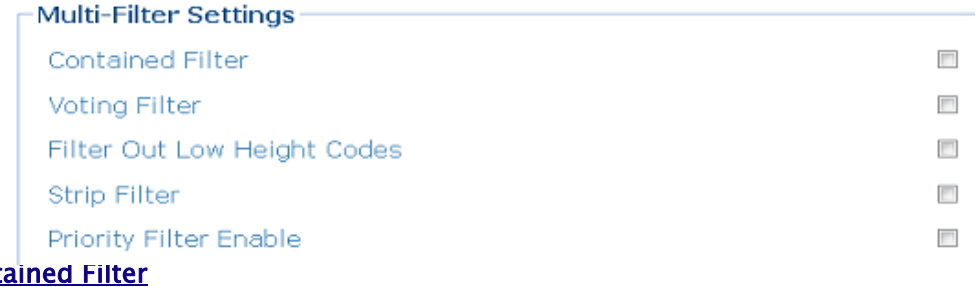

Contained Filter

Select the check box to reveal the Max Number of Different Characters field.

When checked, this filter attempts to eliminate false multiple reads by determining if a short code read is "contained in" (is a sub-string of), another longer code read. This condition implicates that the short code is probably a misread of the same longer code and therefore should be ignored, (should not be considered as a multiple read of a different code).

This filter is based upon the following rules:

a multiple read condition occurs

all decoded codes of the same type are compared with each other

Rule 1: the shorter code is considered contained in the longer code if the character string is found in the same order; the longer code may have a single block of characters in any position (before, after or in between the compared strings)

Example: The code 123456 is considered contained in the following codes: 00123456, 12345600, 12378456.

The code 123456 is not considered contained in the following codes: 12346507 (string out of order), 12345700 (string not complete), 120378456 or 0012345600 (multiple blocks in the string).

Rule 2: the shorter code is not filtered by rule 1. In the longer code, all possible sub-strings of the same length as the shorter code string are compared with the shorter code string. The shorter code is considered contained in the longer code if the number of different characters between the compared codes is less than or equal to the Max Number of Different Characters. The shorter code will be filtered by rule 2.

Example:

If Max Number of Different Characters = 1:

The code 123456 is considered contained in the following codes: 12305600, 00123056, 8812305688 because there is only one different character in the compared string.

The code 123456 is not considered contained in 123066789 because there are two different characters in the compared string.

CAUTION: If the Contained Filter parameter is used when Message Tx Selection (see section “Special Host Protocol: None” on page 135) is set to On Decoding, the filter conditions may be satisfied before the reading phase ends resulting in possible successive multiple read errors.

Max Number of Different Characters

Enter a value from 0 to 5 in the field provided to define the maximum number of different characters allowed to still consider a code as being included in another one and therefore to be filtered.

If the number of different characters between the compared codes exceeds the value of this parameter, the codes are considered as different and will not be filtered (a multiple read of a different code occurs).

If the number of different characters between the compared codes is less than or equal to the value of this parameter, the short code is considered as a sub-string of the longer code and will be filtered (no multiple read occurs).

Examples:

If Max Number of Different Characters = 2:

The code 123456 read once, is considered the same as the following codes read multiple times: 133056, 123546, 123457 because there are two or less different characters by position in the compared codes.

The code 123456 read once, is not considered the same as the following codes read multiple times: 153246, 103057, 654321 because there are at least three different characters by position in the compared codes.

Voting Filter

Select the check box to reveal the Max Number of Different Characters field.

When selected, this filter attempts to eliminate false multiple reads by comparing the number of different characters by position between two codes of the same type and length. This condition implicates that reading a code of the same type and length having very few different characters is probably a misread of the code itself and therefore the code read the least number of times should be ignored, (should not be considered as a multiple read of a different code).

This filter is based upon the following rules:

a multiple read condition occurs;

the two codes are of the same type;

the two codes have the same length;

the number of different characters by position is equal to or less than the number defined by the Max Number of Different Characters parameter;

Message Tx Selection (see section “Special Host Protocol: None” on page 135) must be set to After Reading Phase Off.

Filter Out Low Height Codes

Select the check box to reveal the Minimum Readings Difference Between Scanners field.

Background: This option was developed for the airports systems where there are often tall bar height codes and low bar height codes with the same content attached to baggage. Travelers will often remove the large, tall bar height code, while leaving the smaller, low bar height codes attached to the bag. The next time they travel they may have multiple low bar height codes on their baggage plus the new tall bar height and low bar height codes for the new trip. This option instructs the system to ignore low bar height codes, which are likely read only once or twice, in favor of tall bar height codes, which will likely be read multiple times.

This is used in tunnel applications where multiple barcodes are read and there is a need to filter out one of the barcodes. If less than x number of scanners read the barcode, then it will be considered a NOREAD for that code.

Minimum Readings Difference Between Scanners

Enter the minimum number of scanners that must read a barcode for it to be considered a valid read.

Filter Out Single Readings

With the check box selected, if only 1 scanner reads a code it will be considered a NOREAD.

Strip Filter

Select the check box to display the Strip Filter Settings options. This is a second level filter that when enabled allows eliminating characters not managed by the host.

Strip Filter Settings



Strip All Non Printable Chars

Select the check box to remove all non- printable ASCII characters from the code (000-020 and 127).

Char(s) to be Stripped

Click to activate the *"Entering Text Using the Text Entry Tool" on page 43* and enter specific characters to be stripped from the code. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Strip Filter Collapse

Select the check box to remove the stripped characters from the code and, therefore, reduce the code length (collapsed). It can even be null.


Replacement Char

Click to activate the *"Entering Text Using the Text Entry Tool" on page 43* and enter the substitution character to replace all the stripped ones. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

2. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Logical Combination

When **Logical Combination** has been selected from the Code Combination drop-down list, the Barcode Configuration window reveals related input fields.

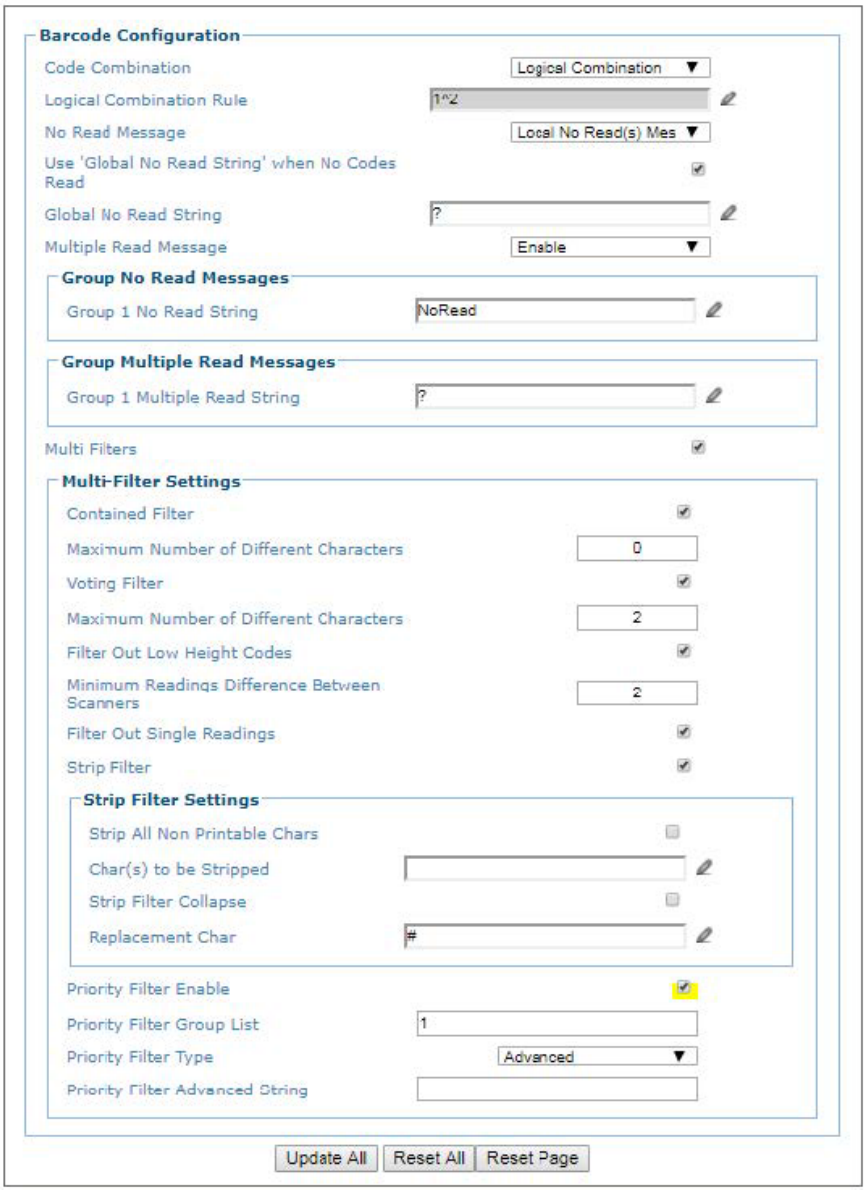


1. Enter the appropriate information in the form as described below:

Code Combination

Logical Combination has been selected.

Logical Combination Rule

Click  to activate the **code group** selection dialog box.

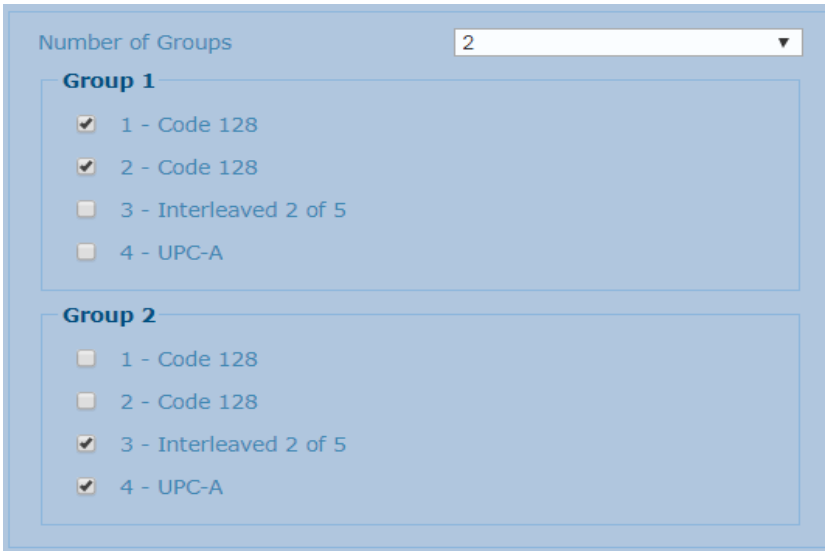

Select the number of groups you wish to use from the Number of Groups drop-down list. Then select the check box next to the Groups/Codes you wish to define. Click Submit to save your selections, or click Cancel to return to the origin window without saving.

The Group order defines the output message sequence, while each group identifies an expected codes within the selected group.

When editing the logical combination rule, proceed as follows:

1. Define the Barcode Settings indicating the type of expected code labels. It is possible to define up to 10 different code types; These codes should be selected in the Barcode Settings Table before Logical Combination is configured.

2. Define how many code types (groups) are expected by editing the combination rule through the following logical operators. Each group may include one or more selected code types.

    & = AND operator which separates a group from the previous/following one;
    ^ = XOR operator to be used to combine different code labels within the same group. It allows reading one of the defined code labels.
    The maximum number of groups to be defined for each rule string is 15.

If Local No Read Message is selected from the No Read Message drop-down list, the Group No Read Messages parameter is displayed. Define a Local No Read String for each group.

Examples: Logical Combination Rule

For all the following examples the No Read Message parameter is set to Global No Read Message.

Example 1

Code label setting#1 = Code 128

Logical Combination Rule = 1&1

Defines 2 groups, each of them expecting a Code 128 label.

Decoded Code Symbology		Output Message
First Label #1	Second Label #1	
---	---	<Header><Global No Read Message><Terminator>
X	---	<Header><Global No Read Message><Terminator>
---	X	<Header><Global No Read Message><Terminator>
X	X	<Header><Code 128 data><Data Packet Separator><Code 128 data><Terminator>



If Multiple Read Message is enabled and a third label belonging to the Code 128 symbology is decoded, the Multiple Read string is transmitted instead. If the Multiple Read Message is disabled, the third code label is ignored and only the first two codes are transmitted.

For advanced formatting, if the Send All Multiple Read Labels parameter is enabled, then all three labels are sent in the output message; the multiple read label is separated by its own Multiple Read Label Separator String which should be different from the Data Packet Separator (DPS).

Example 2

Code label setting#1 = Code 39

Code label setting#2 = Code 128

Logical Combination Rule = 1^2

Defines a single group expecting a Code 128 label OR a Code 39 label.

Decoded Code Symbology		Output Message
Label #1	Label #2	
---	---	<Header><Global No Read Message><Terminator>
X	---	<Header><Code 39 data><Terminator>
---	X	<Header><Code 128 data><Terminator>
X	X	<Header><First decoded code/Multiple Read Message string ><Terminator>

Example 3

Code label setting#1 = EAN 8

Code label setting#2 = UPC–A

Logical Combination Rule = 1&1&1^2

Defines three different groups. The first two groups expect an EAN 8 label while the third one expects an EAN 8 label OR an UPC–A label.

Decoded Code Symbology				Output Message
First Label #1	Second Label #1	Third-Label #1	Label #2	
---	---	---	---	<Header><Global No Read Message><Terminator>
X	---	---	---	<Header><Global No Read Message><Terminator>
---	X	---	---	<Header><Global No Read Message><Terminator>
---	---	X	---	<Header><Global No Read Message><Terminator>
---	---	---	X	<Header><Global No Read Message><Terminator>
X	X	X	---	<Header><EAN 8 data><DPS><EAN 8 data><DPS><EAN 8 data><Terminator>
X	X	---	X	<Header><EAN 8 data><DPS><EAN 8 data><DPS><U{PD-A data><Terminator>
X	X	X	X	<Header><EAN 8 data><DPS><EAN 8 data><DPS><First decoded code/Multiple Read Message string><Terminator>

Example 4

Code label setting#1 = Code 93

Code label setting#2 = Interleaved 2/5

Code label setting#3= EAN-8

Code label setting#4= UPC-A

Logical Combination Rule = 1^2&3^4

Defines 2 groups, each of them expecting one of the defined code types. The first group may expect a Code 93 label or an Interleaved 2/5 label. The second group may expect an EAN-8 label or an UPC-A label.

Decoded Code Symbology				Output Message
Label #1	Label #2	Label #3	Label #4	
---	---	---	---	<Header><Global No Read Message><Terminator>
X	---	---	---	<Header><Global No Read Message><Terminator>
---	X	---	---	<Header><Global No Read Message><Terminator>
---	---	X	---	<Header><Global No Read Message><Terminator>
---	---	---	X	<Header><Global No Read Message><Terminator>
X	X	---	---	<Header><Global No Read Message><Terminator>
X	---	X	X	<Header><Code93><DPS>< First decoded code/Multiple Read Message string><Terminator>
X	X	X	---	<Header><First decoded code/Multiple Read Message string><DPS><EAN 8 data><Terminator>
---	X	X	X	<Header>< Interleaved 2/5 data><DPS>< First decoded code/Multiple Read Message string ><Terminator>
X	---	X	---	<Header><Code 93 data><DPS><EAN 8 data><Terminator>


X	---	---	X	<Header><Code 93 data><DPS><UPC-A data><Terminator>
---	X	X	---	<Header><Interleaved 2/5 data><DPS><EAN 8 data><Terminator>
---	X	---	X	<Header><Interleaved 2/5 data><DPS><UPC-A data><Terminator>
X	X	X	X	<Header><First decoded code/Multiple Read Message string><DPS>< First decoded code/Multiple Read Message string ><Terminator>

No Read Message

Select Disable No Read Message, Global No Read Message, or Local No Read(s) Message from the drop-down list. The No Read condition occurs whenever a code cannot be read or decoded.

Disable No Read Message: The No Read Message is not transmitted.
Global No Read Message: The No Read String will be sent if the scanner is unable to decode one or more barcodes in the reading phase.
Local No Read(s) Message: This option is useful when one or more codes are not read in the reading phase or when more codes than the expected number set by the configuration parameters are read.

If working in Logical Combination mode, this option reveals Group No Read Messages fields, which allows entering group no read strings.

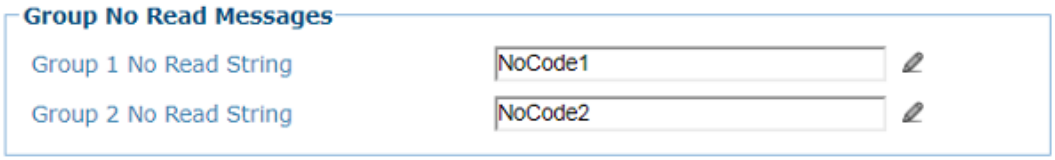

Use 'Global No Read String' when No Codes Read

Select the check box to allow the Global No Read String to be used if no codes at all are read. This option is not available when Global No Read Message is selected from the No Read Message drop-down list.

Global No Read String (max. 128 chars)


Click to activate the Text Entry Tool and create a string to be displayed when Global No Read Message is selected from the No Read Message drop-down list. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Multiple Read Message

Select Disable or Enable from the drop-down list. This string will be sent if, during the reading phase, the scanner reads more than the number of the expected barcodes set by the configuration parameters.

If Disable No Read Message or Global No Read Message is selected from the No Read Message drop-down list, this string will be sent if, during the reading phase, the scanner reads more than the number of the expected barcodes set by the configuration parameters.

If Local No Read(s) Message is selected from the No Read Message drop-down list, the Group Multiple Read Message fields appears, allowing the user to enter strings for each Group

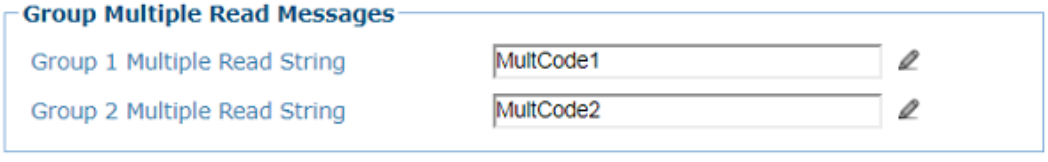

Multiple Read String (max. 128 chars)

Click to activate the Text Entry Tool and create a string to be displayed in case of Multiple Read Message. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

This parameter is only available when Multiple Read Message is enabled and the No Read Message selection is different from Local No Read(s) String. It is possible to select either the ASCII or HEX value. If disabled, the scanner transmits the first code read.

Send All Multiple Read Labels

Select Enable or Disable. For Advanced Data Formats only, by enabling this parameter all multiple read labels will be included in the output message. They can be separated by the Multiple Read Separator.

Multiple Read Label Separator String (max. 128 chars):

The Multiple Read Label Separators (up to 128 bytes) are used to separate multiple read barcodes in the reading phase.


This is meaningful when the Code Combination parameter is set to Multi Label or Logical Combination and the Send All Multiple Read Labels parameter has been enabled.

If selected, they occur within the Code Field and are transmitted after each decoded multiple read barcode.

Multi Filters

Select the check box to display the Multi-Filter Settings options.

Multi-Filter Settings

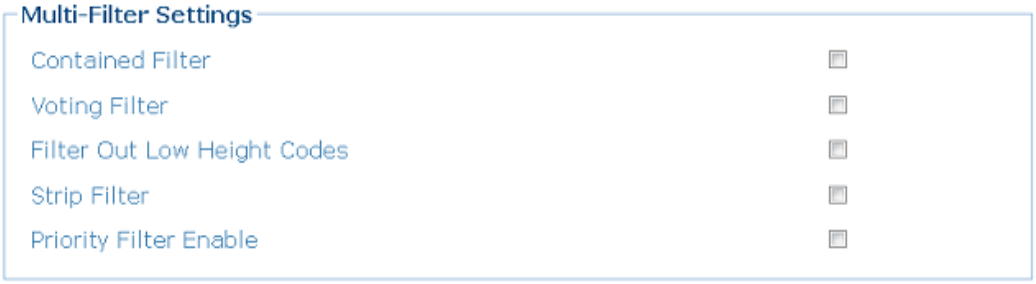

Contained Filter

Select the check box to reveal the Max Number of Different Characters field.

When checked, this filter attempts to eliminate false multiple reads by determining if a short code read is "contained in" (is a sub-string of), another longer code read. This condition implicates that the short code is probably a misread of the same longer code and therefore should be ignored, (should not be considered as a multiple read of a different code).

This filter is based upon the following rules:

a multiple read condition occurs

all decoded codes of the same type are compared with each other

Rule 1: the shorter code is considered contained in the longer code if the character string is found in the same order; the longer code may have a single block of characters in any position (before, after or in between the compared strings)

Example: The code 123456 is considered contained in the following codes: 00123456, 12345600, 12378456.

The code 123456 is not considered contained in the following codes: 12346507 (string out of order), 12345700 (string not complete), 120378456 or 0012345600 (multiple blocks in the string).

Rule 2: the shorter code is not filtered by rule 1. In the longer code, all possible sub-strings of the same length as the shorter code string are compared with the shorter code string. The shorter code is considered contained in the longer code if the number of different characters between the compared codes is less than or equal to the Max Number of Different Characters. The shorter code will be filtered by rule 2.

If Max Number of Different Characters = 1:

The code 123456 is considered contained in the following codes: 12305600, 00123056, 8812305688 because there is only one different character in the compared string.

The code 123456 is not considered contained in 123066789 because there are two different characters in the compared string.



If the Contained Filter parameter is used when Message Tx Selection is set to On Decoding, the filter conditions may be satisfied before the reading phase ends resulting in possible successive multiple read errors.

Max Number of Different Characters

Enter a value from 0 to 5 in the field provided to define the maximum number of different characters allowed to still consider a code as being included in another one and therefore to be filtered.

If the number of different characters between the compared codes exceeds the value of this parameter, the codes are considered as different and will not be filtered (a multiple read of a different code occurs).

If the number of different characters between the compared codes is less than or equal to the value of this parameter, the short code is considered as a sub-string of the longer code and will be filtered (no multiple read occurs).

If Max Number of Different Characters = 2:

The code 123456 read once, is considered the same as the following codes read multiple times: 133056, 123546, 123457 because there are two or less different characters by position in the compared codes.

The code 123456 read once, is not considered the same as the following codes read multiple times: 153246, 103057, 654321 because there are at least three different characters by position in the compared codes.

Voting Filter

Select the check box to reveal the Max Number of Different Characters field.

When checked, this filter attempts to eliminate false multiple reads by comparing the number of different characters by position between two codes of the same type and length. This condition implicates that reading a code of the same type and length having very few different characters is probably a misread of the code itself and therefore the code read the least number of times should be ignored, (should not be considered as a multiple read of a different code).

This filter is based upon the following rules:

a multiple read condition occurs;
the two codes are of the same type;
the two codes have the same length;
the number of different characters by position is equal to or less than the number defined by the Max Number of Different Characters parameter;
Message Tx Selection must be set to After Reading Phase Off.

Max Number of Different Characters

Enter a value from 0 to 5 in the field provided to define the maximum number of different characters allowed to still consider a code as being included in another one and therefore to be filtered.

If the number of different characters between the compared codes exceeds the value of this parameter, the codes are considered as different and will not be filtered (a multiple read of a different code occurs).

If the number of different characters between the compared codes is less than or equal to the value of this parameter, the short code is considered as a sub-string of the longer code and will be filtered (no multiple read occurs).

Examples:

If Max Number of Different Characters = 2:

The code 123456 read once, is considered the same as the following codes read multiple times: 133056, 123546, 123457 because there are two or less different characters by position in the compared codes.

The code 123456 read once, is not considered the same as the following codes read multiple times: 153246, 103057, 654321 because there are at least three different characters by position in the compared codes.

Filter Out Low Height Codes

Select the check box to reveal the Minimum Readings Difference Between Scanners field.

Background: This option was developed for the airports systems where there are often tall bar height codes and low bar height codes with the same content attached to baggage. Travelers will often remove the large, tall bar height code, while leaving the smaller, low bar height codes attached to the bag. The next time they travel they may have multiple low bar height codes on their baggage plus the new tall bar height and low bar height codes for the new trip.

This option instructs the system to ignore low bar height codes, which are likely read only once or twice, in favor of tall bar height codes, which will likely be read multiple times.

This is used in tunnel applications where multiple barcodes are read and there is a need to filter out one of the barcodes. If less than x number of scanners read the barcode, then it will be considered a NOREAD for that code.

Minimum Readings Difference Between Scanners

Enter the minimum number of scanners that must read a barcode for it to be considered a valid read.

Filter Out Single Readings

With the check box selected, if only 1 scanner reads a code it will be considered a NOREAD.

Strip Filter

Select the check box to display the Strip Filter Settings options. This is a second level filter that when enabled allows eliminating characters not managed by the host.

Strip Filter Settings



Strip All Non Printable Chars

Select the check box to remove all non- printable ASCII characters from the code (000-020 and 127).

Char(s) to be Stripped

Click to activate the Text Entry Tool and enter specific characters to be stripped from the code. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Strip Filter Collapse

Select the check box to remove the stripped characters from the code and, therefore, reduce the code length (collapsed). It can even be null.

Replacement Char

If Strip Filter Collapse is not selected, click to activate the Text Entry Tool and enter the substitution character to replace all the stripped ones. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text

Priority Filter Enable

Select the check box to display the Priority Filter options. This function allows the user to prioritize barcodes.

Example:

If there is a message with a field that should contain one of multiple code types (for example, Code128, Code39 and I2of5). In this field, the user wants:

If Code 128 is read, it goes in the field (any code39 and I2of5 are ignored)

If Code 128 is not read – if Code39 is read, it goes in the field (and I2of5 is ignored)

If Code 128 and Code30 are not read – if i2of5 is read, it goes in the field.

Priority Filter Group List

Enter the Group List in the field provided. This field defines the specific Logical Combination groups to which the Priority Filter will apply. The groups are numbered according to the order in which they are listed (from left to right) in the Logical Combination Rule parameter.

Format: Group Number(s) separated by the comma character

Example:

1,3 means the Priority Filter is applied to Logical Groups 1 and 3. Logical Group 2 will not have the Priority Filter applied, however it will follow the normal rules of code analysis, and if selected, the Strip Filter parameters will apply.

Priority Filter Type

Select Normal or Advanced from the drop-down list.

Description:

Normal: Uses the Logical Combination Rule string to define the priority

Advanced: Uses the Priority Filter Advanced String to define the priority. Advanced type allows the priority filter to essentially take "priority" over the Logical Combination Rule string.

NORMAL

When the Priority Filter Type is set to Normal, the operators used in the Logical Combination Rule string have the following meaning:

& = AND operator which separates a group from the previous/following one;

^ = The priority is given to the code label indicated to the left of the operator. If this code is read, the group is in Good Read independent from any other code in the same group.

Example:

Logical Combination Rule = 1^2&5^3^4&6^7 (3 groups)

Results Without Priority Filter:

Group 1 – read either code 1 or 2 = Good Read; read both code 1 and 2 = Multiple Read

Group 2 – read either code 5 or 3 or 4 = Good Read; read any combination = Multiple Read

Group 3 – read either code 6 or 7 = Good Read; read both code 6 and 7 = Multiple Read

Results With Priority Filter:

Filter Enabled on Groups = 1,2

Group 1 – read code 1 = Good Read independent from reading code 2

Group 2 – read code 5 = Good Read independent from reading code 3 or 4; read code 3 = Good Read independent from reading code 4

Group 3 – read either code 6 or 7 = Good Read; read both code 6 and 7 = Multiple Read

ADVANCED

When the Priority Filter Type is set to Advanced, the Priority Filter Advanced String applies to the Logical Combination Groups. This string must correspond to the order of the groups defined in the Logical Combination Rule string.

The following operators can be used:

& = Code group separator. This operator separates a group from the previous/following one;
^ = The priority is given to the code label indicated to the left of this operator. If this code is read, the group is in Good Read independent from any other code in the same group.
| = Equal priority operator (vertical line). Codes separated by this operator have the same priority and if both codes are read a Multiple Read will result.

The only difference from the implicit pattern string of the Normal (default) case when the Logical Combination Rule string is used, is the Equal Priority operator.

Example:

Logical Combination Rule = 1^2&5^3^4&8^6^7 (3 groups)

Results Without Priority Filter:

Group 1 – read either code 1 or 2 = Good Read; read both code 1 and 2 = Multiple Read
Group 2 – read either code 5 or 3 or 4 = Good Read; read any combination = Multiple Read
Group 3 – read either code 8 or 6 or 7 = Good Read; read any combination = Multiple Read

Results With Priority Filter:

Filter Enabled on Groups = 1,3

Filter Type =Custom

Custom Filter Pattern String = 1^2&8^6|7 (2 groups)

Group 1 – read code 1 = Good Read independent from reading code 2

Group 2 – read either code 5 or 3 or 4 = Good Read; read any combination = Multiple Read

Group 3 – read code 8 = Good Read independent from reading code 6 or 7; no read on code 8 and read either code 6 or 7 = Good Read; no read on code 8 and read both code 6 and 7 = Multiple Read


Priority Filter Advanced String

Enter the character string (see above).

2. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Barcode Configuration | Code Collection

When Code Collection has been selected from the Code Combination drop-down list, the Barcode Configuration window reveals related input fields.

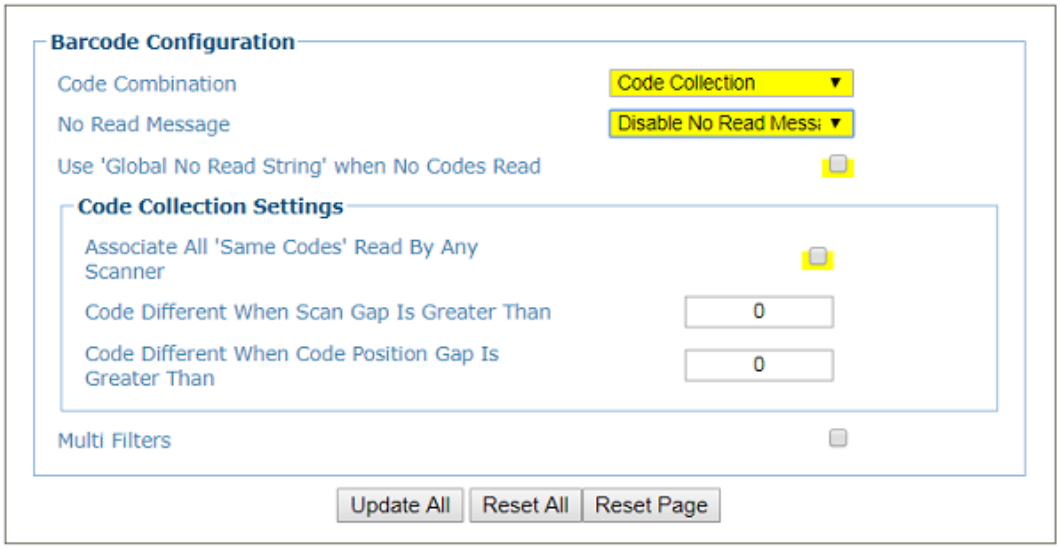

1. Enter the appropriate information in the form as described below:

Code Combination – Code Collection has been selected.

No Read Message

Select Disable No Read Message, Global No Read Message, or Local No Read(s) Message from the drop-down list. The No Read condition occurs whenever a code cannot be read or decoded.

Disable No Read Message: The No Read Message is not transmitted.
Global No Read Message: The No Read String will be sent if the scanner is unable to decode one or more barcodes in the reading phase.
Local No Read(s) Message: This option is useful when one or more codes are not read in the reading phase or when more codes than the expected number set by the configuration parameters are read.


Use 'Global No Read String' when No Codes Read

Select the check box to allow the Global No Read String to be used if no codes at all are read. This option is not available when Global No Read Message is selected from the No Read Message drop-down list.

Global No Read String (max. 128 chars)

Click  to activate the Text Entry Tool and create a string to be displayed when Global No Read Message is selected from the No Read Message drop-down list. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Code Collection Settings

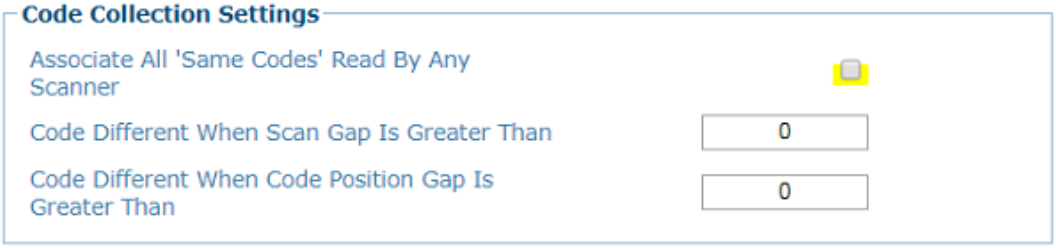

Associate All Same Codes When Read By Any Scanner

Select the check box to enable this function, which eliminates duplicate codes from a single scanner.




The next two options are only available when the Operating Mode is set to On Line and the Associate All "Same Codes" Read By Any Scanner is unchecked.

Code Different When Scan Cap is Greater Than

Enter a minimum distance in mm which is required for the system to consider the next code a different one.

The parameter set to 0 means the filter is disabled: when there is no scan gap all the consecutive codes read will be considered as only one code. This defines the gap between two packages.

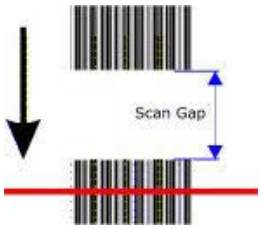

Code Different when Code Position Gap is Greater Than


Enter a minimum distance in mm which is required for the system to consider the next code a different one. This defines the gap between two bar codes.

This parameter is available only when the Code Combination parameter is set to Code Collection and the scanner role is Master. If enabled, it allows transmitting all codes belonging to the same programmed Slot (same symbology and content) but read by different scanners (including the Master) in a single instance.

Scanner Role:

Master SYNCHRONIZED: The scanner is connected as a Master in a master/slave synchronized configuration.
Slave SYNCHRONIZED: The scanner is connected as a Salve in a master/slave synchronized configuration. (See note below.)
Other: This selection is for a stand-alone scanner.


The parameter set to 0 means the filter is disabled: when there is no code position gap all the consecutive codes read will be considered as only one code.



Multi Filters

Select the check box to display the Multi-Filter Settings options.

Multi-Filter Settings

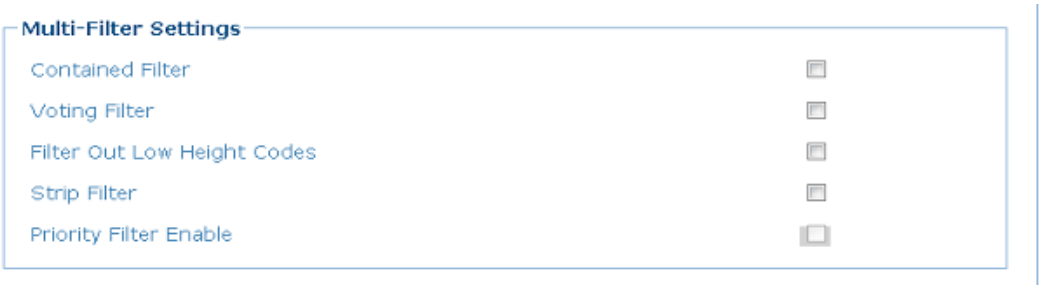

Contained Filter

Select the check box to reveal the Max Number of Different Characters field.

When checked, this filter attempts to eliminate false multiple reads by determining if a short code read is "contained in" (is a sub-string of), another longer code read. This condition implicates that the short code is probably a misread of the same longer code and therefore should be ignored, (should not be considered as a multiple read of a different code).

This filter is based upon the following rules:

a multiple read condition occurs

all decoded codes of the same type are compared with each other

Rule 1: the shorter code is considered contained in the longer code if the character string is found in the same order; the longer code may have a single block of characters in any position (before, after or in between the compared strings)

Example: The code 123456 is considered contained in the following codes: 00123456, 12345600, 12378456.

The code 123456 is not considered contained in the following codes: 12346507 (string out of order), 12345700 (string not complete), 120378456 or 0012345600 (multiple blocks in the string).

Rule 2: the shorter code is not filtered by rule 1. In the longer code, all possible sub-strings of the same length as the shorter code string are compared with the shorter code string. The shorter code is considered contained in the longer code if the number of different characters between the compared codes is less than or equal to the Max Number of Different Characters. The shorter code will be filtered by rule 2.

Example:

If Max Number of Different Characters = 1:

The code 123456 is considered contained in the following codes: 12305600, 00123056, 8812305688 because there is only one different character in the compared string.

The code 123456 is not considered contained in 123066789 because there are two different characters in the compared string.



If the Contained Filter parameter is used when Message Tx Selection (see section) is set to On Decoding, the filter conditions may be satisfied before the reading phase ends resulting in possible successive multiple read errors.

Max Number of Different Characters

Enter a value from 0 to 5 in the field provided to define the maximum number of different characters allowed to still consider a code as being included in another one and therefore to be filtered.

If the number of different characters between the compared codes exceeds the value of this parameter, the codes are considered as different and will not be filtered (a multiple read of a different code occurs).

If the number of different characters between the compared codes is less than or equal to the value of this parameter, the short code is considered as a sub-string of the longer code and will be filtered (no multiple read occurs).

If Max Number of Different Characters = 2:

The code 123456 read once, is considered the same as the following codes read multiple times: 133056, 123546, 123457 because there are two or less different characters by position in the compared codes.

The code 123456 read once, is not considered the same as the following codes read multiple times: 153246, 103057, 654321 because there are at least three different characters by position in the compared codes.

Voting Filter

Select the check box to reveal the Max Number of Different Characters<XREF> field.

When checked, this filter attempts to eliminate false multiple reads by comparing the number of different characters by position between two codes of the same type and length. This condition implicates that reading a code of the same type and length having very few different characters is probably a misread of the code itself and therefore the code read the least number of times should be ignored, (should not be considered as a multiple read of a different code).

This filter is based upon the following rules:

a multiple read condition occurs;
the two codes are of the same type;
the two codes have the same length;
the number of different characters by position is equal to or less than the number defined by the Max Number of Different Characters parameter;
Message Tx Selection (see section) must be set to After Reading Phase Off.

Max Number of Different Characters

Enter a value from 0 to 5 in the field provided to define the maximum number of different characters allowed to still consider a code as being included in another one and therefore to be filtered.

If the number of different characters between the compared codes exceeds the value of this parameter, the codes are considered as different and will not be filtered (a multiple read of a different code occurs).

If the number of different characters between the compared codes is less than or equal to the value of this parameter, the short code is considered as a sub-string of the longer code and will be filtered (no multiple read occurs).

If Max Number of Different Characters = 2:

The code 123456 read once, is considered the same as the following codes read multiple times: 133056, 123546, 123457 because there are two or less different characters by position in the compared codes.

The code 123456 read once, is not considered the same as the following codes read multiple times: 153246, 103057, 654321 because there are at least three different characters by position in the compared codes.

Filter Out Low Height Codes

Select the check box to reveal the Minimum Readings Difference Between Scanners field.

Background: This option was developed for the airports systems where there are often tall bar height codes and low bar height codes with the same content attached to baggage. Travelers will often remove the large, tall bar height code, while leaving the smaller, low bar height codes attached to the bag. The next time they travel they may have multiple low bar height codes on their baggage plus the new tall bar height and low bar height codes for the new trip.

This option instructs the system to ignore low bar height codes, which are likely read only once or twice, in favor of tall bar height codes, which will likely be read multiple times.

This is used in tunnel applications where multiple barcodes are read and there is a need to filter out one of the barcodes. If less than x number of scanners read the barcode, then it will be considered a NOREAD for that code.

Minimum Readings Difference Between Scanners

Enter the minimum number of scanners that must read a barcode for it to be considered a valid read.

Filter Out Single Readings

With the check box selected, if only 1 scanner reads a code it will be considered a NOREAD.

Strip Filter

Select the check box to display the Strip Filter Settings options. This is a second level filter that when enabled allows eliminating characters not managed by the host.

Strip Filter Settings



Strip All Non Printable Chars

Select the check box to remove all non- printable ASCII characters from the code (000-020 and 127).

Char(s) to be Stripped

Click to activate the Text Entry Tool and enter specific characters to be stripped from the code. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Strip Filter Collapse

Select the check box to remove the stripped characters from the code and, therefore, reduce the code length (collapsed). It can even be null.

Replacement Char

If Strig Filter Collapse is not selected, click  to activate the Text Entry Tool and enter the substitution character to replace all the stripped ones. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

2. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Serial Ports

Use the Serial Ports menu tree selections during initial setup to configure any serial ports used by your barcode scanning system. If necessary, you can later make modifications to the global system settings using the same menu selections, including:

“Main Serial Port” on page 102


“Aux Serial Port” on page 105

Main Serial Port

Use the **Main Port** window to configure communication between the scanner and a Host, in a multi-sided layout, between the Master (scanner/controller) and a Host.

To edit the Main Serial Port settings:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Serial Ports** | **Main Serial Port**. The Main Port window opens.

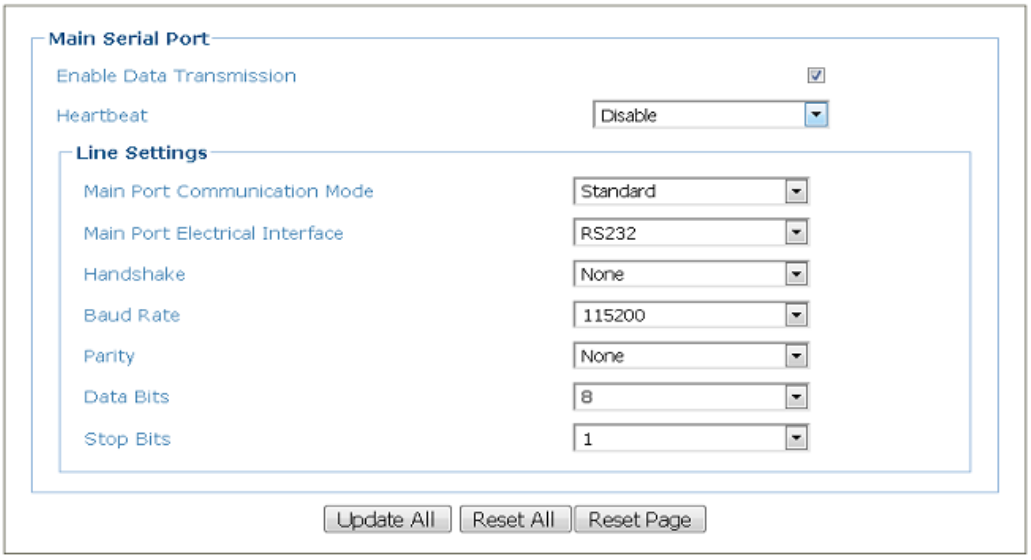

2. Enter the appropriate information in the form as described below:

Enable Data Transmission

Select the check box to enabled Data Tx. If selected, the Main Serial Port channel is used by the scanner to transmit data and/or messages.

Heartbeat

Select Disable, Enable Unconditioned, or Enable Conditioned from the drop-down list. This parameter is available when the Data TX parameter is checked. It enables/disables the transmission of the Heartbeat message signaling that the device is still active.

Disable: The Heartbeat message is not transmitted
Enable Unconditioned: The Heartbeat message is always transmitted, even if communication is still active
Enable Conditioned: The Heartbeat message is transmitted only when there is no communication

Heartbeat Settings



Heartbeat Timeout

Enter a time value in seconds to define the amount of time between two message transmissions. If the input timeout expires and no transmission has occurred, the Heartbeat message will be transmitted.

Heartbeat Message (max. 32 chars)

Click to activate the Text Entry Tool and create heartbeat header text to signal the beginning of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can

be used. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

The Heartbeat Message (header) string must be different from the Heartbeat Terminator string.

Heartbeat Terminator (max. 32 chars)

Click to activate the Text Entry Tool and create Heartbeat Terminator text to signal the end of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

The Heartbeat Terminator string must be different from the Heartbeat Message (header) string.

Send Failure Bitmap

Select the check box to include a Failure Bitmap in the heartbeat message. The Failure Bitmap is the information pertaining to any error that may be encountered by the scanner. This message may be transmitted in the following format.

Failure Bitmap Format


Select the format of the Failure Bitmap from the drop-down.

Decimal (ASCII)
Hexidecimal (ASCII)
Bitmap (ASCII
Numeric (Binary)

Failure Bitmap Size

Select the size fo the Failure Bitmap from the drop-down. Options are, Variable, or 1-32.

Line Settings

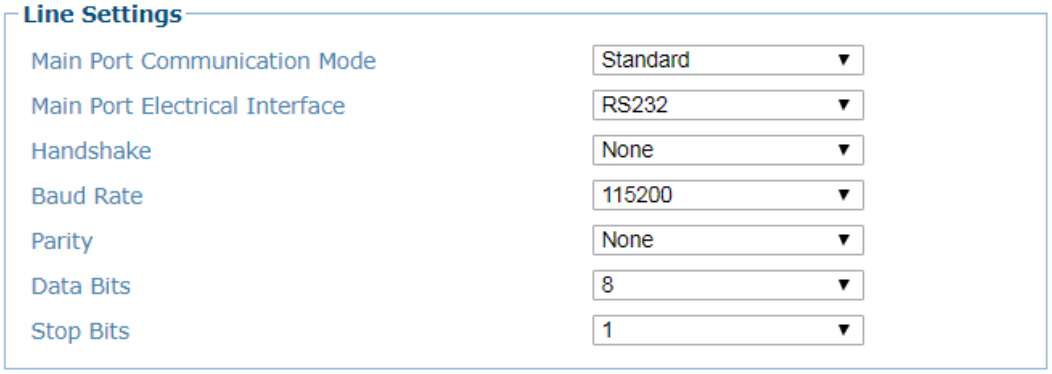

Main Port Communication Mode

Select Standard or Siemens 3964 from the drop-down list.

Siemens 3964: The procedure 3964(R) adds control characters (security layer) to the information data when transferring it. These control characters enable the communication partner to check whether the data has been received in full and without any errors. The procedures 3964(R) evaluate the following control characters:

Control characters	Meaning
STX	Start of Text
DLE	Data Link Escape
ETX	End of Text
BCC	Block Check Character (only 3964R/RK512)
NAK	Negative Acknowledge

Main Port Electrical Interface

Select RS232 or RS422 full duplex from the drop-down list. The Main serial interface is compatible with these available electrical standards.

Handshake

Select None, Hardware (RTS/CTS), or Software (Xon/Xoff) from the drop-down list. Handshake is a communication control used to protect against data loss, it can be achieved via hardware (RTS\CTS protocol) or software (Xon\Xoff protocol).

Baud Rate

Select a value from 1200 to 115200 from the drop-down list. Baud Rate is the transmission speed in a communication line.

Parity

Select None, Odd, or Even from the drop-down list. Parity is a parameter indicating the presence of a control bit in the communication protocol frame.

Checksum

Click the checkbox to enable a check digit representing the sum of the correct digits which can detect errors in the data. Only available for Siemens 3964.

Priority

Select Low or High from the drop-down list. Only available for Siemens 3964.

Data Bits

Select 7 or 8 from the drop-down list. Data Bits is a parameter indicating the number of bits composing the data packet of the communication protocol frame.

Stop Bits

Select 1 or 2 from the drop-down list. Stop Bits is a parameter indicating the number of stop bits in the data packet of the communication protocol frame.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Aux Serial Port

Use the **Aux Serial Port** window to configure communication through the Auxiliary Serial Port. For this communication mode, RS232 interface is automatically selected.

To edit the Aux Serial Port settings:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Serial Ports** | **Aux Serial Port**. The Aux Serial Port window opens.

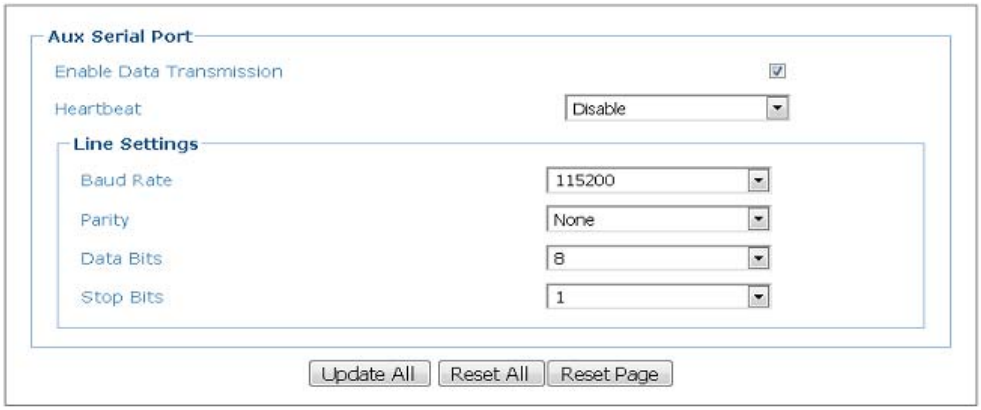

2. Enter the appropriate information in the form as described below:

Search for CBX BM100 at Device Startup

Select the check box to automatically search for a BM100 storage module when the scanner is powered on.

Only available if BM100 included.

Enable Data Transmission


Select the check box to enabled Data Tx. If selected, the Aux Serial Port channel is used by the scanner to transmit data and/or messages.

Heartbeat

Select Disable, Enable Unconditioned, or Enable Conditioned from the drop-down list. This parameter is available when the Data TX parameter is checked. It enables/disables the transmission of the Heartbeat message signaling that the device is still active.

Disable: The Heartbeat message is not transmitted
Enable Unconditioned: The Heartbeat message is always transmitted, even if communication is still active
Enable Conditioned: The Heartbeat message is transmitted only when there is no communication

Heartbeat Settings

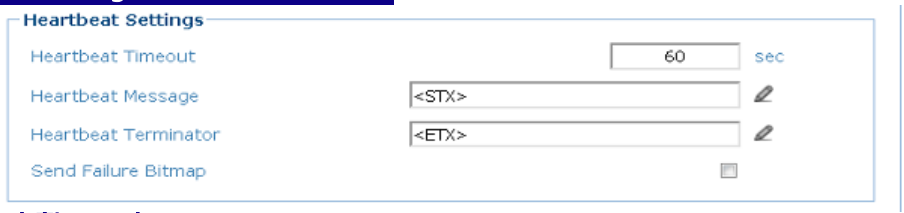

Heartbeat Timeout

Enter a time value in seconds to define the amount of time between two message transmissions. If the input timeout expires and no transmission has occurred, the Heartbeat message will be transmitted.

Heartbeat Message (max. 32 chars)

Click to activate the Text Entry Tool and create heartbeat header text to signal the beginning of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

The Heartbeat Message (header) string must be different from the Heartbeat Terminator string.

Heartbeat Terminator (max. 32 chars)

Click to activate the Text Entry Tool and create Heartbeat Terminator text to signal the end of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

The Heartbeat Terminator string must be different from the Heartbeat Message (header) string

Send Failure Bitmap

Select the check box to include a Failure Bitmap in the heartbeat message. The Failure Bitmap is the information pertaining to any error that may be encountered by the scanner. This message may be transmitted in the following format.

Failure Bitmap Format


Select the format of the Failure Bitmap from the drop-down.

Decimal (ASCII)
Hexidecimal (ASCII)
Bitmap (ASCII
Numeric (Binary)

Failure Bitmap Size

Select the size fo the Failure Bitmap from the drop-down. Options are, Variable, or 1-32.

Line Settings

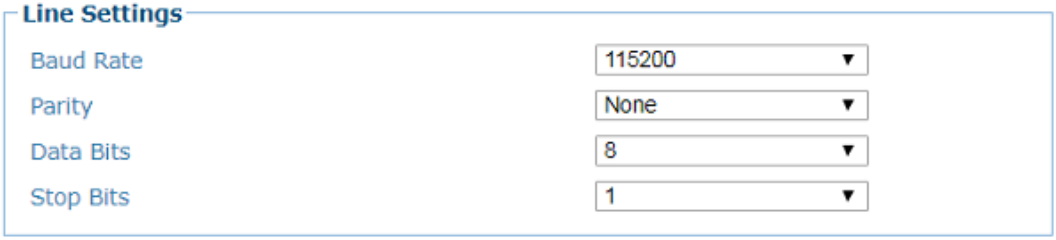

Baud Rate

Select a value from 1200 to 115200 from the drop-down list. Baud Rate is the transmission speed in a communication line.

Parity

Select None, Odd, or Even from the drop-down list. Parity is a parameter indicating the presence of a control bit in the communication protocol frame.

Data Bits

Select 7 or 8 from the drop-down list. Data Bits is a parameter indicating the number of bits composing the data packet of the communication protocol frame.

Stop Bits

Select 1 or 2 from the drop-down list. Stop Bits is a parameter indicating the number of stop bits in the data packet of the communication protocol frame.

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Ethernet

Use the **Ethernet** menu tree selections during initial setup to configure the Ethernet settings for your barcode scanning system.

Ethernet is the most popular physical layer LAN technology in use today. It is the IEEE 802.3 series standard, based on the CSMA/CD access method that provides two or more stations to share a common cabling system. This access method, Carrier Sense Multiple Access with Collision Detection, is the basis for Ethernet systems providing a wide range of speed.

The design goals for Ethernet are to create a simply defined topology that makes efficient use of shared resources that are easy to reconfigure and maintain and provides compatibility across many manufacturer and systems.

Ethernet supports many different network protocols; Datalogic scanners support IP plus TCP or UDP over Ethernet and 802.3 frame format as Ethernet protocol low level.

If necessary, you can later make modifications to the global system settings using the same menu selections, including:

Ethernet

“Ethernet | Line Settings” on page 108

“Ethernet | User Sockets” on page 110

“Ethernet | Ethernet_IP” on page 114


“Ethernet | WebSentinel” on page 118

Ethernet | Line Settings

Use the **Line Settings** window to define and report the fundamental information about the system.

To edit the Line Settings:

1. In the menu under Modify Settings, navigate to Global Settings | Ethernet | Line Settings. The Line Settings window opens.

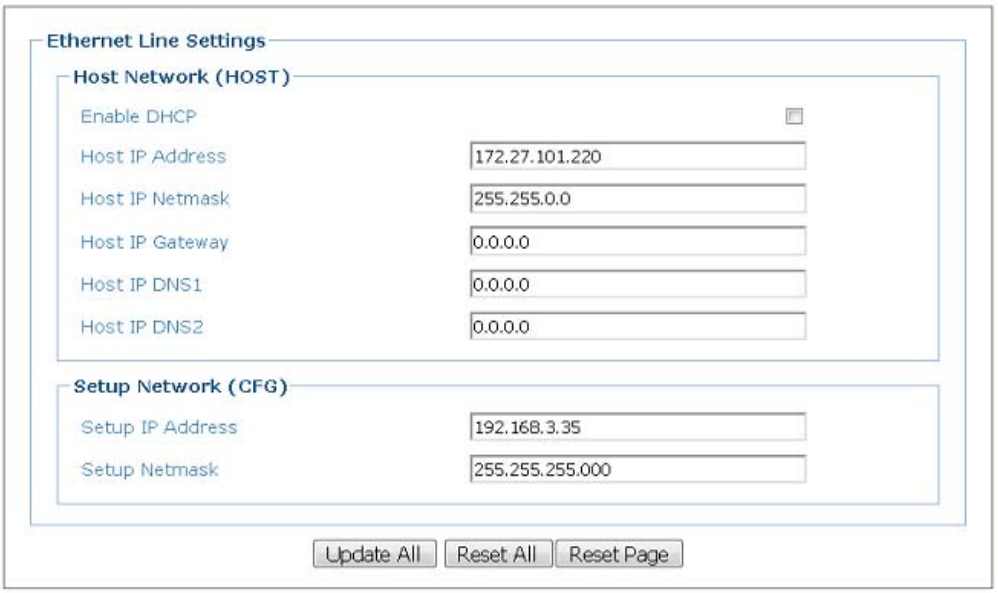

2. Enter the appropriate information in the form as described below:

Host Network (HOST)

Enable DHCP

Select the check box to cause the IP address parameters to become inactive. They are then used to display the addresses assigned by a DHCP server.

Host IP Address

Enter the Internet Protocol (IP) network address for ETH2 (Setup) in the field provided. Consult your network administrator to obtain a new address.



The next two fields are only available and necessary with redundant systems.

Working IP Address

Enter the Internet Protocol network address for the “Working” SC5000.

Protecting IP Address

Enter the Internet Protocol network address for the “Protecting” SC5000.

Host IP Netmask

Enter the device subnet mask address in the field provided. Consult your network administrator to obtain a new address.

Host IP Gateway

Enter the device gateway address in the field provided. Consult your network administrator to obtain a new address.

Host IP DNS1

Enter the address of the Primary Domain Name System (DNS) in the field provided.

Host IP DNS2

Enter the address of the Secondary Domain Name System (DNS) in the field provided.

Setup Network (CFG)
Setup IP Address

Enter the IP address for ETH2 (CFG) in the field provided. Consult your network administrator to obtain a new address.

Setup Netmask

Enter the subnet mask address for ETH2 (Setup) in the field provided. Consult your network administrator to obtain a new address.

Disable Config Net on Inactive SC5000



This field is only available and necessary with redundant systems.

Click the check-box to disable the config port on the inactive SC5000.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Ethernet | User Sockets

Use the **User Sockets** (User Socket Settings) window to setup, edit, and configure numbered user sockets for your barcode scanning system. User sockets are another interface available for Ethernet communication.

To edit the User Socket settings:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Ethernet** | **User Sockets**. The User Sockets window opens.

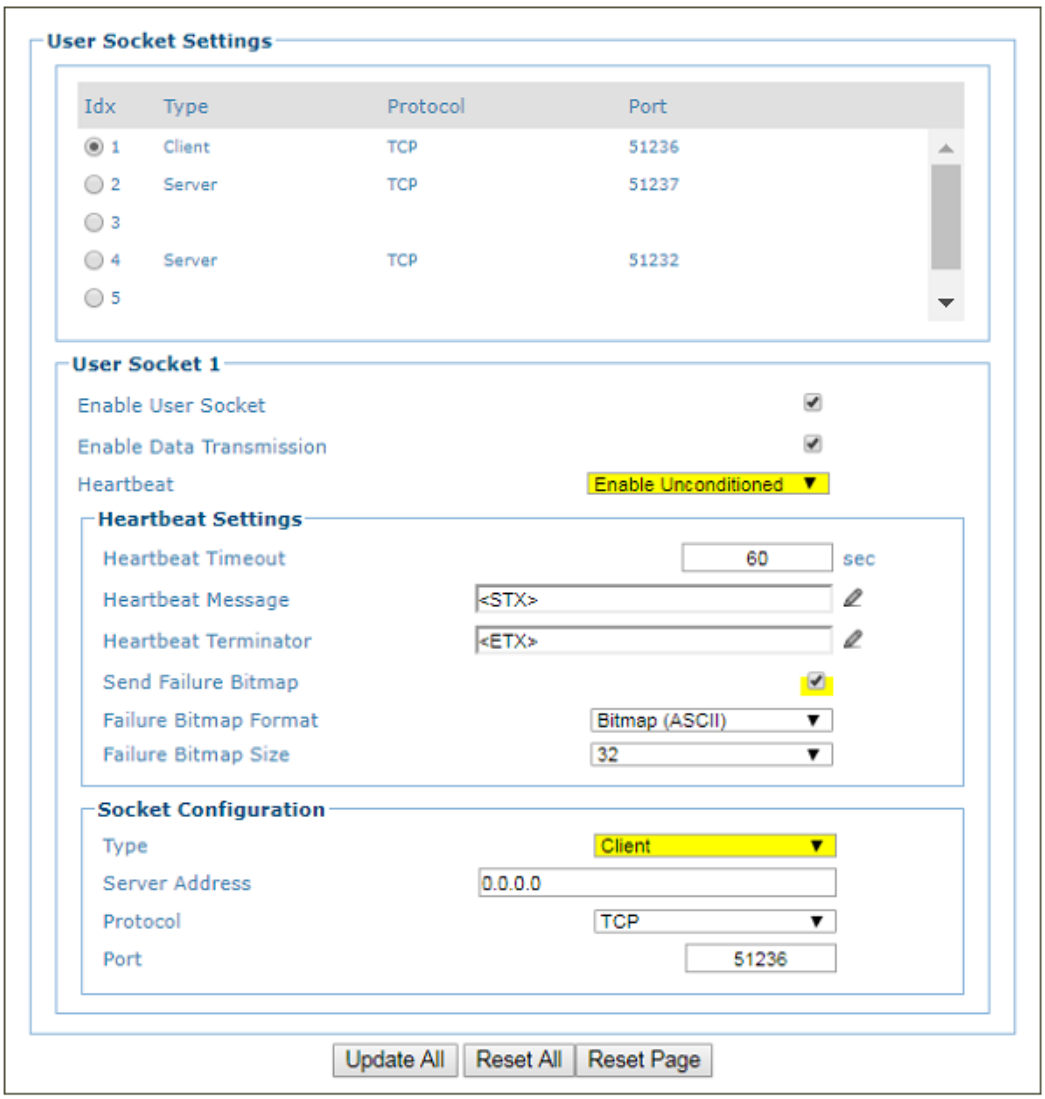

2. Enter the appropriate information in the form as described below:

User Socket List

Select an option button in the list at the top of this window to create a new user socket, or to edit an existing one.

Idx

Select the Idx for the row/user socket you wish to enter or edit.

If a row is disabled, a user socket can be selected and configured for that row.
If a user socket is displayed in the selected row, its configuration can be edited.

Type

The type of socket specified.

Protocol

The type of protocol specified.

Port

The port number specified.

User Socket n

Enable User Socket

Select the check box to enable User Sockets and reveal the related configuration options.

Enable Data Transmission

Select the check box to enable User Sockets and reveal the related configuration options. When enabled, Ethernet User Socket is selected as the channel to be used by the scanner for transmitting data and/or messages.

Heartbeat

Select Disable, Enable Unconditioned, or Enable Conditioned from the drop-down list. This parameter is available when the Data TX parameter is checked. It enables/disables the transmission of the Heartbeat message signaling that the device is still active.

Disable: The Heartbeat message is not transmitted
Enable Unconditioned: The Heartbeat message is always transmitted, even if communication is still active
Enable Conditioned: The Heartbeat message is transmitted only when there is no communication

Heartbeat Settings



Heartbeat Timeout

Enter a time value in seconds to define the amount of time between two message transmissions. If the input timeout expires and no transmission has occurred, the Heartbeat message will be transmitted.

Heartbeat Message (max. 32 chars)

Click to activate the Text Entry Tool and create heartbeat header text to signal the beginning of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

The Heartbeat Message (header) string must be different from the Heartbeat Terminator string.

Heartbeat Terminator (max. 32 chars)

Click to activate the Text Entry Tool and create Heartbeat Terminator text to signal the end of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

The Heartbeat Terminator string must be different from the Heartbeat Message (header) string

Send Failure Bitmap

Select the check box to include a Failure Bitmap in the heartbeat message.

Failure Bitmap Format

Select the Format of the Failure Bitmap from the drop-down. Options are; Decimal (ASCII), Hexidecimal (ASCII), Bitmap (ASCII) and Numeric (Binary

Failure Bitmap Size

Select the size of the Failure Bitmap from the drop-down; options are Variable, or 1-32.


Socket Configuration

Type

Select Server or Client from the drop-down list to define the type of the socket:

When the Protocol selected is TCP (see below):

Server: The station waits for connections and can communicate with a maximum of 3 clients simultaneously.

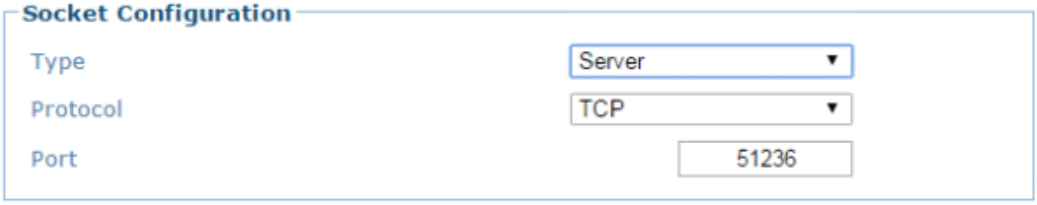


Client: The station tries a connection towards the server.



When the Protocol selected is UDP (see below):

Server: Special Datalogic mode in which the station waits to receive a message (content of message does not matter), then responds with UDP host messages to that client. You must enter a port number, and if using a fixed UDP destination port, you must enter the number for that port as well.

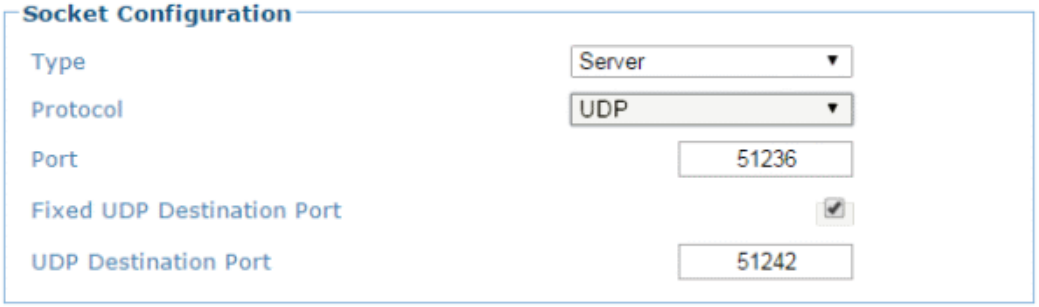

Client: Choose this option for standard UDP protocol. You must define the Server Address that will be receiving the UDP messages and port. If using a fixed UDP source port, you must enter the UDP source port number.



Server Address

Enter the IP address of the server to which the client tries to connect. This parameter is available only when the socket is configured as a Client.

Protocol

Select TCP (Transmission Control Protocol) or UDP (User Datagram Protocol) from the drop-down list to define the protocol to be used for the Ethernet communication.



When using the UDP protocol:

The User Socket Client Port is bound to the Server Port.

The maximum size for maintaining a whole datagram is 1436 bytes, messages exceeding this value will be fragmented.

Port

Enter the Port Number of the socket.

Fixed UDP Destination Port

When using UDP Server, select the check box to enable a fixed UDP Destination Port.

UDP Destination Port

When using UDP Server with a Fixed UDP Destination Port, enter the port number.

Fixed UDP Source Port

When using UDP Client, select the check box to enable a Fixed UDP Source Port.

UDP Source Port

When using UDP Client with a fixed UDP Source Port, enter the port number.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Ethernet | Ethernet_IP

Use the **Ethernet I/P** window to set up digital inputs and outputs for the barcode scanner.

To enable or disable Ethernet/IP:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Ethernet** | **Ethernet/IP**. The Ethernet/IP window opens.

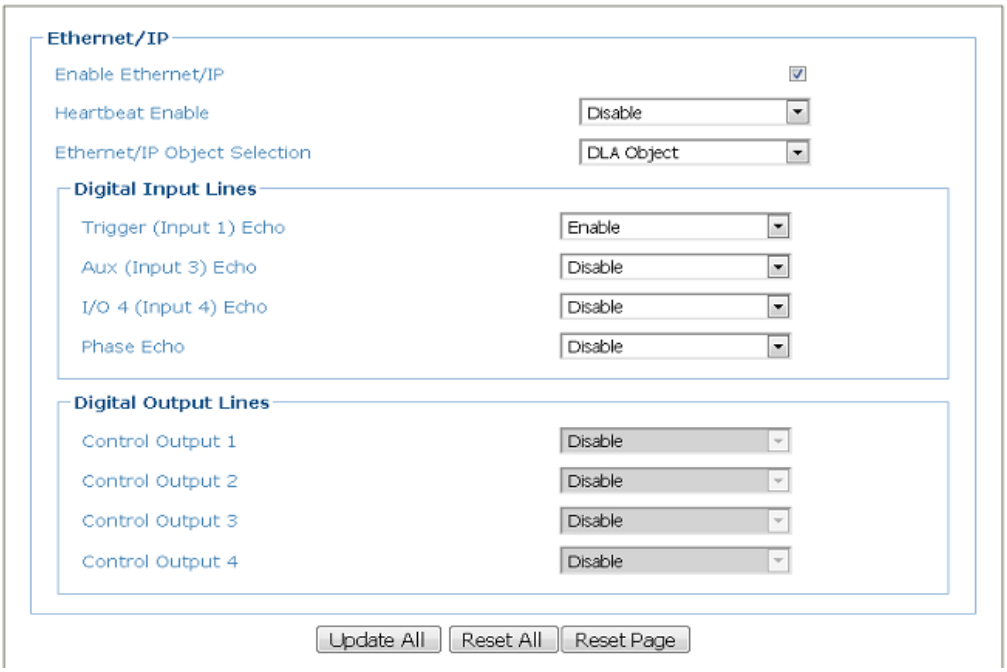

2. Enter the appropriate information in the form as described below:

Enable Ethernet/IP

Select the check box to enable Ethernet/IP and reveal the related configuration options.

Heartbeat Enable

Select from the drop-down; Disable, Enable Unconditioned, or Enable Conditioned.

Heartbeat Settings

Heartbeat Timeout

Enter a time value in seconds to define the amount of time between two message transmissions. If the input timeout expires and no transmission has occurred, the Heartbeat message will be transmitted.

Heartbeat Message (max.32 chars)

Click to activate the Text Entry Tool and create heartbeat header text to signal the beginning of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used.

The Heartbeat Message (header) string must be different from the Heartbeat Terminator string.

Heartbeat Terminator (max.32 chars)

Click to activate the Text Entry Tool and create Heartbeat Terminator text to signal the end of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used.

The Heartbeat Terminator string must be different from the Heartbeat Message (header) string.

Send Failure Bitmap

Select the check box to include a Failure Bitmap in the heartbeat message.

Failure Bitmap Format

Select the format of the Failure Bitmap from the drop-down. Options are; Decimal (ASCII), Hexidecimal (ASCII), Bitmap (ASCII) and Numeric (Binary).

Failure Bitmap Size


Select the size of the Failure Bitmap from the drop-down. Options are; Variable, or 1-32.

Ethernet/IP Object Selection

Select DLA Object or ASI Object from the drop-down list.

DLA Object - Refers to Datalogic Devices
ASI Object - Refers to legacy Accu-Sort Devices

DLA Object: Digital Input Lines

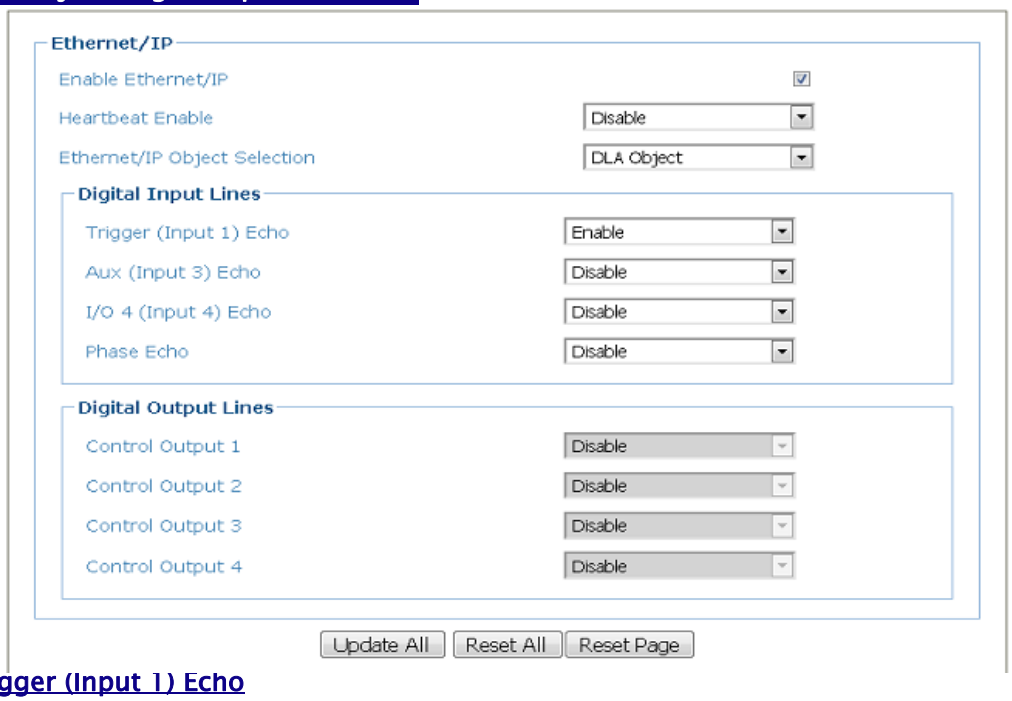

Trigger (Input 1) Echo

Select Disable or Enable from the drop-down list. If enabled, the Scanner Master or SC5000 Controller Trigger (Input 1) status is echoed to the Ethernet Client via bit 0 in Byte InputBits of the DL_InputStruct.

Aux (Input 3) Echo

Select Disable or Enable from the drop-down list. If enabled, the Scanner Master or SC5000 Controller Input 3 status is echoed to the Ethernet Client via bit 2 in Byte InputBits of the DL_InputStruct.

I/O 4 (Input 4) Echo


Select Disable or Enable from the drop-down list. If enabled, the Scanner Master or SC5000 Controller Input 4 status is echoed to the Ethernet Client via bit 3 in Byte InputBits of the DL_InputStruct.

Phase Echo

This parameter is configurable only if Start Input from Bus is enabled.

Select Disable or Enable from the drop-down list. If enabled, the Reading Phase status is echoed to the Ethernet Client via bit 7 in Byte InputBits of the DL_InputStruct.

ASI Object: On Demand Options

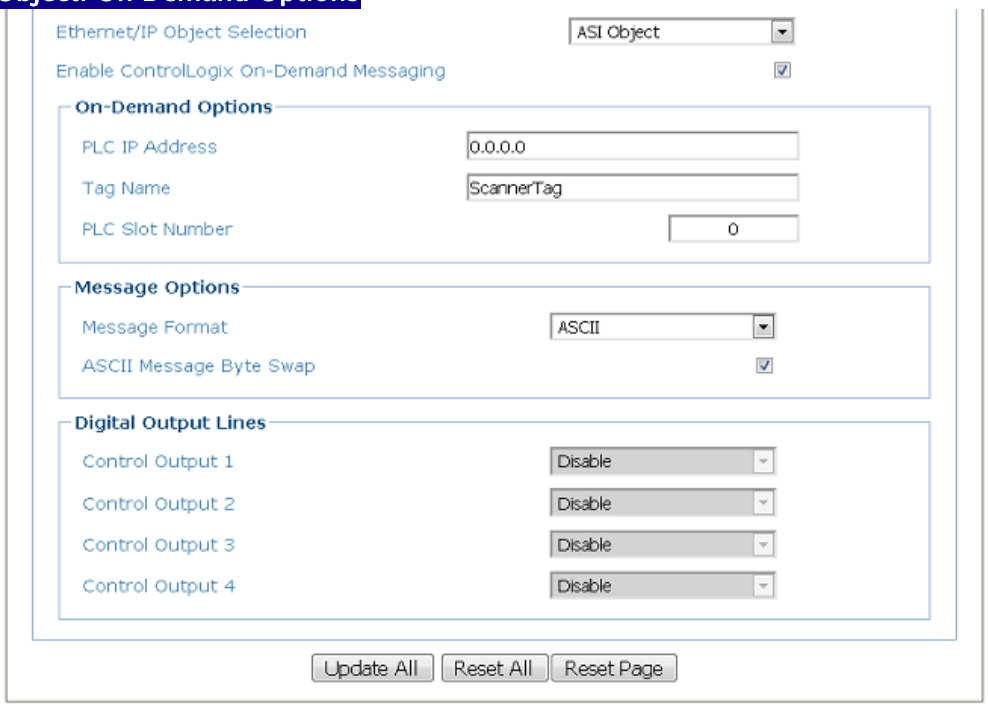

NOTE

Contact Datalogic Support for information on setting up ASI Objects (legacy Accu-Sort Devices). See Support Through the Website

Ethernet/IP Object Selection

Select DLA Object or ASI Object from the drop-down list.

DLA Object - Refers to Datalogic Devices
ASI Object - Refers to legacy Accu-Sort Devices

Enable ControlLogix On-Demand Messaging

Select the check box to enable On-Demand Messaging when ASI Object is selected.

ASI Object: On -Demand Options

Message Format

On-Demand Messaging is a special option for communicating with ControlLogix/CompactLogix Controllers. When enabled, you must provide the Controller IP Address, the Slot number of the processor in the Controller and a Tag Name. To use On-Demand messaging, a tag of the same name is then defined on the ControlLogix/CompactLogix Controller and every time a bar code is read, the Bar Code object is transferred to the ControlLogix/CompactLogix Tag.

PLC IP Address

Enter the IP Address for the PLC Controller (Rockwell Automation: Allen-Bradley Controllogix or CompactLogix).

Tag Name

Enter a tag name (up to 40 characters) in the field provided.

PLC Slot Number

Enter the PLC Slot number in the field provided. This corresponds to the physical slot used on the PLC.

ASI Object: Message Options

Message Format

Select ASCII or Binary from the drop-down list.

ASCII - Select to transmit an ASCII barcode message (as defined by the Message Type). The only difference is that the Header and Trailer are omitted from the barcode messages transmitted using EtherNet/IP. When ASCII messages are in use, the Byte Swap ASCII Data selection will swap the high and low byte of data within each 16 bit word. This is useful for processing data on some Programmable Controllers.
Binary - Select to convert barcode data to a “numeric value” and transferred

as a 32 bit word. The user can specify the byte ordering of this word. If any non-numeric (not ASCII '0' to '9' or leading or trailing space) characters are contained in the barcode, the numeric value is zero.

ASCII Message Byte Swap

Select the check box to enable the function. Available when Binary is selected from the Message Format drop-down list. When ASCII messages are in use, the ASCII Message Byte Swap selection will swap the high and low byte of data within each 16 bit word. This is useful for processing data on some Programmable Controllers.

Binary Message Byte Order


Select Little Endian or Big Endian from the drop-down list. Available when Binary is selected from the Message Format drop-down list.

Little Endian: The least significant byte (little end) of the data is positioned at the byte with the lowest address.
Big Endian: The most significant byte (big end) of the data is positioned at the byte with the lowest address.

Digital Output Lines

Control Output 1

This parameter is configurable only if Digital Output 1 Use is set to EthernetIP. Select Disable or Enable from the drop-down list. If enabled, it allows the Ethernet Client to drive the Scanner Master or SC5000 Controller Output 1 via bit 0 in Byte OutputBits of the DL_OutputStruct.

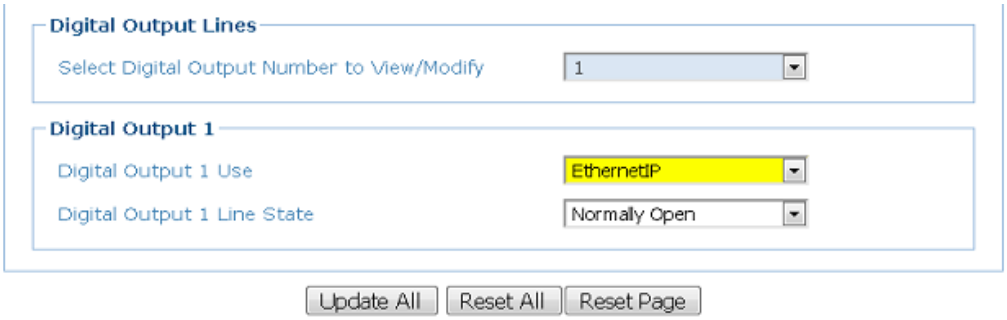

Control Output 2

This parameter is configurable only if Digital Output 2 Use is set to EthernetIP. Select Disable or Enable from the drop-down list. If enabled, it allows the Ethernet Client to drive the Scanner Master or SC5000 Controller Output 2 via bit 1 in Byte OutputBits of the DL_OutputStruct.

Control Output 3 (SC5000 Only)

This parameter is configurable only if Digital Output 3 Use is set to EthernetIP.

Select Disable or Enable from the drop-down list. If enabled, it allows the Ethernet Client to drive the Scanner Master or SC5000 Controller Output 3 via bit 2 in Byte OutputBits of the DL_OutputStruct.

Control Output 4 (SC5000 Only)

This parameter is configurable only if Digital Output 4 Use is set to EthernetIP. Select Disable or Enable from the drop-down list. If enabled, it allows the Ethernet Client to drive the Scanner Master or SC5000 Controller Output 4 via bit 3 in Byte OutputBits of the DL_OutputStruct.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page. 0.

Ethernet | WebSentinel

Use the **WebSentinel** window to enable and configure the barcode scanner for use with Datalogic WebSentinel™. WebSentinel PLUS is an advanced monitor and information collector. It offers key features, benefits, and insights to end-users and System Integrators specializing in Factory Automation and Transportation and Logistics. It is built on the large Datalogic experience in T&L applications and provides real-time statistics, diagnostics, quick viewing of parcel activity, and reporting capabilities.

To enable or disable WebSentinel:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Ethernet** | **WebSentinel**. The WebSentinel window opens.

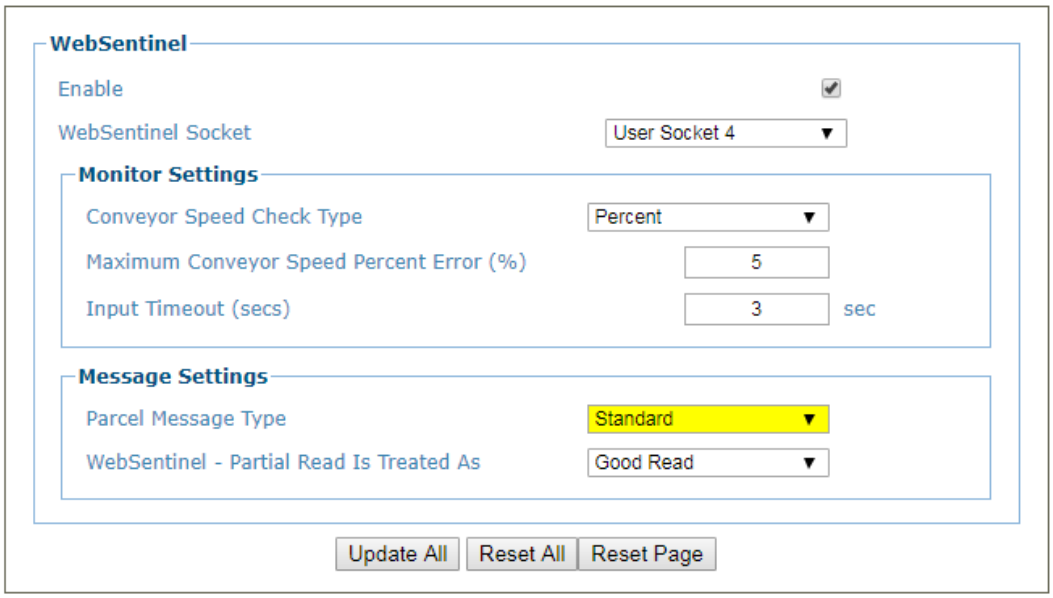

NOTE

Access the WebSentinel QuickStart Guide.



2. Enter the appropriate information in the form as described below:

Enable

Select the check box to enable WebSentinel and reveal the related configuration options.

WebSentinel Socket

Select a socket number for WebSentinel from those available in the drop-down list.

Monitor Settings

Conveyor Speed Check Type

Select Percentage or Absolute from the drop-down list to determine how the conveyor speed is evaluated.

Max Conveyor Speed Percent Error (%)

In the text field provided, enter the percentage of discrepancy allowed in the conveyor speed before an error is sent. This option is available when Percentage is selected from the Conveyor Speed Check Type drop-down list.

Max Conveyor Speed Absolute Error (mm/s)

In the text field provided, enter the milliseconds of discrepancy allowed in the conveyor speed before an error is sent. This option is available when Absolute is selected from the Conveyor Speed Check Type drop-down list.

Input Timeout (secs)

Enter a time interval in seconds, after which the input will be checked for errors. If an error is found, it will be sent to WebSentinel.

Message Settings

Parcel Message Type

Select Standard, Extended, or Extended ADP from the drop-down to specify the type of message.

Extended – WebSentinel PLUS versions earlier than 1.6.0.1369
Extended ADP – WebSentinel PLUS versions 1.6.0.1369 and later

WebSentinel – Partial Read Is Treated As

Select No Read or Good Read from the drop-down to specify how a partial read is treated.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Fieldbus

Use the **Fieldbus** window to configure Fieldbus type communication between the scanner and Host, or, in a multi-sided layout, between several scanners and a Host.

To edit the Fieldbus settings:

1. In the menu under Modify Settings, navigate to **Global Settings** | **Fieldbus**. The Fieldbus window opens.

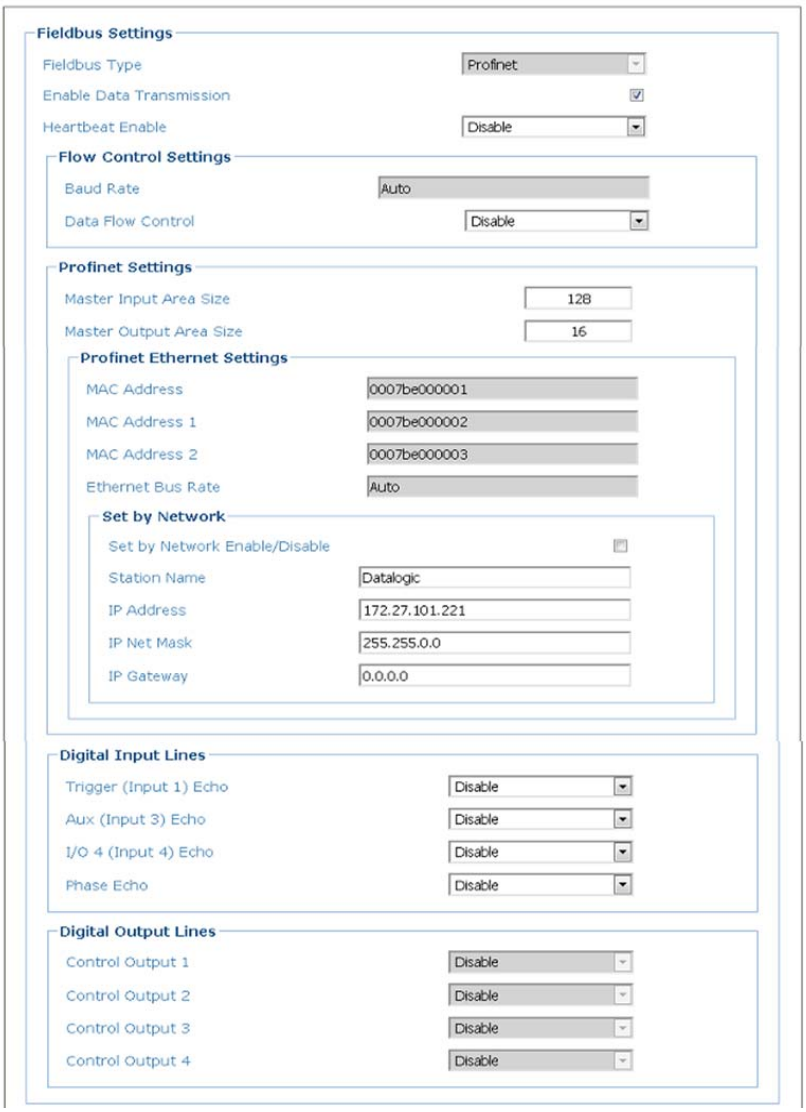

2. Enter the appropriate information in the form as described below:

Fieldbus Type

Fieldbus type is displayed. When using the CBX510 with Fieldbus modules, select the correct Fieldbus Type. For SC5000, this option is preset and read-only based on the controller model used.



The Fieldbus is only available on specific models of the SC5000.

Data Tx

Select Enable or Disable from the drop-down list. If enabled, the fieldbus port is used by the scanner to transmit data and/or messages.


Heartbeat

Select Disable, Enable Unconditioned, or Enable Conditioned from the drop-down list.

This parameter is available when the Data TX parameter is checked. It enables/disables the transmission of the Heartbeat message signaling that the device is still active.

Disable: The Heartbeat message is not transmitted
Enable Unconditioned: The Heartbeat message is always transmitted, even if communication is still active
Enable Conditioned: The Heartbeat message is transmitted only when there is no communication

Heartbeat Settings

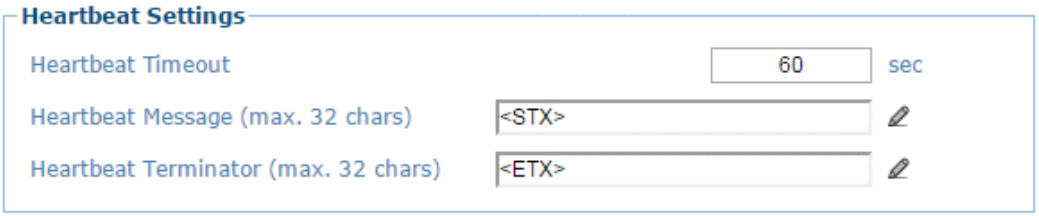

Heartbeat Timeout

Enter a time value in seconds to define the amount of time between two message transmissions. If the input timeout expires and no transmission has occurred, the Heartbeat message will be transmitted.

Heartbeat Message (max. 32 chars)

Click to activate the Text Entry Tool and create heartbeat header text to signal the beginning of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used.

The Heartbeat Message (header) string must be different from the Heartbeat Terminator string.

Heartbeat Terminator (max. 32 chars)

Click to activate the Text Entry Tool and create Heartbeat Terminator text to signal the end of the heartbeat message. Characters from NUL (00H) to ~ (7EH) can be used.

The Heartbeat Terminator string must be different from the Heartbeat Message (header) string.

Send Failure Bitmap

Select the check box to include a Failure Bitmap in the heartbeat message.

Failure Bitmap Format

Select the format of the Failure Bitmap from the drop-down. Options are; Decimal (ASCII), Hexidecimal (ASCII), Bitmap (ASCII) and Numeric (Binary).

Failure Bitmap Size

Select the size of the Failure Bitmap from the drop-down. Options are; Variable, or 1-32.

Flow Control Settings

Baud Rate

This is a read-only parameter. The default value Auto allows the Host to control the data transmission speed of the Profibus network.

Data Flow Control

Select Disable, DAD Driver, or DPD Driver from the drop-down list. This implements a reliable transmission protocol between Fieldbus Master (PLC) and Fieldbus Slave (SC5000 or Scanner Master) allowing specific functions such as Synchronization, Fragmentation/Reassembling and Data Consistency

Consistency

Select Disable or Enable from the drop-down list. This parameter is available only when the Data Flow Control parameter is set to DAD or DPD Driver. If enabled, it allows improving the overall communication robustness of the Fieldbus network.

Profibus Settings, Profibus SC5000 Redundant (SC5000 Profibus models)

Node Address

Enter a Node Value in the field provided, to define the value that distinguishes this node from all other nodes on the same link. Each node identifies a device within the network.

Valid values are in the range 0 - 126.

Node Address 126 forces the SSA (Set Station Address) service which allows the Fieldbus Master to assign the slave node address.

Node Address (Working/ Protecting) SC500 Redundant

Enter a Node Value in the fields provided, to define the value that distinguishes these nodes from all other nodes on the same link. Each node identifies a device within the network. The behavior is controlled by the IP Selector parameter in Modify Settings | Global Settings | Redundant Operation.

Valid values are in the range 0 - 126.

Node Address 126 forces the SSA (Set Station Address) service which allows the Fieldbus Master to assign the slave node address.

Master Input Area Size

Enter a value from 8 - 144 bytes to define the size of the message command sent from the Fieldbus module to the Fieldbus Master (Host). The default value is 8 bytes.

The maximum Input + Output Area Size for the Profibus interface is 152 bytes.

Master Output Area Size

Enter a value from 8 - 144 bytes to define the size of the message command sent to the Fieldbus module from the Fieldbus Master (Host). The default value is 8 bytes.

The maximum Input + Output Area Size for the Profibus interface is 152 bytes.

Profinet Settings, Profinet SC5000 Redundant (SC5000 Profinet models)

Master Input Area Size

Enter a value from 8 - 56 bytes to define the size of the message command sent from the Fieldbus module to the Fieldbus Master (Host). The default value is 8 bytes.

The maximum Input + Output Area Size for the Profinet interface is 64 bytes.

Master Output Area Size

Enter a value from 8 - 56 bytes to define the size of the message command sent to the Fieldbus module from the Fieldbus Master (Host). The default value is 8 bytes.

The maximum Input + Output Area Size for the Profinet interface is 64 bytes.

Station Name (max. 32 chars)

This string identifies the node on the network as an alternative to the IP address. If this value is changed by the host application during runtime, a reset is required in order for changes to have effect.

The name can be made up only of letters or numbers. The . (dot) and - (dash) characters can be used but not as the first or last character in the name.

The default name is Datalogic.

Station Name (Working / Protecting SC5000 Redundant

This identifies the node on the network as an alternative to the IP address. If this value is changed by the host application during runtime, a reset is required in order for changes to have effect. The behavior is controlled by the **IP Selector** parameter in Modify Settings | Global Settings | Redundant Operation.

The name can be made up only of letters or numbers. The . (dot) and - (dash) characters can be used but not as the first or last character in the name. The default names are **Working** and **Protecting**.

MAC Address

This is a read-only parameter. It displays the address of the Profinet channel reserved for internal communication.

MAC Address 1

This is a read-only parameter. It displays the address of the Profinet channel reserved for internal communication.

MAC Address 2

This is a read-only parameter. It displays the address of the Profinet channel reserved for internal communication.

Ethernet Bus Rate

This is a read-only parameter. The bus rate is set to Auto allowing the Host to manage the bus speed.

Set by Network

Station Name

Enter the name of the station.

IP Addressing

Static: the IP Address can be set manually through the IP Address, IP Net Mask and IP Gateway parameters.
DHCP: the IP address is assigned by a DHCP server. In this case the IP Address parameters are read-only and display the DHCP assigned address.
Remote: the IP Address is assigned by a remote network device (PC) using an IPConfig address configuration application. In this case the IP address parameters are read-only and display the remotely assigned address.

IP Address

Enter the device **Internet Protocol (IP)** network address in the field provided. Consult your network administrator to obtain a new address.

IP Net Mask

Enter the device **Subnet Mask Address** in the field provided. Consult your network administrator to obtain a new address.

IP Gateway

Enter the device **Gateway Address** in the field provided. Consult your network administrator to obtain a new address.

Digital Input Lines



If any of the following parameters are enabled, the Data Flow Control DAD/DPD Driver starts at Byte 1 (second byte) of the Fieldbus Master Input Area, and Byte 0 (first byte) is reserved for Digital Input Line Echo parameters. If none of the following parameters are enabled, the Data Flow Control DAD/DPD Driver starts at Byte 0 (first byte) of the Fieldbus Master Input Area. For more details, refer to the DAD/DPD Driver Reference Manual

Trigger (Input 1) Echo

Select Disable or Enable from the drop-down list. If enabled, the Scanner Master or SC5000 Controller Trigger (Input 1) status is echoed to the Fieldbus Master via bit 0 in Byte 0 (first byte) of the Input Area.

Aux (Input 3) Echo

Select Disable or Enable from the drop-down list. If enabled, the Scanner Master or SC5000 Controller Input 3 status is echoed to the Fieldbus Master via bit 2 in Byte 0 (first byte) of the Input Area.

I/O 4 (Input 4) Echo (SC5000 Only)

Select Disable or Enable from the drop-down list. If enabled, the SC5000 Controller Input 4 status is echoed to the Fieldbus Master via bit 3 in Byte 0 (first byte) of the Input Area.

Phase Echo

This parameter is configurable only if Start Input from Bus is enabled.

Select Disable or Enable from the drop-down list. If enabled, the Reading Phase status is echoed to the Fieldbus Master via bit 7 in Byte 0 (first byte) of the Input Area.

Digital Output Lines

Control Output 1

This parameter is configurable only if Digital Output 1 Use is set to Profibus/Profinet. Select Disable or Enable from the drop-down list. If enabled, it allows the Fieldbus Master to drive the Scanner Master or SC5000 Controller Output 1 via bit 0 in Byte 0 (first byte) of the Output Area.

Control Output 2

This parameter is configurable only if Digital Output 2 Use is set to Profibus/Profinet. Select Disable or Enable from the drop-down list. If enabled, it allows the Fieldbus Master to drive the Scanner Master or SC5000 Controller Output 2 via bit 1 in Byte 0 (first byte) of the Output Area.

Control Output 3 (SC5000 Only)

This parameter is configurable only if Digital Output 3 Use is set to Profibus/Profinet. Select Disable or Enable from the drop-down list. If enabled, it allows the Fieldbus Master to drive the SC5000 Controller Output 3 via bit 2 in Byte 0 (first byte) of the Output Area.

Control Output 4 (SC5000 Only)

This parameter is configurable only if Digital Output 4 Use is set to Profibus/Profinet. Select Disable or Enable from the drop-down list. If enabled, it allows the Fieldbus Master to drive the SC5000 Controller Output 4 via bit 3 in Byte 0 (first byte) of the Output Area.

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Messaging

Use the Messaging selections during initial setup to configure system messaging for your system. If necessary you can later make modifications to the configuration using the same menu selections, including:


“Messaging | Message Format” on page 126
“Messaging | Message Builder” on page 138
“Messaging | Statistics” on page 144
“Messaging | Protocol Index” on page 146
“Messaging | Pass-Thru” on page 150
“Messaging | Diagnostics Messages” on page 152

Messaging | Message Format

Use the **Message Format** window to configure Standard or Advanced system messages.

To edit the Message Format settings:

1. In the menu under Modify Settings, navigate to Global Settings | Messaging | Message Format. The Message Format window opens.

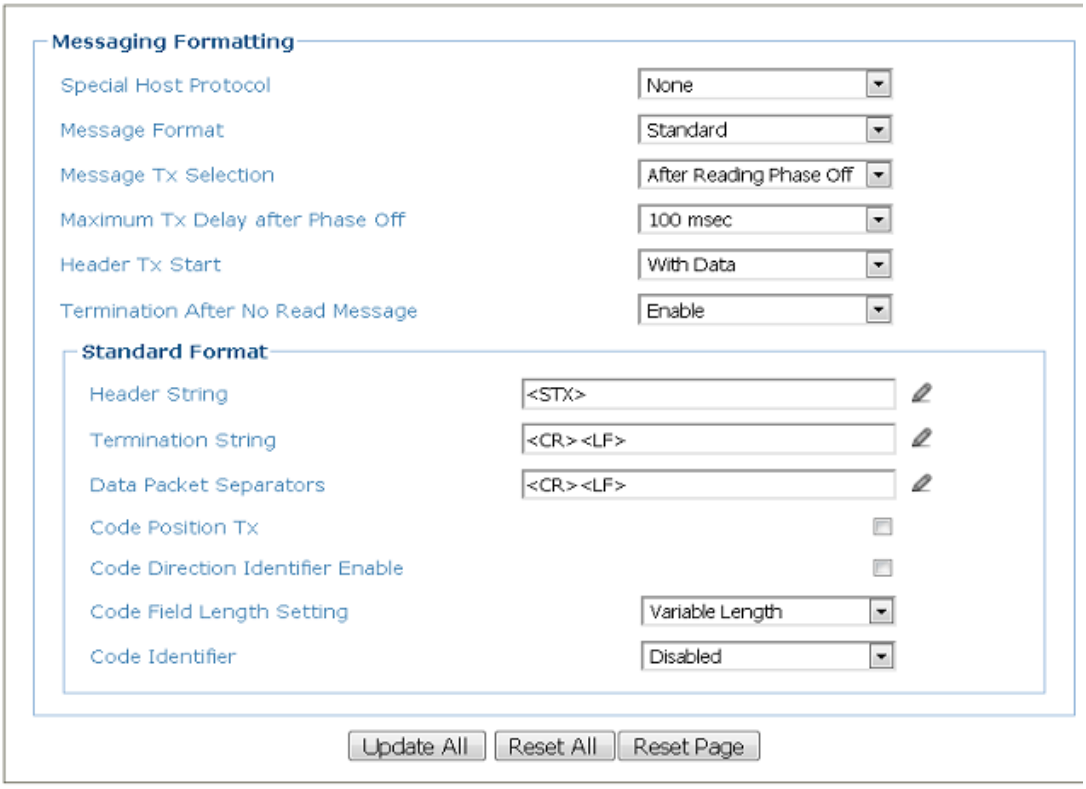

2. Enter the appropriate information in the form as described below:

Messaging Formatting

Special Host Protocol

Select None or a specific custom protocol from the drop-down list. In some cases, a customer specific protocol may have been created. When selected, a group of optionsspecific to that protocol are made available.

None
Crisplant
Mettler Toledo

Message Format

Select Standard, or Advanced from the Format Type drop-down list.

Standard: All ports will transmit using the standard Format parameters.
Advanced: 5 different formats are configurable. These options are selected under the Advanced Format option.



The User Socket must be selected under Ethernet > User Sockets to be available.

SPECIAL HOST PROTOCOL: NONE
Format Type: Standard
Header String (max. 128 chars.)

Click to activate the Text Entry Tool and create a Header String in the text field provided. Headers (up to 128 bytes) can be defined and transmitted as a block preceding the barcode(s). Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Termination String (max. 128 chars.)

Click to activate the Text Entry Tool and create a Termination String in the text field provided. Terminators (up to 128 bytes) can be defined and transmitted as a block following the barcode(s). Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Data Packet Separators (max. 128 chars.)

Click to activate the Text Entry Tool and create a Data Packet Separators in the text field provided. The Data Packet Separators (up to 128 bytes) are used to separate barcodes in the reading phase. Use characters from NUL (00H) to ~ (7EH).

For this reason, it is very useful when the Standard Multi Label, Code Collection or Code Combination parameters have been selected in the Barcode Configuration. If selected, they occur within the Code Field and are transmitted after each decoded code.


Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Code Position Tx

Select the check box to enable. If enabled, the code position information is included in the output data format.

Code Direction Identifier Enable

Select the check box to enable. If enabled, it allows you to define the forward and reverse strings indicating the scanning direction with respect to the code direction.

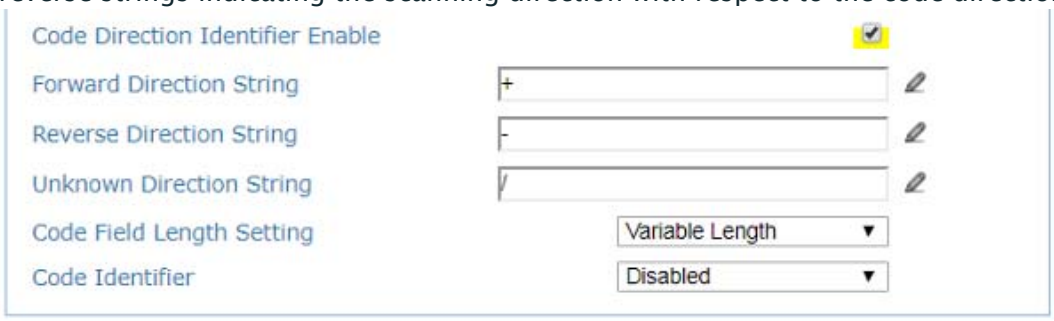

Forward Direction String (max. 32 chars.)

Click to activate the Text Entry Tool and create a Forward Direction String in the text field provided. A Forward Direction String can be included in the output message to indicate that the current code has been scanned in the forward direction (scanning from left to right). This string ("+" is the default value) can be customized by the user including up to 32 characters.

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Reverse Direction String (max. 32 chars)

Click to activate the Text Entry Tool and create a Reverse Direction String in the text field provided. A Reverse Direction String can be included in the output message to indicate that the current code has been scanned in the reverse direction (scanning from right to left).

The string ("-" is the default value) can be customized by the user including up to 32 characters.

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.


Unknown Direction String (max. 32 chars.)

Click to activate the Text Entry Tool and create an Unknown Direction String in the text field. An Unknown Direction String can be included in the output message when it is not possible to determine the scanning direction of a code. The string ("?" is the default value) can be customized by the user including up to 32 characters.

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Code Field Length Setting

Select **Variable** or **Fixed** from the drop-down list. If Variable is chosen, all possible code field lengths (in number of characters/digits) allowed for the code selected are accepted. If Fixed is chosen, only the length defined by the Code Field Length parameter is accepted.

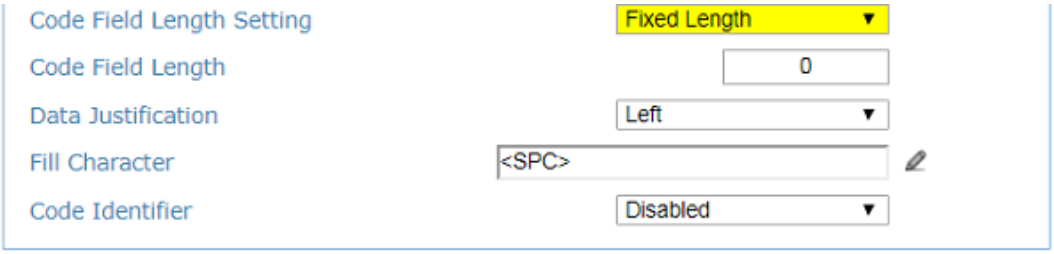

Code Field Length

This parameter is only available when **Fixed** is selected as the Code Field Length Setting. Enter length of the code field to be transmitted (in number of characters/digits) in the field provided.

Enter a length in the field provided. This parameter is applied only to the <Barcode> field contained in two specific messages (Barcode information and Diagnostics) of the protocol. It is available when the Code Field Length Setting is set to Fixed.

This defines (in number of characters/digits) the length of the <Barcode> field to be transmitted in a value range from 0 to 48.

Data Justification

This parameter is only available when **Fixed** is selected as the Code Field Length Setting. Select Left or Right from the drop-down list. This parameter is applied only to the <Barcode> field contained in two specific messages (Barcode information and Diagnostics) of the protocol. This defines the position of the Fill Character within the code:

Left: Fill Character is left aligned and precedes the <Barcode> field
Right: Fill Character is right aligned and follows the <Barcode> field

Fill Character

This parameter is only available when **Fixed** is selected as the Code Field Length Setting. Click to activate the Text Entry Tool and create a fill character in the field provided. This parameter is applied only to the <Barcode> field contained in two specific messages (Barcode information and Diagnostics) of the protocol. It is available when the Code Field Length Setting is set to Fixed. The Fill Character is inserted into each character position of a code field that has more characters (as defined in the Code Field Length) than exist in the barcode read. A character from NUL (00H) to ~ (7EH) can be used.

Click Submit to save your changes, or click Cancel to return to previous.


Code Identifier

Select Disable, Standard AIM ID, or User Specified from the drop-down list. A Code Identifier string can be included in the output message.


If **Disable** is selected, no code identifier is included in the output message.
If **Standard AIM ID** is selected, the AIM standard identifier is included in the output message
If **User Specified** is selected, the Code Identifier Strings group is activated at the bottom of the window, allowing you to define an identifier string for each code symbology. The string will be included in the output message.

Code Identifier Strings

This section of the Message Format window is only available when **User Specified** is selected as the Code Identifier. Click to activate the Text Entry Tool and create a custom code identifier string for any listed code symbology. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

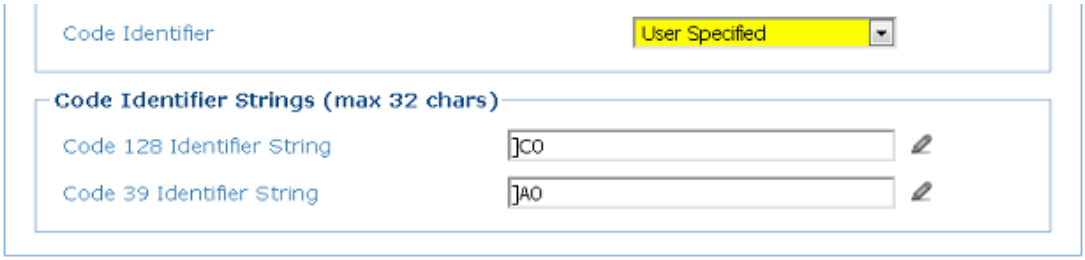

SPECIAL HOST PROTOCOL: CRISPLANT PROTOCOL

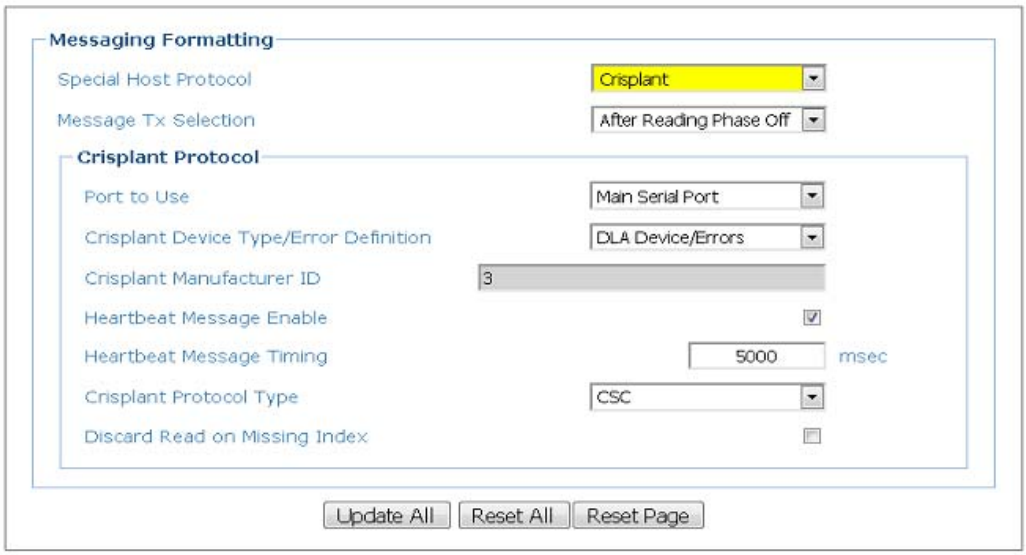

Port to Use

Select **Aux Serial Port**, **Main Serial Port**, **User Socket (1-6), or Fieldbus** from the drop-down list.

Crisplant Device Type/Error Definition

Select DLA Device/Errors or a ASI-Axiom/Errors from the drop-down list. This allows selection of different device types, as the error codes required by Crisplant vary from device to device.

DLA Device/Errors: select when using current Datalogic devices
ASI-Axiom/Errors: Select when using legacy Accu-Sort devices

Crisplant Manufacturer ID

This field is determined by the Crisplant Device Type/Error Definition selected above and cannot be edited.

This defines the "Scanner Identity" byte of the Error and Heartbeat messages of the Crisplant Protocol.

Heartbeat Message Enable

Select the check box to enable the transmission of the Heartbeat message.

Heartbeat Message Timing

Enter a value in milliseconds to define the amount of time between two code transmissions. If the selected timeout expires and no transmission has occurred, the Heartbeat message will be transmitted.

Crisplant Protocol Type

Select CSC, CMC, or P10 from the drop-down list. This defines the type of Crisplant protocol to be used:

CSC: the <CR><LF> characters do not appear at the end of transmitted/received telegrams
CMC: the <CR><LF> characters appear at the end of transmitted/received telegrams
P10: the <CR><LF> characters appear at the end of transmitted/received telegrams


The Parameter Crisplant Manufacturer ID is forced to the Value 'a' (61H) and cannot be modified for this selection, the error messages are modified with respect to CSC and CMC protocols

Discard Read on Missing Index

Select the check box to enable. When selected, if a Missed Index error occurs, an empty telegram is sent to the Crisplant Host.

If not selected, and a Missed Index error occurs, the telegram contains the codes that were read relative to the pack.

SPECIAL HOST PROTOCOL: METTLER TOLEDO PROTOCOL

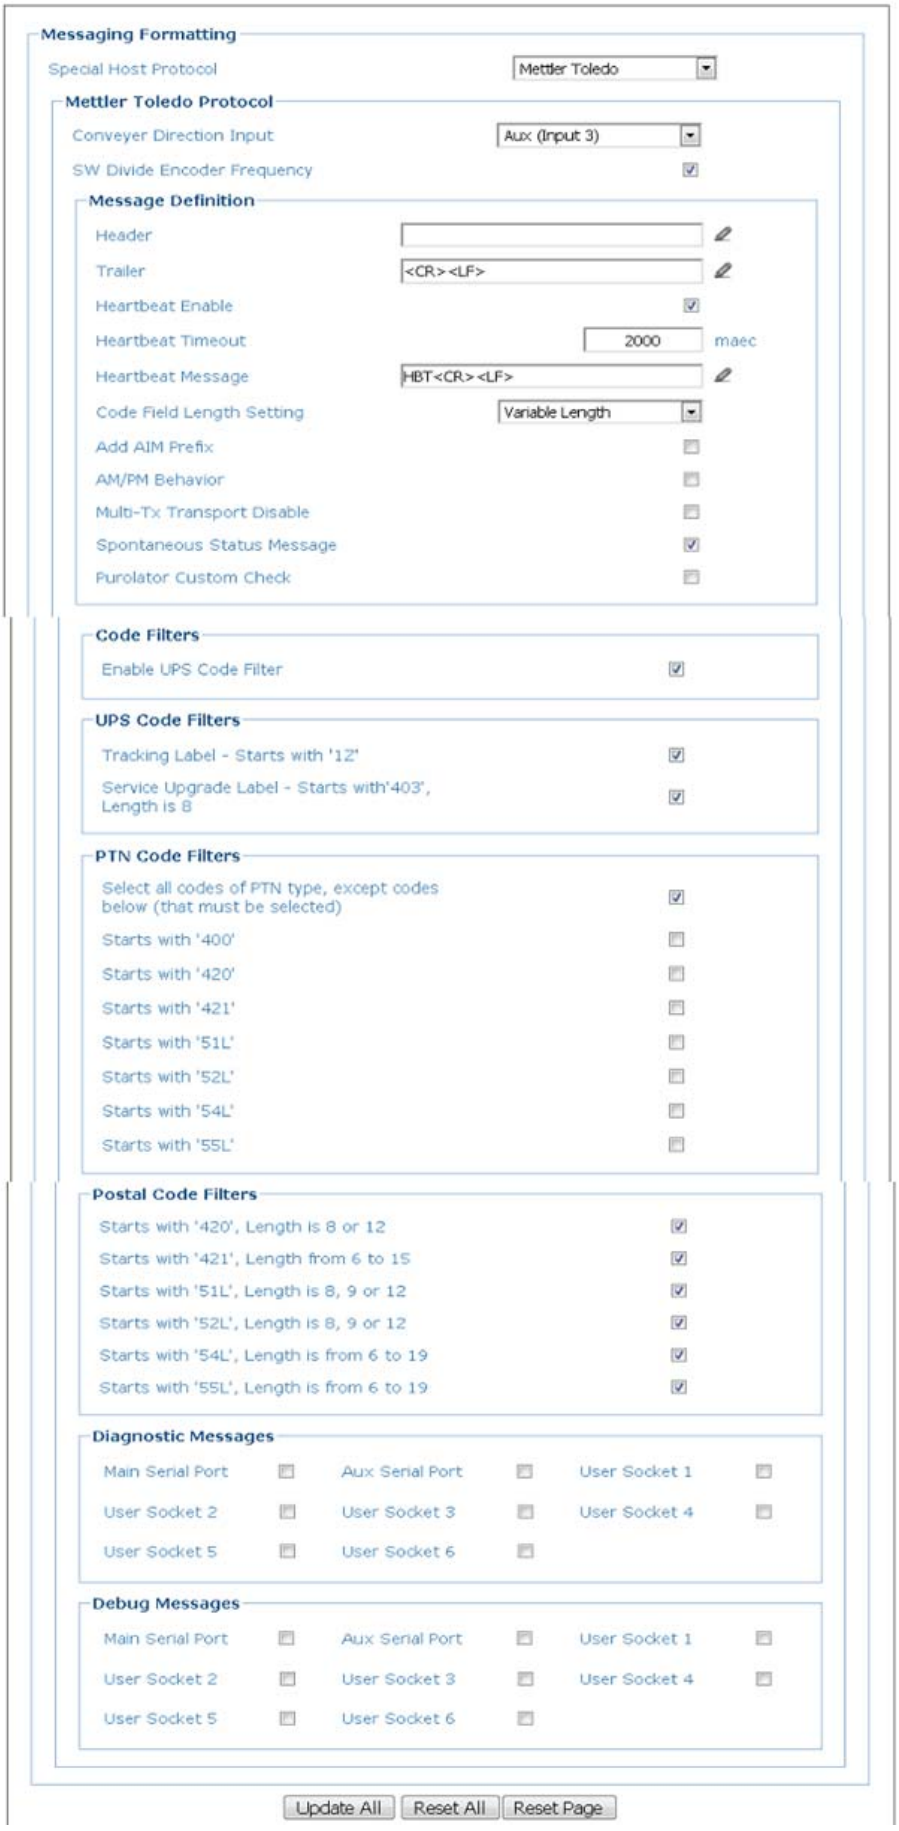

This protocol is a standard interface for Mettler Toledo precision scales and balancers.

Conveyer Direction Input

Select Trigger (Input 1) or Aux (Input 3) from the drop-down list. The selection defines which digital input transmits information about the conveyor direction. The conveyor direction is Forward when the selected input is active (default active closed). If Input 1 is used the scanner Phase On LED also signals the direction state.

SW Divide Encoder Frequency

Select the check box to enable. If selected, the encoder frequency value is divided by two before it is transmitted to the Host. This parameter only effects the value contained in the <Encoder> field of the messages sent from the scanner to the Host.

Message Definition

Header

Enter a message header in the field provided. A Header (up to 128 bytes) can be defined and transmitted as a block preceding all messages sent from the scanner. Character from NUL (00H) to ~ (7EH) can be used.

Trailer

Enter a message trailer in the field provided. A Trailer (up to 128 bytes) can be defined and transmitted as a block following all messages sent from the scanner.

Character from NUL (00H) to ~ (7EH) can be used.

Heartbeat Enable

Select the check box to enable heartbeat.

Heartbeat Timeout

Enter a value in milliseconds. This parameter is available when the Heartbeat parameter is enabled. It defines the amount of time between two message transmissions. If the selected timeout expires and no transmission has occurred, the Heartbeat message will be transmitted.

Heartbeat Message

Click to activate the Text Entry Tool and create a heartbeat message in the field provided. This parameter is available only when the Heartbeat parameter is enabled. This defines the Heartbeat message.

Click Submit to save your changes, or click Cancel to return to previous.

Code Field Length Setting

Select Fixed Length or Variable Length from the drop-down list. This parameter is applied only to the <Barcode> field contained in two specific messages (Barcode information and Diagnostics) of the protocol. The code field length (in number of characters/digits) can be specified in order to be transmitted:

Variable: All possible code field lengths (in number of characters/digits) allowed for the code selected are accepted
Fixed: The code is entirely transmitted even if it is longer than the defined length. If shorter, it will be transmitted with the addition of the Fill Character.

Add AIM Prefix

Select check box to enable. If enabled, it adds the AIM standard prefix to the barcode to be sent to the host. No separator character will be added between the AIM prefix and the barcode.

AM/PM Behavior

Select the check box to enable. If enabled, the Host is ready to receive the following message:

<STX><COMMAND><ETX>

where:

<COMMAND> = 'A' indicates that the Host starts working in AM mode / 'P' indicates that the Host starts working in PM (default) mode

When working in AM mode:

each code is only filtered by the Encoder Timeout parameter;

the Purolator Custom Check parameter is not effective; the Heartbeat message will never be transmitted; the transmitted message is not subject to padding with the Fill Character and the output message format is the following:

<STX><scanner_nr><space><barcode><ETX><CR><LF>

where:

<scanner_nr> = 2-digit number in the range 00-31

AM Message Target

Select **Main Serial Port**, **Aux Serial Port**, or a **User Socket** from the drop-down list.

Multi-Tx Transport Disable

This parameter manages the message transmission through the different communication channels.

If unchecked (check box not selected), messages are transmitted through all the communication channels having the Data Tx parameter enabled.

If checked (check box selected), messages are sent through all the communication channels having the Data Tx parameter enabled until the scanner receives one of the three possible communication messages (Status Request, Encoder Counter Request, Initialization Command). As soon as this condition occurs, all messages will be transmitted only through the specific channel sending one of the three possible communication messages while other channels are ignored. In this way, the last channel sending one of the possible communication messages will become the one used for transmission.

Spontaneous Status Message

Select check box to enable. In case of diagnostic errors, this message is sent every 40 seconds.

Purolator Custom Check

Select the check box to enable. If enabled, all service labels sharing the following characteristics will not be filtered by the Code Filter Depth and Encoder Timeout parameters:

all service labels containing 2 characters only (e.g. "F1", "F2", ecc);
all service labels of 8 characters starting with "ENP";
all service labels of 9 characters starting with "OSNR".

Code Filter

Enable UPS Code Filter

Select the check box to enable. If selected, the UPS Code Filters, PTN Code Filters, and Postal Code Filters panels open.

UPS Code Filters

Tracking Label - Starts with '1Z'

Select check box to enable. If selected, function allows the transmission of codes belonging to the Code 128 and Code 39 families starting with '1Z', '3Z', '1B' or '3B'. The length of these codes is 18 digits.

Service Upgrade Label - Starts with'403', Length is 8

Select check box to enable. If selected, function allows the transmission of codes belonging to the Code 128 and Code 39 families starting with '403'. The length of these codes is 8 digits.

PTN Code Filters

Select all codes of PTN type, except codes below (that must be selected)

Select check box to enable. If selected, it is possible to transmit all Code 128 and Code 39 codes belonging to this type having a length of 11 digits with the exception of those starting with:

- '400', '420', '421', '51L', '52L', '54L', '55L'

Starts with...

Select each check box to enable/include that prefix.

Postal Code Filters

Starts with...

Select each check box to enable/include that prefix. This allows the transmission of codes belonging to the Code 128 and Code 39 families having any of the following selected characteristics:

starting with '420' and with length 8 or 12 digits
starting with '421' and with length from 6 to 15 digits

starting with '51L' and with length 8, 9 or 12 digits
starting with '52L' and with length 8, 9 or 12 digits
starting with '54L' and with length from 6 to 19 digits
starting with '55L' and with length from 6 to 19 digits

Diagnostic Messages

Select the check boxes as needed to enable. If selected, these parameters allow selecting the desired communication channel (Main, Aux, User Socket#n) to be used for transmitting barcode messages coming from slaves.

The selection is available only if the desired communication channel is free (Data TX parameter disabled).

The diagnostic data format can be defined through the commands provided by a terminal interface.

Debug Messages

Select the check boxes as needed to enable. If selected, these parameters allow selecting the desired communication channel (Main, Aux, User Socket#n) to be used for transmitting debug messages coming from slaves.

The selection is available only if the desired communication channel is free (Data TX parameter disabled).

DPD Code Filters


If DPD Code Filter is enabled, the user can select the DPD code to be transmitted by selecting its check box. All codes different from the selected DPD will also be transmitted.

This group allows selecting the DPD code type(s) to be transmitted. These codes belong to the Interleaved 2/5 or Code 128 family and have one of the following characteristics:

I2of5 Code, Length is 10
I2of5 Code, Length is 12
I2of5 Code, Starts with '0', Len“Special Host Protocol: None” on page 135gth is 4
I2of5 Code, starts with '90',Length is 4
Code 128, Length is 28


All codes belonging to code families other than Interleaved 2/5 and Code 128 will also be transmitted.

SPECIAL HOST PROTOCOL: NONE
Format Type: Advanced

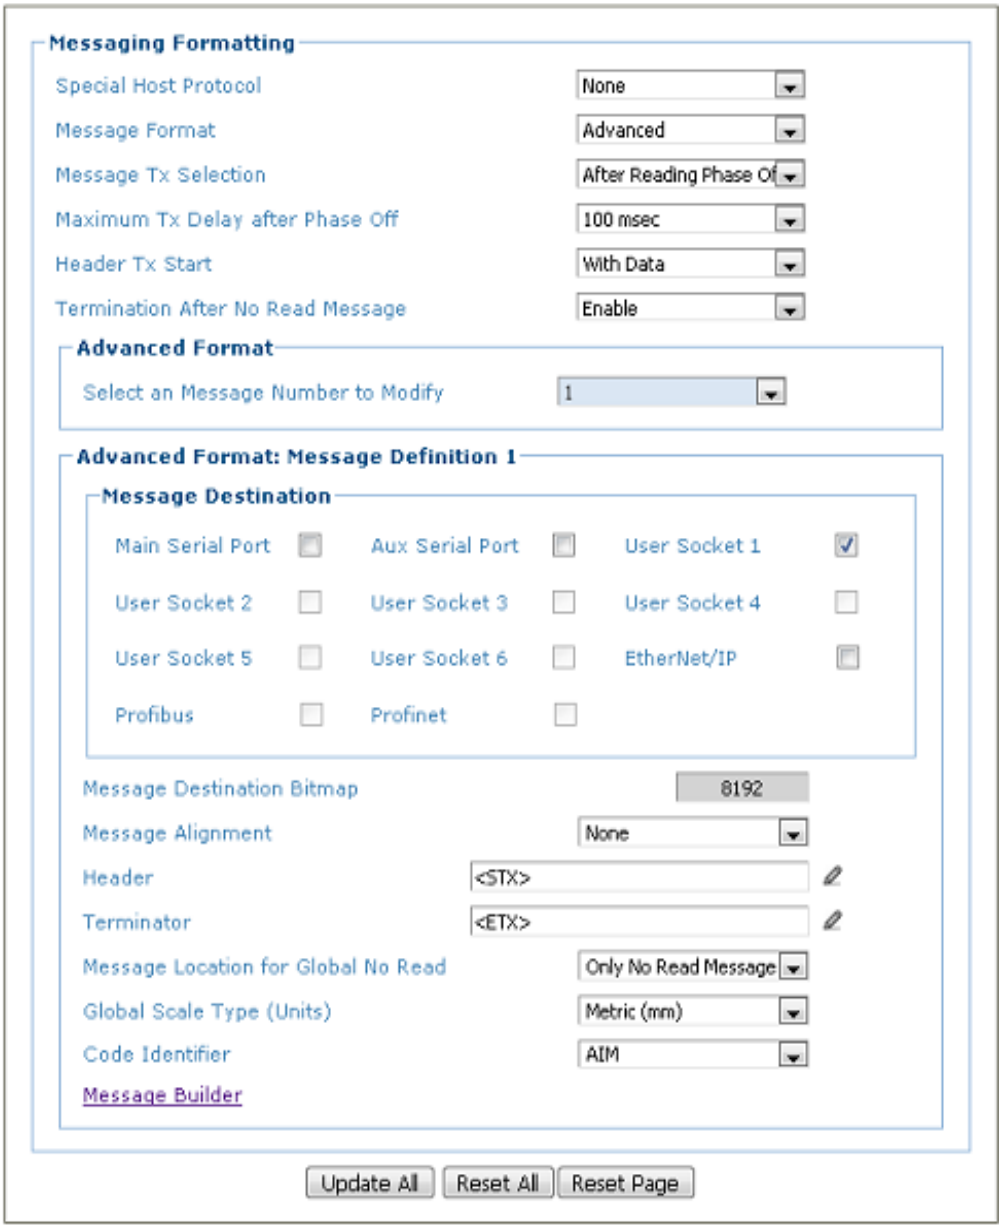

Message Tx Selection

Select On Decoding or After Reading Phase Off from the drop-down list. Message Tx selects the transmission of the output message on decoding or after the reading phase as illustrated below. This option is only available when Operation Mode is set to On Line.

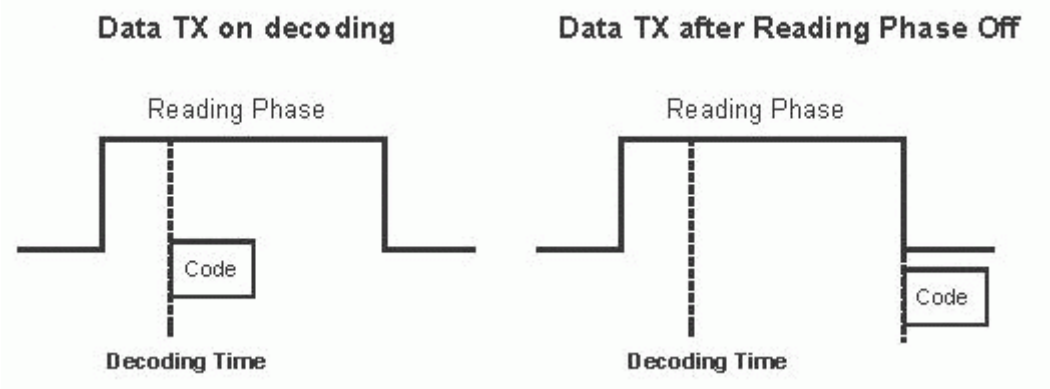

NOTE

This option is only available when an **Operating Mode** of **On Line** is selected in **Modify Settings | Global Settings | Operating Mode.**


Max. Tx Delay after Phase Off

Select Disabled or a millisecond value (50 to 500 msec) from the drop-down list. This parameter defines a timeout, which is the maximum delay allowable for message transmission after the reading phase is closed. If this timeout expires before message transmission, the message will be discarded.

NOTE This option is only available when an **Operating Mode** of **On Line** is selected in **Modify Settings | Global Settings | Operating Mode.**

Header Tx Start

Select With Data or After Reading Phase On from the drop-down list. If With Data is selected, the header will be transmitted with data. If After Reading Phase On is selected, the header will be transmitted after the reading phase activation. See illustration below:

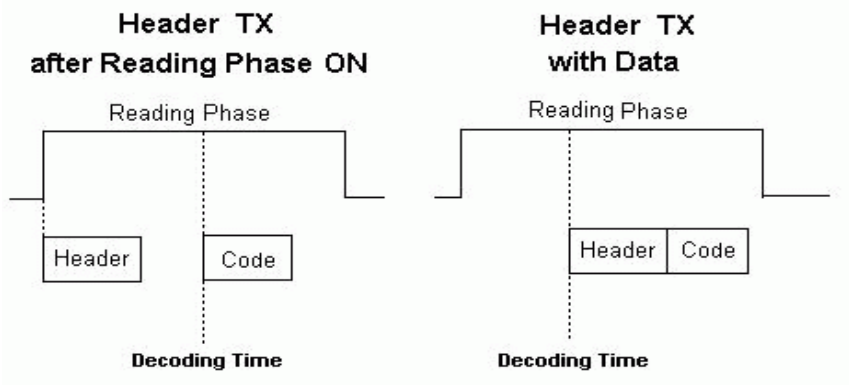

NOTE This option is only available when an **Operating Mode** of **On Line** is selected in **Modify Settings | Global Settings | Operating Mode.**

Termination After No Read Message

Select Enable or Disable from the drop-down list. If Enable is selected, a termination string is added to the No Read message string.

NOTE This option is only available when an **Operating Mode** of **On Line** is selected in **Modify Settings | Global Settings | Operating Mode.**

Select a Message Number to Modify

Select a numbered message you wish to modify from the drop-down list. the unit has the ability to handle five distinct message structures. Each message may be transmitted out of separate ports.

Advanced Format: Message Definition n

NOTE The User Socket must be enabled in Ethernet > Sockets to be available here.

Message Destination

Select the check box for each port or socket that should receive the message.

Message Destination Bitmap

Indicates the destination of the message.

Message Alignment

Select None, Left, or Right from the drop-down list.

Align Length

Enter the number of characters by which to extend the message when Left or Right is selected from the Message Alignment drop-down box.

Align Filler Char

Click to activate the Text Entry Tool and create a filler character in the text field provided. This filler is used to extend the Align Length.

Header

Click to activate the Text Entry Tool and create a Header in the text field provided. Headers (up to 128 bytes) can be defined and transmitted as a block preceding the barcode(s). Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Terminator

Click to activate the Text Entry Tool and create a Terminator in the text field provided. Terminators (up to 128 bytes) can be defined and transmitted as a block following the barcode(s). Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Message Location for Global No Read

Select Only No Read Message, Before No Read Message, or After No Read Message from the drop-down list.

Global Scale Type (Units)

Select Metric (mm) or Imperial (0.1 in) from the drop-down list. The scale format that will be transmitted.

Code Identifier

Select Disable, AIM, or Custom from the drop-down list. A Code Identifier string can be included in the output message.

If **Disable** is selected, no code identifier is included in the output message.
If **AIM** is selected, the AIM standard identifier is included in the output message
If **Custom** is selected, the Code Identifier Strings group is activated at the bottom of the window, allowing you to define an identifier string for each code symbology. The string will be included in the output message.

"Messaging | Message Builder" on page 138

Code Identifier Strings

This section of the Message Format window is only available when Custom is selected as the Code Identifier. Click to activate the Text Entry Tool and create a custom code identifier string for any listed code symbology.

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page. 0.

Messaging | Message Builder

Use the **Message Builder** window to configure Standard or Advanced system messages.

To use the Message Builder:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Messaging** | **Message Builder**. The **Message Builder** window opens.

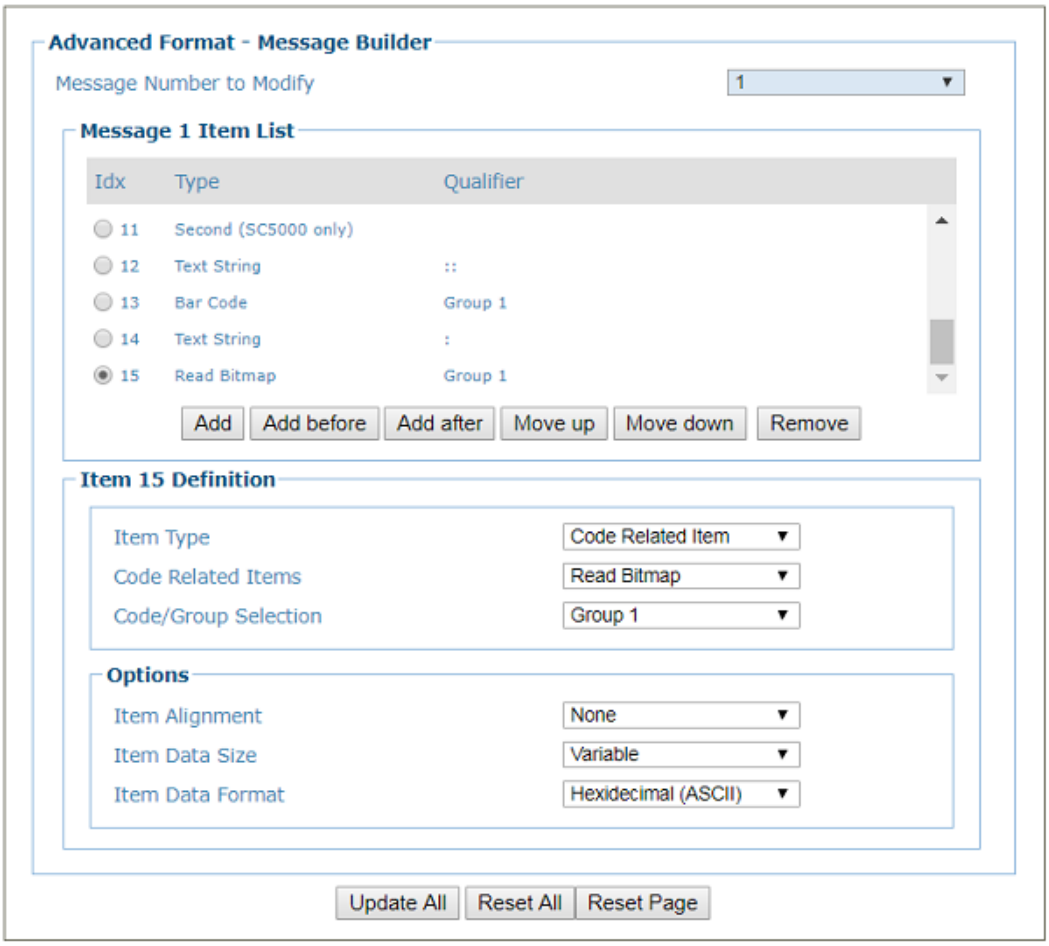

2. Enter the appropriate information in the form as described below:

Message Number to Modify

Select the number of the message you want to modify from the drop-down list.

Message n Item List

Idx

Displays the index number of the messages. This identifies where an item will be located in the host message. This is the information that is placed in the message field. it can range from free flowing text to bar code related information to package related information

Type

Displays the message type including various Text String, Code Related Item, or Package Related Item messages.

Qualifier

Displays relevant qualifiers for the message item if needed. This is the information that is placed in the message field. It can range from free flowing text to bar code related information to package related information.

Add

Click to add a message item to the bottom of the list.

Add before

Click to add a message item above the currently selected message.

Add after

Click to add a message item below the currently selected message.

Move up

Click to move the selected message item up one level in the list.

Move down

Click to move the selected message item down one level in the list.

Remove

Click to remove the selected message item.

Item n Definition

Item Type

Select **Text String**, **Code Related Item**, or **Package Related Item** from the drop-down list. Each selection reveals a unique set of options.

String Field

Click  to activate the Text Entry Tool and create a text string message. This option is available when Item Type > Text String has been selected.

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Code Related Items

Select a code related item from those available in the drop-down list. This option is available when Item Type > Code Related Item has been selected. The Code Related Items can be associated to a specific programmed code or group label depending on the Code Combination selection.

Barcode: Barcode data
Barcode Length: Number of characters in code
Read Bitmap: In tracking mode - 32-bit mask indicating which scanner in the network has read the code (when character <1> is present in the related position). In On Line mode - 32-bit mask indicating the lowest unit number scanner in the network that read the code (when character <1> is present in the related position)
Total Read Count: Indicates how many times the code has been read by all scanners present in the network during the same reading phase
Read Count (by device): Indicates the number of times the code has been read by one specific scanner present in the network during the reading phase (selectable among those present)
X Position: X coordinate for the code that was read
Y Position: Y coordinate for the code that was read
Z Position: Z coordinate for the code that was read
Code Identifier: Indicates type of code that was read



Code Direction, Code Distance, Decode Mode, Decode Scans Number, Ink Spread, Laser Number, and Reading Persistence are available only when the associated code is read by the Master device.

Code Direction: Indicates if the code has been read either from either the start character or the stop character
Code Distance: Indicates the distance from the scan head to the code that was read
Decode Mode: Indicates if the reader is configured for Linear or Reconstruction (ACR) reading mode
Decode Scans Number: Indicates the minimum number of decoded scans referred to the single characters in a code when the device is reading in
Average Code Position: Average position of the code in the scan line (Average of Minimum and Maximum Code Position)
Minimum Code Position: Minimum position of the code in the scan line (closest to the left side/connector side of the scanner)
Maximum Code Position: Maximum position of the code in the scan line (farthest from the left side/connector side of the scanner)
Ink Spread: Indicates the calculated Ink Spread value. This indicates the sharp or blurry quality of the code

Encoder Value: Indicates the encoder/tachometer pulse value from trigger to the code being read
Laser Number: If more than one laser is present in the working device, this item indicates the laser used to read the code
Reading Persistence: Indicates how many times the laser beam has crossed the complete code during the reading phase

Package Related Items

Select a package related item from those available in the drop-down list. This option is available when Item Type > Package Related Item has been selected.

Package Sequence Number: Indicates the sequential number assigned to the package.
Total Read Bitmap: Indicates the complete reading mask related to all codes read during the reading phase
Failure Bitmap: 32-bit mask indicating which devices in the network are in fault (when character <1> is present in the related position)
Total Read Count: Indicates the sum of all Code-related Total Reading Counts of each code read during the reading phase
Read Count (by device): Indicates the number of codes read during the reading phase by the device
Minimum Code Distance: Indicates the distance of the code closest to the device read during the reading phase
Maximum Code Distance: Indicates the distance of the code most distant from the scanner that has been read during the reading phase
Decode Mode (Master): Indicates the programmed Reading Mode, either Linear or Reconstruction
Number of Rejected Codes: Indicates the number of codes rejected during the internal analysis (unexpected code, multiple read, discarded by the programmed logical rule)
Package Length: Indicates the approximate length of the package
Start Trigger Encoder Value: Indicates the encoder/tachometer pulse value when the package first hits the trigger PS
End Trigger Encoder Value: Indicates the encoder/tachometer pulse value when the package exits the trigger PS
Transmit Encoder Value: Indicates the encoder/tachometer pulse value when the data transmit occurs
Current Trigger Count: Indicates the number of trigger cycles that have occurred
Working Hours (By Device): Indicates the total number of hours the device has been active
Total Good Reads: Indicates the total number of barcodes successfully read
Total No Reads: Indicates the total number of barcodes that were not read
Total Multi Reads: Indicates the number of times packages carried more codes than the scanner is programed to read
Total Partial Reads: Indicates the total number of barcodes only partially read
Protocol Index/Aux Message: Indicates the programmed protocol index string data
Parcel Length: This is a field received in the Protocol Index from a dimensioner.
Parcel Width: This is a field received in the Protocol Index from a dimensioner.
Parcel Height: This is a field received in the Protocol Index from a dimensioner.
Parcel Volume: This is a field received in the Protocol Index from a dimensioner.
Parcel Orientation Angle: This is a field received in the Protocol Index from a dimensioner.
Isolated Parcel: This is a field received in the Protocol Index from a dimensioner.
Cuboidal Parcel: This is a field received in the Protocol Index from a dimensioner.
Dimensioner Ready: This is a field received in the Protocol Index from a dimensioner.
Dimensioner Legal For Trade: This is a field received in the Protocol Index from a dimensioner.
Parcel Box Length: This is a field received in the Protocol Index from a dimensioner.
Parcel Box Width: This is a field received in the Protocol Index from a dimensioner.
Parcel Box Height: This is a field received in the Protocol Index from a dimensioner.

Parcel Corner X1: This is a field received in the Protocol Index from a dimensioner.
Parcel Corner Y1: This is a field received in the Protocol Index from a dimensioner.
Parcel Corner X2: This is a field received in the Protocol Index from a dimensioner.
Parcel Corner Y2: This is a field received in the Protocol Index from a dimensioner.
Parcel Corner X3: This is a field received in the Protocol Index from a dimensioner.
Parcel Corner Y3: This is a field received in the Protocol Index from a dimensioner.
Parcel Corner X4: This is a field received in the Protocol Index from a dimensioner.
Parcel Corner Y4: This is a field received in the Protocol Index from a dimensioner.
Dimensioner Alibi: This is a field received in the Protocol Index from a dimensioner.
Dimensioner Error: This is a field received in the Protocol Index from a dimensioner.
Parcel weight: This is a field received in the Protocol Index from a scale.
Scale Alibi: This is a field received in the Protocol Index from a scale.
Scale Units: This is a field received in the Protocol Index from a scale.
Scale Error: This is a field received in the Protocol Index from a scale.
Scale Legal For Trade: This is a field received in the Protocol Index from a scale.



Hour, Minute, Second, Day, Month, and Year can only be entered through the SC5000 Keypad. They are not entered through the GUI.

Hour (SC5000 only): This field will display the hour in the host message, according to the SC5000 clock.
Minute (SC5000 only): This field will display the minutes in the host message, according to the SC5000 clock.
Second (SC5000 only): This field will display the seconds in the host message, according to the SC5000 clock.
Day (SC5000 only): This field will display the day in the host message, according to the SC5000 clock.
Month (SC5000 only): This field will display the month in the host message,according to the SC5000 clock.
Year (SC5000 only): This field will display the year in the host message, according to the SC5000 clock.

Code/Group Selection



Group selection is related to the bar code Groups that are constructed in the Barcode Configuration > Logical Combination. It is only available when Code Related Item > Bar Code, is selected.

Select a Code/Group from those available in the drop-down list. This option is available when Item Type > Code Related Item has been selected.

Device Index

Select a device index number from the drop-down list. This option is available when Item Type > Code Related Item > Read Count (By Device) or Type > Package Related Items > Read Count (By Device)/Working Hours (By Device) has been selected.

Text String: Options
Link to Code

Select Disabled, Previous Code, or Next Code from the drop-down list.

Disabled: A code will not be linked to this text string
Previous Code: The text string will be linked to the previous generated code
Next Code: The text string will be linked to the next generated code

Code Related Item: Options
Code Cutting

Select None, Simple, or Pattern from the drop-down list.

Simple: Allows cutting a programmable part of the code either at the beginning or at the end of the code.

Pattern: Allows cutting a part of the code according to a particular prefixed pattern.

Number of Leading Chars to Cut

Enter the number of leading characters to cut from the barcode in the field provided (available when Simple is selected from the Code Cutting drop-down list).

Number of Trailing Chars to Cut

Enter the number of trailing characters to cut from the barcode in the field provided (available when Simple is selected from the Code Cutting drop-down list).

Pattern Delimiting Chars to Cut


Enter the pattern delimiting characters in the field provided (available when Pattern is selected from the Code Cutting drop-down list).

Pattern Mode

Select Keep Before, Keep After, or Keep Middle from the drop-down list (available when Pattern is selected from the Code Cutting drop-down list).

Keep Before: Cuts the part of the code that starts with the pattern string (data before the string remains).
Keep After: Cuts the part of the code that precedes and includes the pattern string (data after the string remains).
Keep Middle: Cuts the part of the code before and after (including) the two pattern strings (data between the two strings remains)

Example:

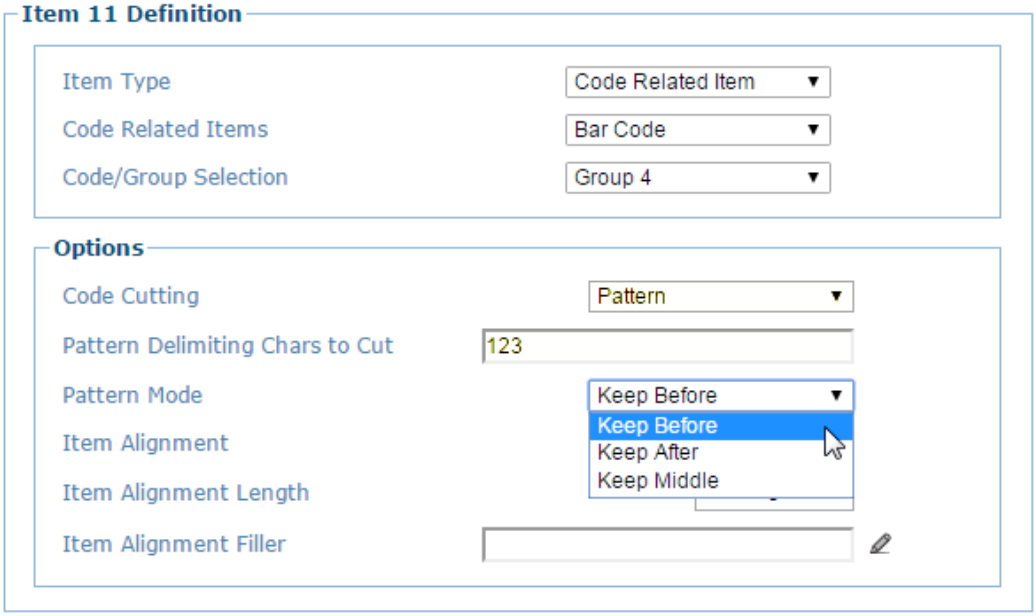

Referring to the window image above, if the read code is SDFR1235689123ASER the transmitted code (depending on the selected Pattern Mode) will be:

Keep Before: SDFR

Keep After: 5689123ASER

Keep Middle: 5689

Item Alignment

Select None, Left, or Right from the drop-down list.

Item Alignment Length

Enter an Item Alignment Length in the field provided.

Item Alignment Filler

Click to activate the Text Entry Tool and create filler text. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Item Data Size

Select Variable or a number of digits to use from the drop-down list. This is only available when Package Related Item is selected.

Item Data Format

Select Decimal (ASCII), Hexadecimal (ASCII), Bitmap (ASCII), or Numeric (Binary) from the drop-down list. This is only available when Package Related Item is selected.

Package Related Item: Options

Item Alignment

Select None, Left, or Right from the drop-down list.

Item Alignment Length

Enter an Item Alignment Length in the field provided.

Item Alignment Filler

Click to activate the Text Entry Tool and create filler text. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Item Data Size

Select Variable or a number of digits to use from the drop-down list.

Item Data Format

Select Decimal (ASCII), Hexadecimal (ASCII), Bitmap (ASCII), or Numeric (Binary) from the drop-down list.

Item Scale Type (Units)Use Global Scale Type, Metric (mm), Imperial (0.1 in.) if package related item is a measure or a weight.

3. When you have finished making changes, click Update All to save all pending changes, click Reset All to revert to all previously saved values, and click Reset Page to revert to previous saved values on the current page.

Messaging | Statistics

Use the **Statistics** window to select the desired statistical counters, making up the statistics field, and relative statistics field separator string to be sent to the system by the Stand Alone or Master scanner.

To edit the Statistics settings:


1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Messaging** | **Statistics**. The Statistics window opens.



2. Enter the appropriate information in the form as described below:

Enable

Select the check box to reveal and edit statistic message options. The selections correspond to the message as shown below:

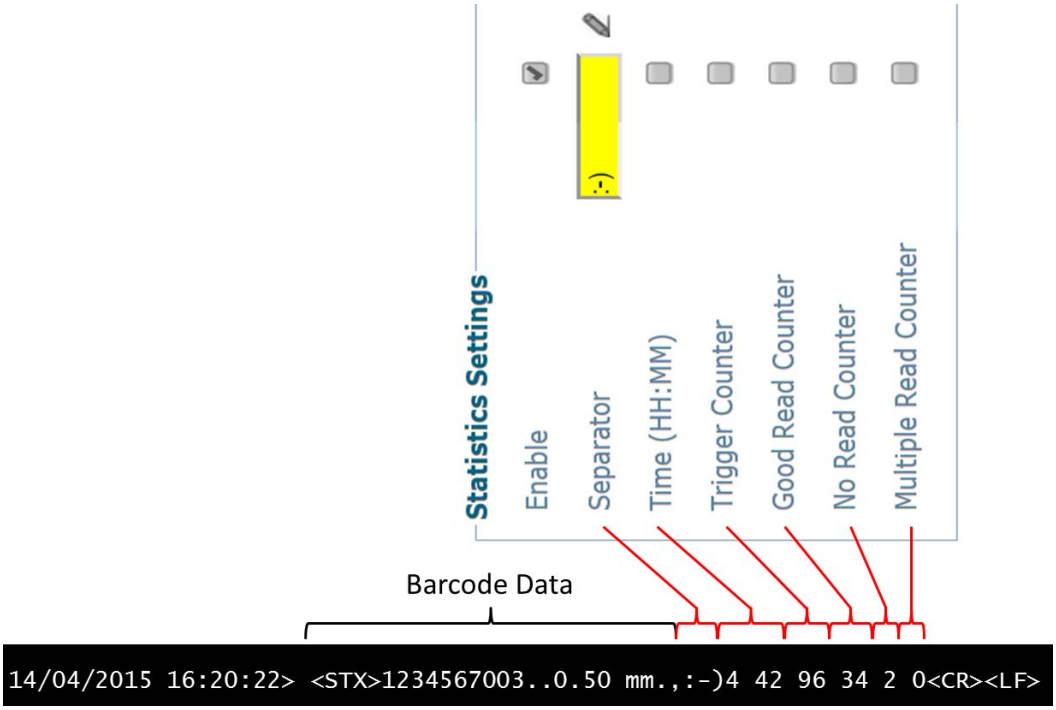

Separator

Click to activate the Text Entry Tool and create a Separator in the text field provided. Separator strings (up to 32 bytes) can be created and will be inserted between the last code and the first statistical counter.

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Time (HH:MM)

Select the check box to include the time counter in the statistical message, reporting the time elapsed in hours and minutes (H MM) from the last hardware reset.

Trigger Counter

Select the check box to report the total number of trigger sessions (reading phases) from the last hardware reset.

Good Read Counter

Select the check box to report the total number of good reads from the last hardware reset.

No Read Counter

Select the check box to report the total number of no reads from the last hardware reset.

Multiple Read Counter

Select the check box to report the total number of multiple reads from the last hardware reset.

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Messaging | Protocol Index

Use the **Protocol Index** window to configure Protocol Index parameters. Protocol Index allows the Host to transmit a string that it has associated to a pack contained within the tracking area.

It is possible to manage several different Protocol Index messages (one per available communication interface), within the same reading phase (for the same package.) If more than one Index message is received on the same communication interface, only the last one will be accepted.

These strings will be received by the SC5000, DX8210 and DS8110 and other devices and included within its output message according to the following order:

1. Built-In Ethernet User Socket 1
2. Built-In Ethernet User Socket 2
3. Built-In Ethernet User Socket 3
4. Auxiliary Serial Port
5. Main Serial Port

The general output format is: <Header>Index1<Data Packet Separator>...IndexN<Data Packet Separator>Standard Message<Terminator>


The Index field has the following format: <Index Header>Index Message<Index Terminator>



This parameter is only available for scanners configured as Standalone or as Master when working in On Line or PackTrack™ operating modes. In OnLine mode, the Protocol Index must arrive during the active reading phase otherwise it will be discarded. If the Distance from Protocol Index to Trigger Line parameter = 0, the Protocol Index must arrive during the active reading phase otherwise it will be discarded. In PackTrack™ mode: If the Distance from Protocol Index to Trigger Line parameter is not=0, the Protocol Index will arrive at the specified distance.

To edit the Protocol Index settings:

1. In the menu under Modify Settings, navigate to **Global Settings** | **Messaging** | **Protocol** Index. The **Protocol Index** window opens.

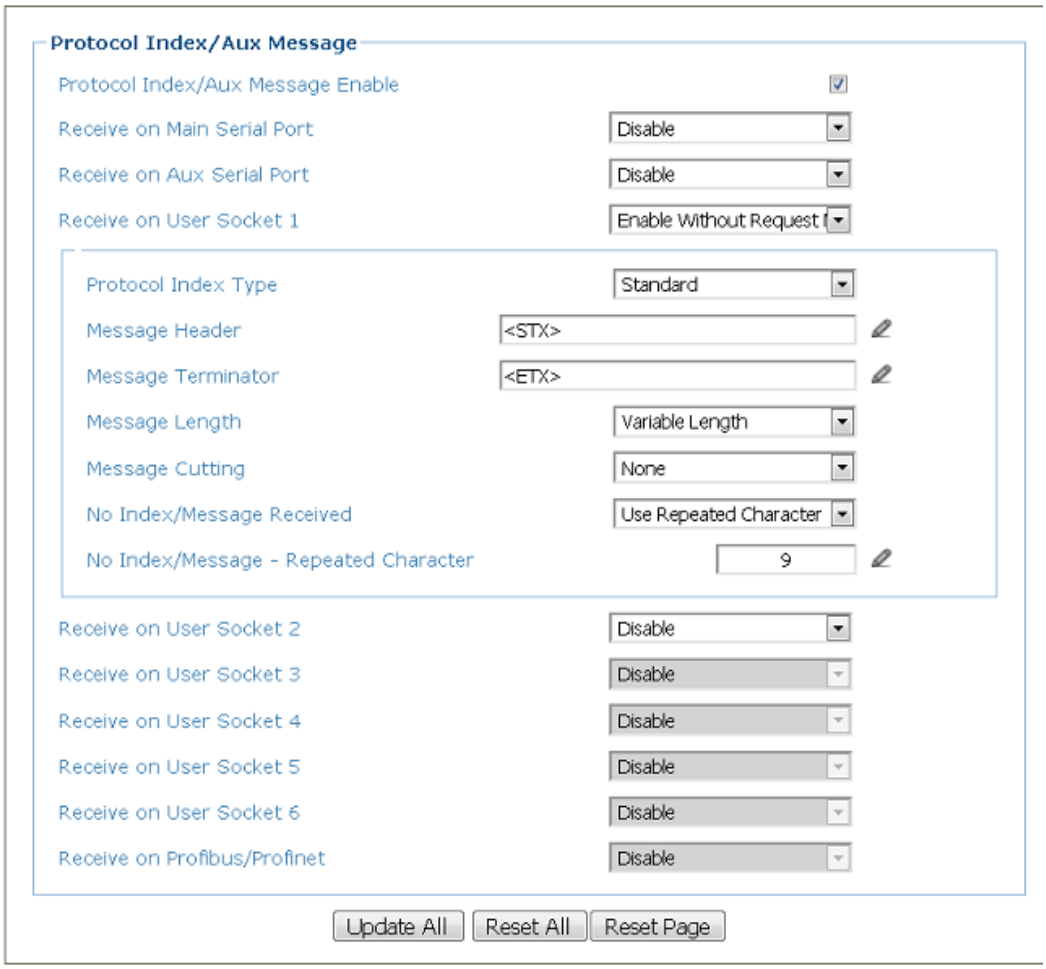

2. Enter the appropriate information in the form as described below:

Protocol Index/ Aux Message Enable

Select the check box to reveal and edit Protocol Index/Aux Message options.

Receive on Main or Aux Serial Port, or User Socket 1 or 6

Select Disable, Enable without Request Message, or Enable with Request Message from the drop-down list.

Disable: The selected communication channel is not used for Protocol Index string communication.
Enable without Request Message: The Host sends the Protocol Index string autonomously on the selected communication channel.
Enable with Request Message: The Host waits for the Protocol Index Request Message sent by the scanner, when the trigger detects the presence of a pack, before transmitting the Protocol Index string associated to the pack itself on the selected communication channel.

Protocol Index Type

Select Standard, Volume, Scale or Image Name from the drop-down list.

Standard
Volume
Scale
Image Name
ASI-ADP / Mux Message (socket only)
AIM Barcode Messaging

Request Message

Click to activate the Text Entry Tool and create a Request Message (up to 128 bytes) to be defined and transmitted. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your changes, or click Cancel to return to previous window.



The data entered in the message header and trailer fields must match the incoming message or the message will not be recognized by the scanner

Message Header

Click to activate the Text Entry Tool and create a Header (up to 128 bytes) to be defined and transmitted as a block preceding the Protocol Index string sent by the Host. Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Message Terminator

Click to activate the Text Entry Tool and create a Terminator to be defined and transmitted as a block following the Protocol Index string sent by the Host. Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Message Length

Select Length in Message, Variable Length, or a length of 3 through 12 from the drop-down list.

Length in Message: The first byte of the scanner output message indicates the length of the Protocol Index string sent by the Host.

Variable Length: The length of the Protocol Index string sent by the Host is variable.

3...12: The Protocol Index string has a fixed length from 3 to 12 characters.

Message Cutting

Select from the following Message Cutting options:

None
Simple
Pattern

Number of Leading Chars to Cut

Enter the number of leading characters to cut from the barcode in the field provided. (Available when Simple is selected from the Code Cutting options.)

Number of Trailing Chars to Cut

Enter the number of trailing characters to cut from the barcode in the field provided. (Available when Simple is selected from the Code Cutting options.)

Pattern Delimiting Chars to Cut


Enter the pattern delimiting characters (available when pattern is selected from the Code Cutting options.)

Pattern Mode

Select Keep before, keep After, or Keep Middle from the drop-down list (available when pattern is selected from the Code Cutting drop-down list.)

Keep Before: Cuts the part of the code that starts with the pattern string (databefore the string remains).
Keep After: Cuts the part of the code that precedes and includes the pattern string (data after the string remains).
Keep Middle: Cuts the part of the code before and after (including) the two pattern strings (data between the two strings remains)

Example:

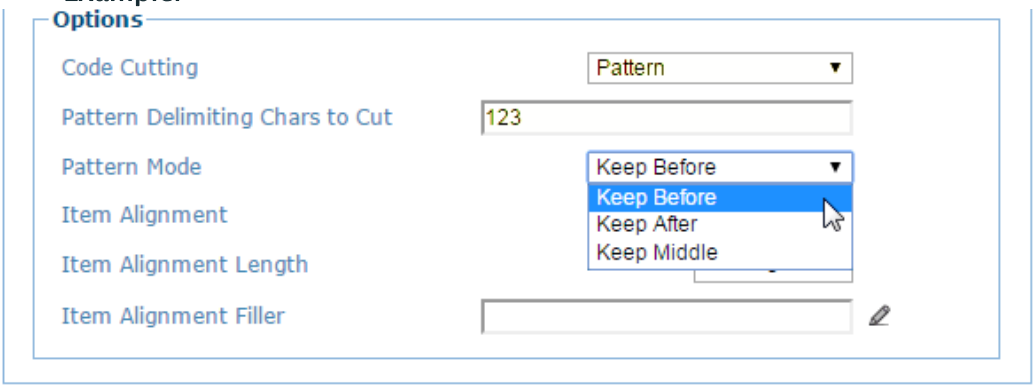

Referring to the window image above, if the read code is SDFR1235689123ASER the transmitted code (depending on the selected Pattern Mode) will be:

Keep Before: SDFR

Keep After: 5689123ASER

Keep Middle: 5689

No Index/Message Received

Select one of the following options from the drop-down:

Use Repeated Character
Use Specified Message

No Index/Message – User Message or Repeated Character

Click to activate the Text Entry Tool and create a No Index User Message or Repeated Character. Click Submit to save your changes, or Cancel to the previous window.

Distance from Message Receipt to Trigger

Enter the distance of travel between when a package hits the trigger (presence sensor) to when it should receive an expected message from, for example, a scale or other device.

When the Receive on Main Serial Port parameter of the selected interface port is set to Enable without Request Message, this parameter specifies the distance from the Trigger Line (i.e. Presence Sensor) to the expected receiving point of the Protocol Index/Aux Message. If set to 0 the Protocol Index/Aux Message must arrive during the active reading phase otherwise it will be discarded.

Socket Settings

If ASI ADP/Mux message is selected for Protocol Index Type, the following options are available.

ASI Device Type

Select AV6010 or AXIOM/AL5010 from the drop-down

ASI Device Transmit Edge

Select Leading or Trailing from the drop-down.

ASI Device Transmit Point

Enter the transmit point in inches or mm.

Receive on Profibus/ Profinet

Select Disable, Enable with Request, or Enable without Request from the drop-down. This option is only available with the Profibus or Profinet SC5000 unit.

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Messaging | Pass-Thru

Use the **Pass-Thru** window to pass a message received on ANY port (serial or user socket connection) to any other port(s).


Applications can also be implemented to connect a device such as a hand-held reader to any serial or network port for additional manual code reading capability.

When using Pass-Thru mode, follow these programming notes:

- When using serial ports – Program receiving port same way regarding baud rate, data bits, stop bits and parity to the device sending the data.
- The Termination string must be configured in the same way as the message terminator on the device sending the data. The terminator will be forwarded with the message.

To edit the Pass-Thru settings:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Messaging** | **Pass-Thru**. The Pass-Thru window opens.

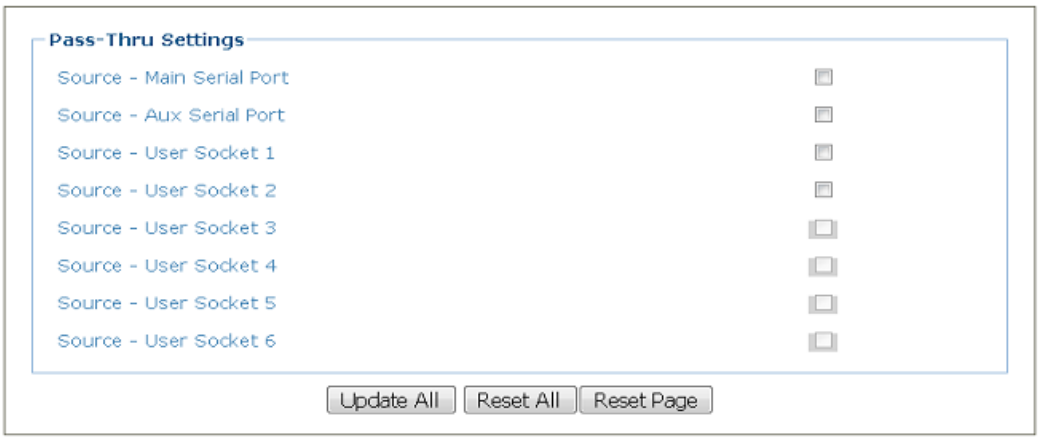

2. Enter the appropriate information in the form as described below:




The User Socket must be enabled in Ethernet > User Sockets for it to be available in this menu.

Source

Select the check box(es) following the Main Serial Port, Aux Serial Port, or numbered User Socket you wish to modify.

Maximum String Length

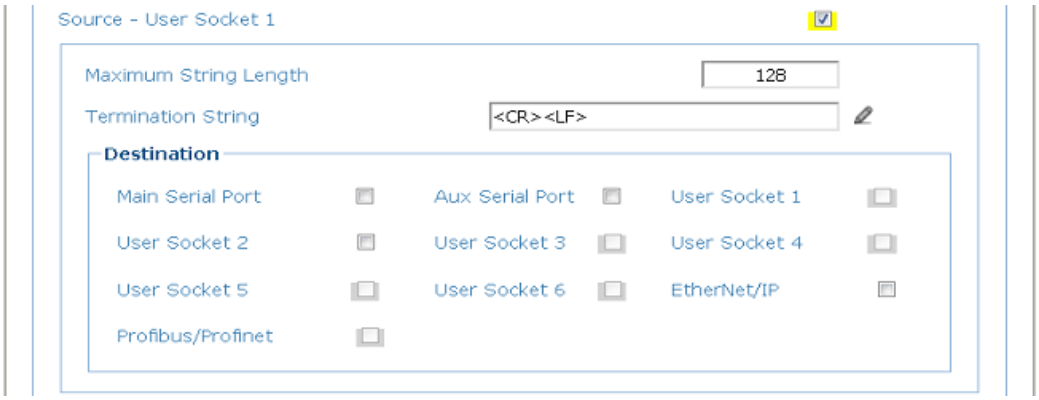

Enter the maximum length of the expected string to be received. If the string is longer than the one expected, it will be discarded.

Termination String

Click  to activate the Text Entry Tool to define the characters terminating the expected string. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Destination

Select the check box next to the destination(s) to be used for the Pass-Thru.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page. 0.

Messaging | Diagnostics Messages

Use the **Diagnostic Message** window to select the parameters managing diagnostic message transmission by the **Stand Alone** or **Master** scanner.

To edit the Diagnostic Message settings:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Messaging** | **Diagnostic Message**. The Diagnostic Message window opens.

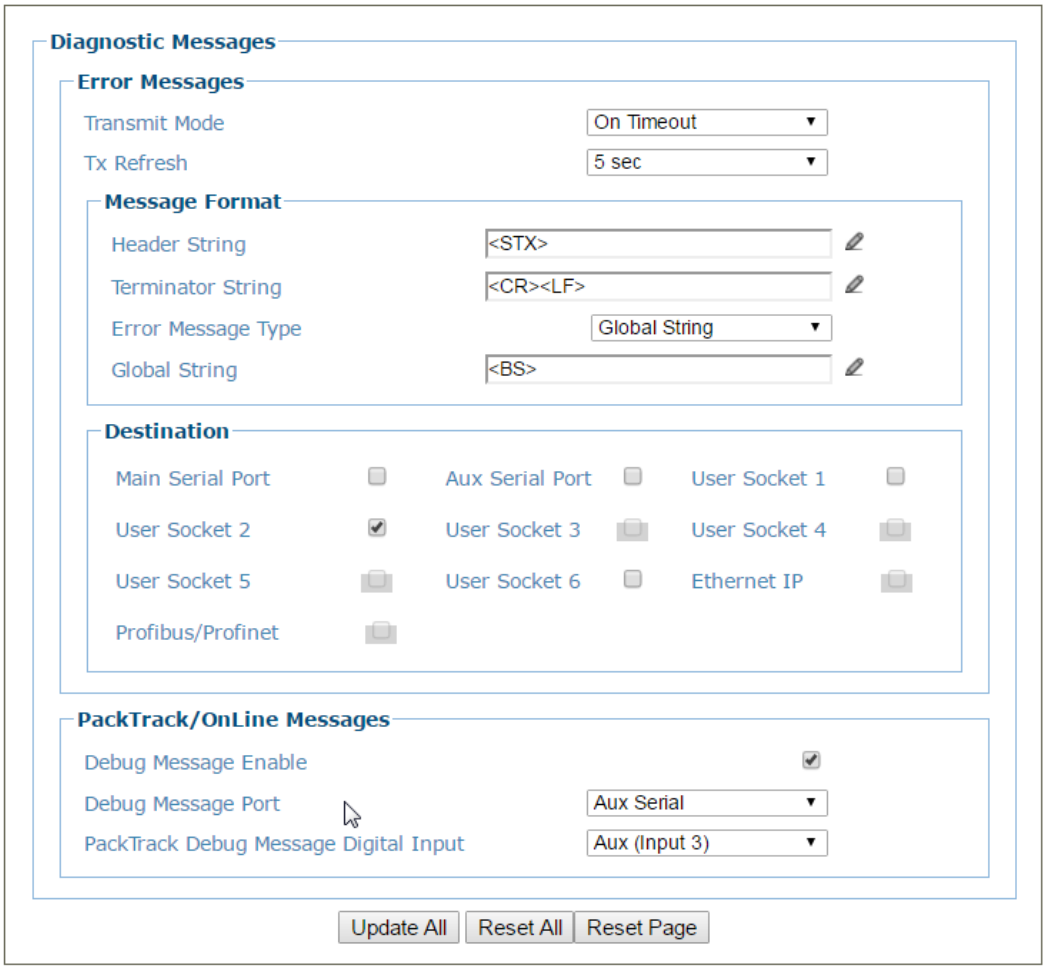

2. Enter the appropriate information in the form as described below:



The User Socket must be enabled in Ethernet > User Sockets for it to be available in this menu.

Transmit Mode


Select **On Timeout** or **With Code** from the drop-down list. The diagnostic message can be transmitted to the system by the Stand Alone or Master barcode scanner either asynchronously (at programmed intervals), or synchronously with the code.

Tx Refresh

If Tx Mode is asynchronous (On Timeout) is selected, select a TX Refresh rate in seconds or minutes from the drop-down list to define the time interval in which the diagnostic messages will be transmitted.

Message Position

If Transmit Mode is synchronous (With Code), the diagnostic messages will be transmitted on the same interface used for code transmission. Select **Append to Code** or **Replace Code** from the drop-down list.This selection determines if the messages will replace the code or be appended to it.

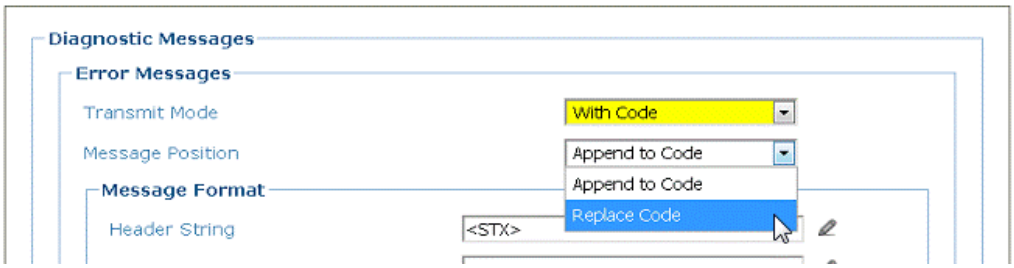

Message Format

Header String

Click to activate the Text Entry Tool to define the header string (up to 128 characters) as a block preceding the diagnostic message. Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Terminator String

Click to activate the Text Entry Tool to define the terminator string (up to 128 characters) as a block following the diagnostic message. Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Error Message Type

Select **Numeric** or **Global String** from the drop-down list to define how the message will be sent.

Global String (max. 32 chars)

Click to activate the Text Entry Tool to define the Global String message (up to 32 bytes) that will be sent as a diagnostic message for any detected diagnostic error.

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Destination

Select the check box next to the destination(s) to be used for the diagnostic messages. This is only available when the Transmit Mode is set to On Timeout.


PackTrack/Online Messages

Debug Message Enable

Select the checkbox to enable debug messages for PackTrack. If selected, this parameter allows transmitting messages concerning the system functioning. This is not available when Operating Mode selection is set to Continuous.

Debug Message Port

Select Main Serial, Aux Serial, or Socket n from the drop-down list. The debug message will be transmitted through the selected port.

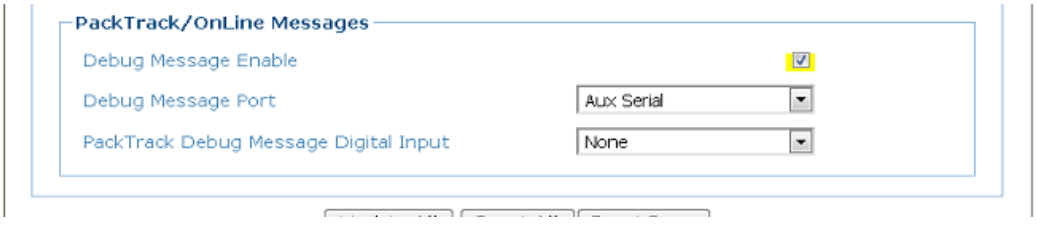

PackTrack Debug Message Digital Input

Select **None, Trigger (Input 1), Aux (Input 3)**, or **I/O 4 (Input 4)** from the drop-down list. This selection defines which digital input will be used to trigger debug message transmission.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Digital I/O

Use the **Digital I/O** window to configure the digital inputs and outputs for your barcode scanning system.

To edit the Digital I/O settings:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Digital I/O**. The **Digital I/O** window opens.

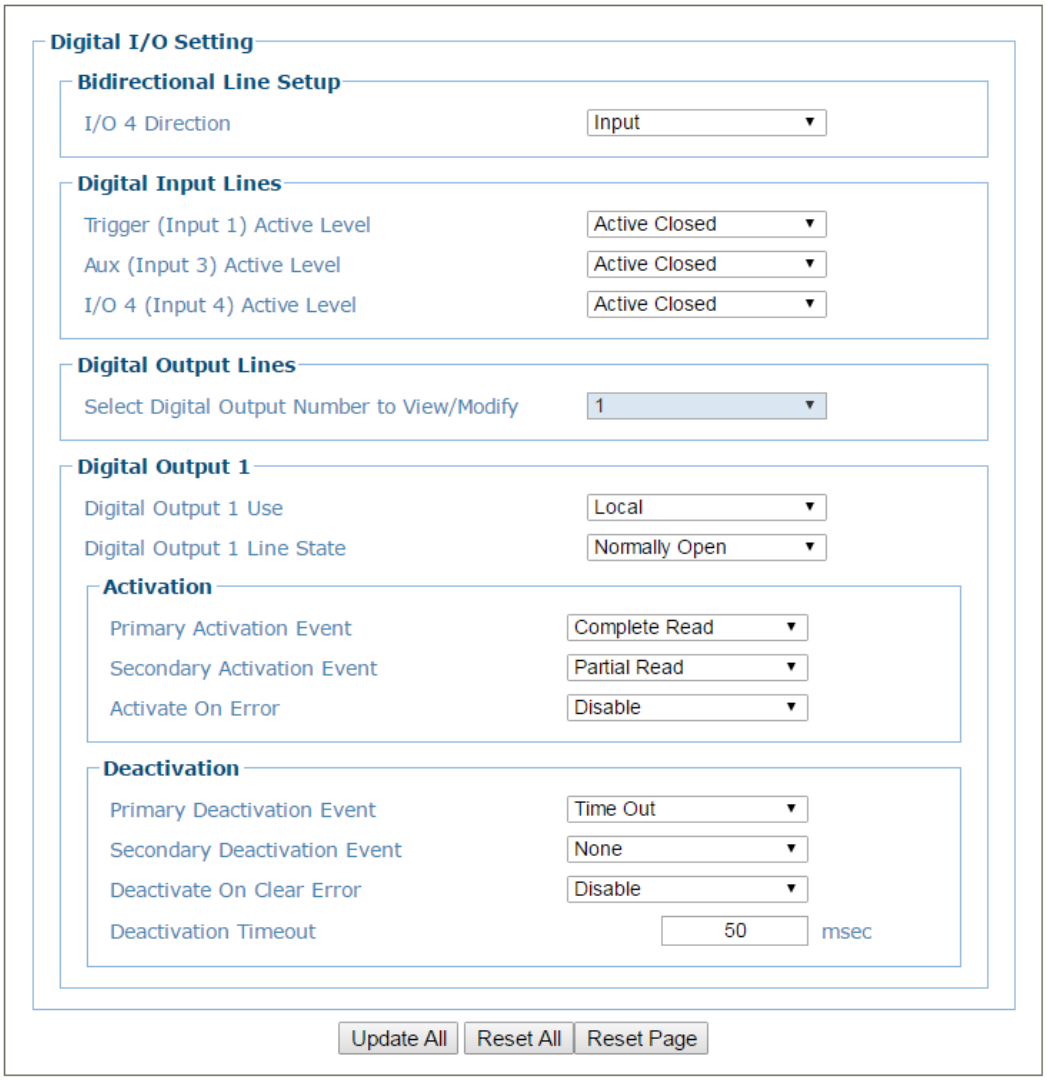

2. Enter the appropriate information in the form as described below:

Bidirectional Line Setup (SC5000 Controller Only)
I/O 4 Direction

Select Input or Output from the drop-down list. When Input is selected the SC5000 will flip from between Forward or reverse parameters. when Output is selected the SC5000 will provide the Forward/Reverse to other external products

Digital Input Lines
Trigger (Input 1) Active Level

Select Active Closed or Active Open from the drop-down list.

Active Closed: Input 1 is active when current flows through (IN1) EXT_TRIG pins.
Active Open: Input 1 is active when there is no current flowing through (IN1) EXT_TRIG pins.

This parameter setting is not valid, if the input has already been defined in On Line or PackTrack™ Operating Modes“Operating Mode” on page 51.

Aux (Input 3) Active Level

Select Active Closed or Active Open from the drop-down list.

Active Closed: Input 3 is active when current flows through IN3 pins.
Active Open: Input 3 is active when there is no current flowing through IN3 pins.



This parameter setting is not valid, if the input has already been defined in On Line or PackTrack™ Operating Modes "Operating Mode" on page 51.

I/O (Input 4) Active Level

Select Active Closed or Active Open from the drop-down list.

Active Closed: Input 4 is active when current flows through IN3 pins.
Active Open: Input 4 is active when there is no current flowing through IN3 pins.



This parameter setting is not valid, if the input has already been defined in On Line or PackTrack™ Operating Modes. See "Operating Mode" on page 51.

Digital Output Lines

Select Digital Output Number to View/Modify.

Select the number of the output you will view or modify from the drop-down list.

Digital Output n

Digital Output n Use

Select Local, EthernetIP, Profibus/Profinet, or Redundancy from the drop-down list. This parameter selects the source that drives the digital output. Local output is driven by the device application program. EithernetIP is driven by the EtherNet/IP Host and Profibus/Profinet is driven by the relative Fieldbus Host.

Digital Output n Line State

Select Normally Open or Normally Closed from the drop-down list.

Each output can be represented with an NPN transistor; this transistor acts like a switch: so, when the transistor is OFF, it acts like an OPEN switch. On the contrary, when the transistor is ON, it acts like a CLOSED switch.

Normally Open: The idle state of the output line is open, that is, the NPN transistor is OFF (like an open switch).When the output is activated, the transistor goes ON (like a closed switch).
Normally Closed: The idle state of the output line is closed, that is, the NPN transistor is ON (like a closed switch).When the output is activated, the transistor goes OFF (like an open switch).

Activation

Primary Activation Event And Secondary Activation Event

Select a Primary Activation Event from the drop-down list.

None: The output is always in line state.
Complete Read: The event occurs, if all selected codes are read.
Partial Read: The event occurs, if less than the selected codes are read.
No Read: The event occurs, if no code is read.
Trigger On: The event occurs, when a start event takes place starting the reading phase.
Trigger Off: The event occurs, when a stop event takes place ending the reading phase.
Multiple Read: The event occurs, if a code is read more than once consecutively.
Right/Match: The event occurs, if a code is successfully decoded and matches the Match Code (Verifier Code).
Wrong/No Match: The event occurs, if a code is successfully decoded but does not match the Match Code (Verifier Code).

Activate On Error



When using this parameter, all other activation events should be set to None.

Select Disable or Enable from the drop-down list. If this parameter is enabled, the output will activate when a diagnostic error message is sent.

Deactivation

Primary Deactivation Event

Select a Primary Deactivation Event from the drop-down list.

None: A deactivation event is NOT defined.
Timeout: Indicates the maximum duration of the output pulse. When selected, the Deactivation Timeout text field is revealed.
Trigger On: The event occurs, when a start event takes place starting the reading phase.
Trigger Off: The event occurs, when a stop event takes place terminating the reading phase.

Secondary Deactivation Event

Select a Secondary (Alternate) Deactivation Event from the drop-down list (see below).

None: A secondary deactivation event is NOT defined.
Trigger On: The event occurs, when a start event takes place starting the reading phase.
Trigger Off: The event occurs, when a stop event takes place terminating the reading phase.

Deactivate On Clear Error

Select Disable or Enable from the drop-down list. If this parameter is enabled, the output will deactivate when the error is no longer present.

Deactivation Timeout

Enter the maximum duration of the output pulse in the text field provided. Input a value from 40 to 15000 milliseconds.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Diagnostics

Use the **Diagnostics** window to configure error reporting for your barcode scanning system.

To edit the Diagnostics settings:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **Diagnostics**. The Diagnostics window opens.

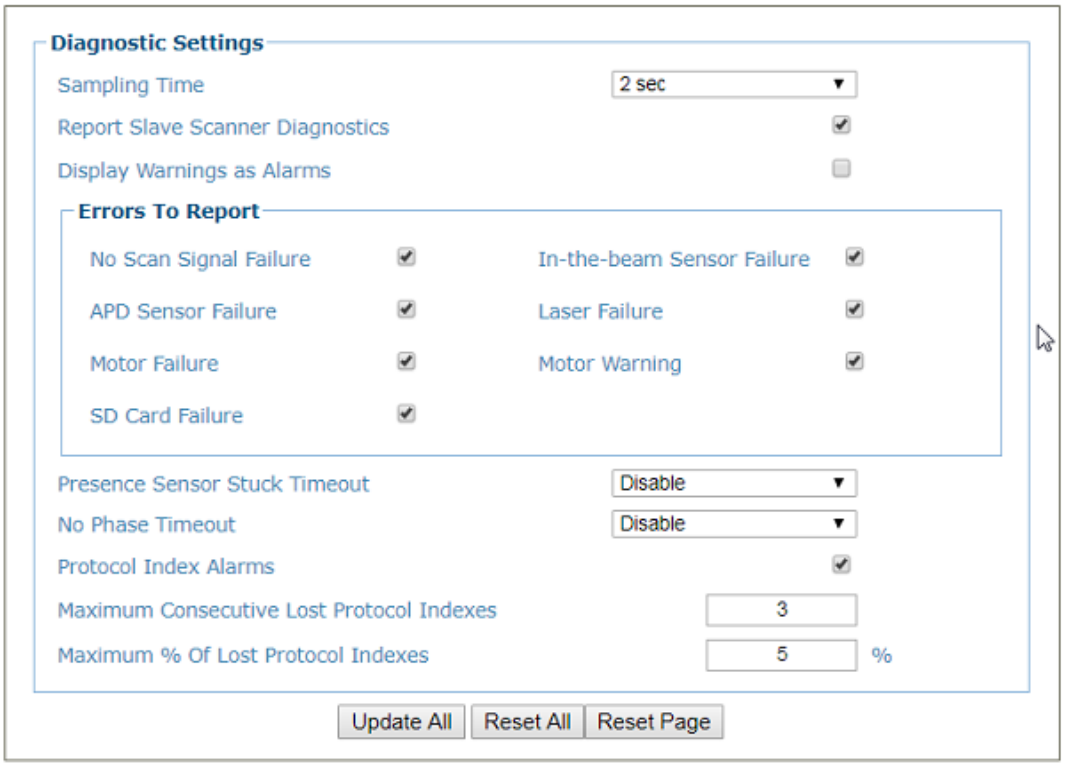

NOTE **This window will look different based upon the Operating Mode Selection in Operating Mode settings. The example below is for Online Mode.**

2. Enter the appropriate information in the form as described below:

Sampling Time

Select a Sampling Time in seconds or minutes from the drop-down list. This selection indicates the time lapse between system diagnostic queries.

Report Slave Scanner Diagnostics

Select the check box to report diagnostic information from the slave scanners in the system.

Display Warnings as Alarms


Select the check box to report warnings as alarms.

Errors To Report

Select the check box next to each error type the system should report.

No Scan Signal Failure
APD Sensor Failure
Motor Failure
SD Card Failure
In-the-Beam Sensor Failure
Laser Failure
Motor Warning

Online Mode

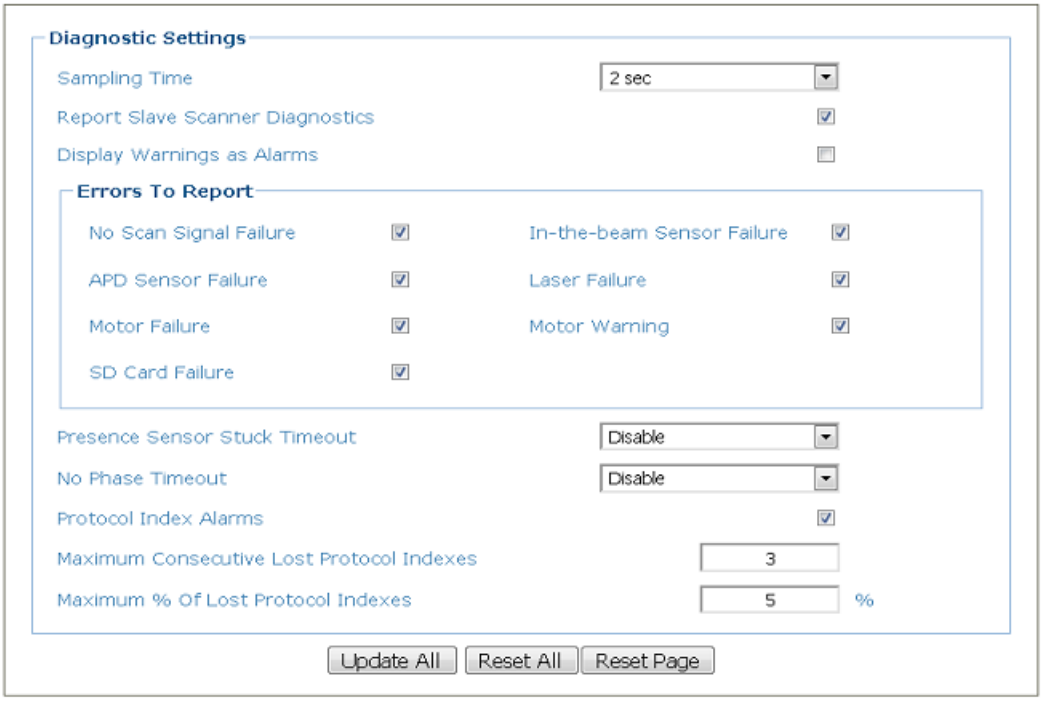

Presence Sensor Stuck Timeout

Select Disable or a time interval in seconds or minutes from the drop-down list. If a time interval is selected, a stuck sensor will report an error after the selected interval.

No Phase Timeout

Select Disable or a time interval in seconds or minutes from the drop-down list. If a time interval is selected, a stuck sensor will report an error after the selected interval.

Protocol Index Alarms

Select the check box to enable protocol index alarm messages


Maximum Consecutive Lost Protocol Indexes

Enter the number of consecutive lost protocol indexes allowed before an error is reported.

Maximum % Of Lost Protocol Indexes

Enter the maximum percentage of lost protocol indexes allowed before an error is reported.

Continuous Mode

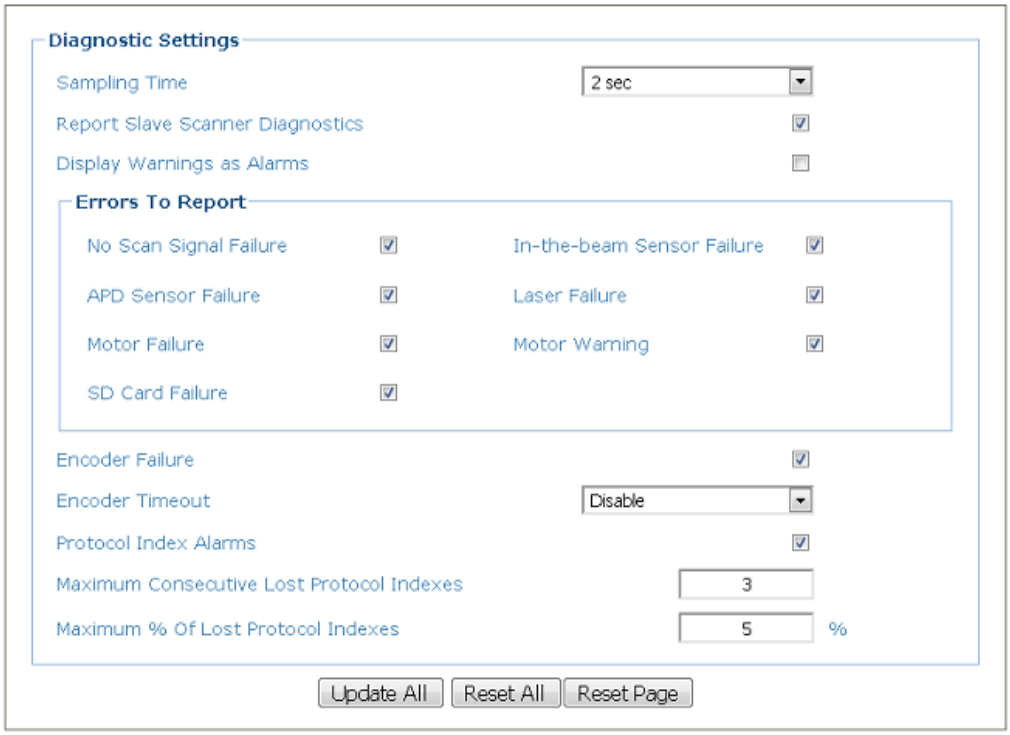

Encode Failure

Click the check box to report encoder errors.

Encoder Timeout

Select disable or a time interval in seconds or minutes from the drop-down list. If a time interval is selected, a stuck encoder will report an error after the selected interval.

Protocol Index Alarms

Select the check box to report presence sensor failure errors.


Maximum Consecutive Lost Protocol Indexes

Enter the number of consecutive lost protocol indexes allowed before an error is reported.

Maximum % Of Lost Protocol Indexes

Enter the maximum percentage of lost protocol indexes allowed before an error is reported.

PackTrack Mode

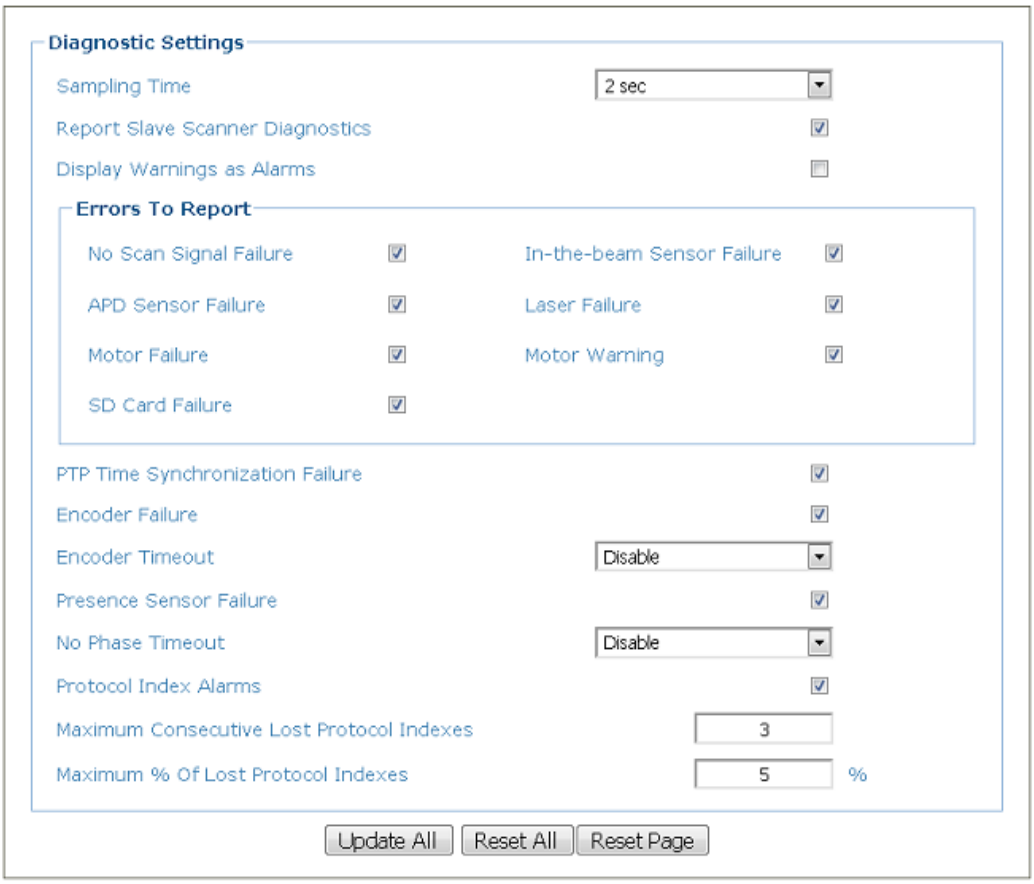

PTP Time Synchronization Failure

Click the check box to report PTP (Precision Time Protocol) Time Synchronization errors.

Encode Failure

Click the check box to report encoder errors.

Encoder Timeout

Select disable or a time interval in seconds or minutes from the drop-down list. If a time interval is selected, a stuck encoder will report an error after the selected interval.

Presence Sensor Failure

Click the check box to enable presence sensor failure.

No Phase Timeout

Select Disable or a time interval in seconds or minutes from the drop-down list. If a time interval is selected, a stuck sensor will report an error after the selected interval.

Protocol Index Alarms

Select the check box to report presence sensor failure errors.

Maximum Consecutive Lost Protocol Indexes

Enter the number of consecutive lost protocol indexes allowed before an error is reported.

Maximum % Of Lost Protocol Indexes

Enter the maximum percentage of lost protocol indexes allowed before an error is reported.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Energy Saving

Use Energy Saving window to activate/deactivate energy saving features. In particular, it allows turning network scanner motors and lasers on or off according to specific conditions. Use this parameter when the conveyor is stopped for a long period of time.

To view and edit Energy Saving settings:

1. In the menu under Modify Settings, navigate to Global Settings | Energy Saving. Energy Saving window opens.

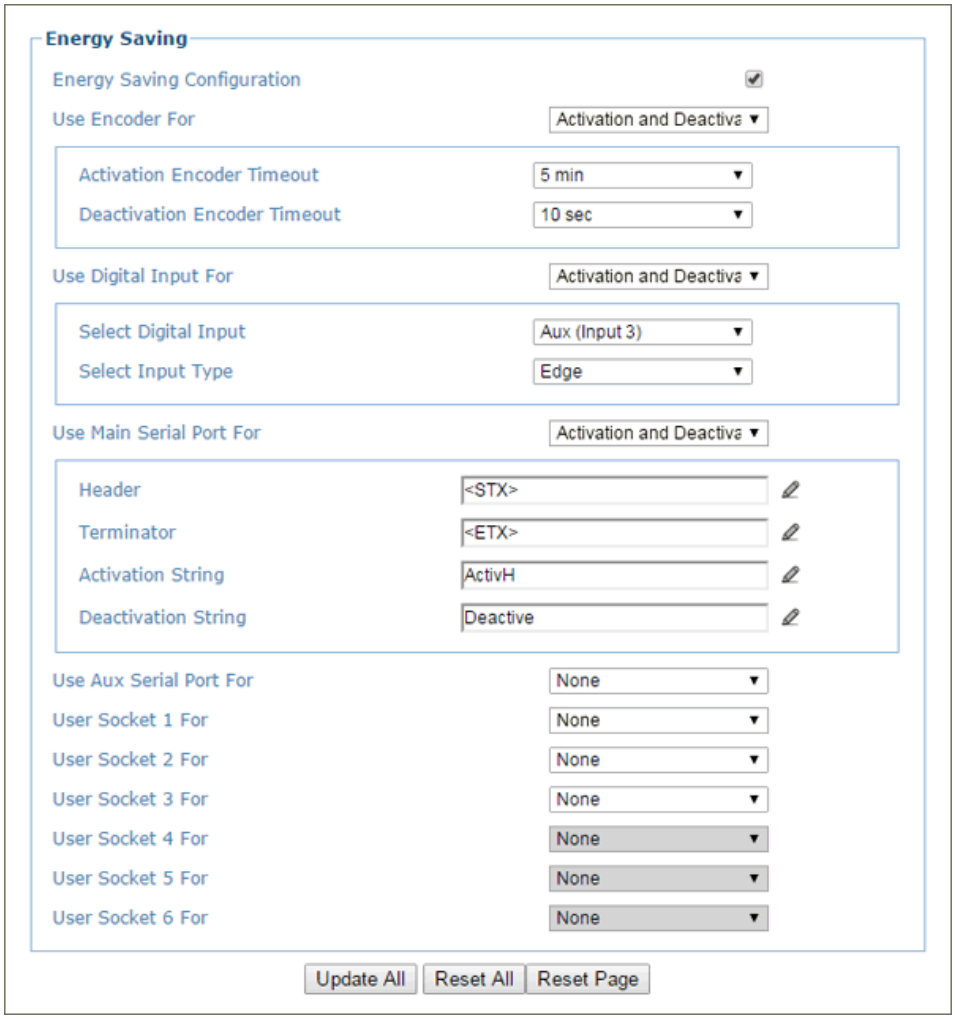

2. Enter the appropriate information in the form as described below:

Energy Saving Configuration

Select the check box to reveal Energy Saving Configuration options.

Use Encoder For

Select None, Deactivation, Activation, or Activation and Deactivation from the drop-down list. This parameter allows defining the function to be performed by an Encoder:

None: No function is performed by the digital input.
Deactivation: The digital input is used to deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on.
Activation: The digital input is used to activate Energy Saving. Thus, the motor and laser of all network scanners will be turned off.
Activation and Deactivation: The digital input is used to both activate and deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on/off.

Activation Encoder Timeout

Select a minute value from the drop-down list. This parameter is available only when the encoder is used for Energy Saving activation. If the encoder is stopped for

more than the programmed timeout, Energy Saving will be activated.

Deactivation Encoder Timeout

Select a second or minute value from the drop-down list. This parameter is available only when the encoder is used for Energy Saving deactivation. If the encoder runs for at least the programmed timeout, Energy Saving will be deactivated.

Use Digital Input For

Select None, Deactivation, Activation, or Activation and Deactivation from the drop-down list. This parameter allows defining the function to be performed by a digital input:

None: No function is performed by the digital input.
Deactivation: The digital input is used to deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on.
Activation: The digital input is used to activate Energy Saving. Thus, the motor and laser of all network scanners will be turned off.
Activation and Deactivation: The digital input is used to both activate and deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on/off.

Select Digital Input

Select a digital input from the drop-down list. This parameter defines the digital input to be used for activating/deactivating Energy Saving.

Select Input Type

Select Edge or Level from the drop-down list.

Use Main Serial Port For

Select None, Deactivation, Activation, or Activation and Deactivation from the drop-down list. This parameter allows defining the function to be performed by Main Serial Port:

None: No function is performed by the digital input.
Deactivation: The digital input is used to deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on.
Activation: The digital input is used to activate Energy Saving. Thus, the motor and laser of all network scanners will be turned off.
Activation and Deactivation: The digital input is used to both activate and deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on/off

Header



This parameter is available only when a communication channel has been selected to perform a specific function.

Click to activate the Text Entry Tool and create a Header (up to 128 bytes) to define a header (1 byte) and transmit it as a block preceding the activation/deactivation string sent to a Master or Stand Alone scanner. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Terminator



This parameter is available only when a communication channel has been selected to perform a specific function.

Click to activate the Text Entry Tool and create a Terminator to define a terminator (1 byte) and transmit it as a block following the activation/deactivation string sent to the Master or Stand Alone scanner. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Activation String



This parameter is available only when a communication channel has been selected to perform a specific function.

Click to activate the Text Entry Tool and create a string that defines the characters to be transmitted within the output message to activate Energy Saving.

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Deactivation String



This parameter is available only when a communication channel has been selected to perform the Deactivation or Activation & Deactivation function.

Click to activate the Text Entry Tool and create a character string to be transmitted within the output message to deactivate Energy Saving. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Use Aux Serial Port For

Select None, Deactivation, Activation, or Activation and Deactivation from the drop-down list. This parameter allows defining the function to be performed by the Aux Serial Port:

None: No function is performed by the digital input.
Deactivation: The digital input is used to deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on.
Activation: The digital input is used to activate Energy Saving. Thus, the motor and laser of all network scanners will be turned off.
Activation and Deactivation: The digital input is used to both activate and deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on/off.

Header



This parameter is available only when a communication channel has been selected to perform a specific function.

Click to activate the Text Entry Tool and create a Header (up to 128 bytes) to define a header (1 byte) and transmit it as a block preceding the activation/deactivation string sent to a Master or Stand Alone scanner. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Terminator



This parameter is available only when a communication channel has been selected to perform a specific function.

Click to activate the Text Entry Tool and create a Terminator to define a terminator (1 byte) and transmit it as a block following the activation/deactivation string sent to the Master or Stand Alone scanner. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Activation String



This parameter is available only when a communication channel has been selected to perform the Deactivation or Activation & Deactivation function.

Click to activate the Text Entry Tool and create a string that defines the characters to be transmitted within the output message to activate Energy Saving. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Deactivation String



This parameter is available only when a communication channel has been selected to perform the Deactivation or Activation & Deactivation function.

Click to activate the Text Entry Tool and create a character string to be transmitted within the output message to deactivate Energy Saving. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

User Socket n For

Select None, Deactivation, Activation, or Activation and Deactivation from the drop-down list. This parameter allows defining the function to be performed by a numbered Socket:

None: No function is performed by the digital input.
Deactivation: The digital input is used to deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on.
Activation: The digital input is used to activate Energy Saving. Thus, the motor and laser of all network scanners will be turned off.
Activation and Deactivation: The digital input is used to both activate and deactivate Energy Saving. Thus, the motor and laser of all network scanners will be turned on/off.

Header



This parameter is available only when a communication channel has been selected to perform a specific function.

Click to activate the Text Entry Tool and create a Header (up to 128 bytes) to define a header (1 byte) and transmit it as a block preceding the activation/deactivation string sent to a Master or Stand Alone scanner. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Terminator



This parameter is available only when a communication channel has been selected to perform a specific function.

Click to activate the Text Entry Tool and create a Terminator to define a terminator (1 byte) and transmit it as a block following the activation/deactivation string sent to the Master or Stand Alone scanner. Use characters from NUL (00H) to ~ (7EH). Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Activation String



This parameter is available only when a communication channel has been selected to perform a specific function.

Click to activate the Text Entry Tool and create a string that defines the characters to be transmitted within the output message to activate Energy Saving. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Deactivation String



This parameter is available only when a communication channel has been selected to perform the Deactivation or Activation & Deactivation function.

Click to activate the Text Entry Tool and create a character string to be transmitted within the output message to deactivate Energy Saving. Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.


3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page. 0.

HMI Settings

Use the **HMI Settings** window to configure some aspects of the scanner LEDs and X-Press™ interface.

To view and edit the HMI Settings:

1. In the menu under **Modify Settings**, navigate to **Global Settings** | **HMI Settings**. The HMI Settings window opens.

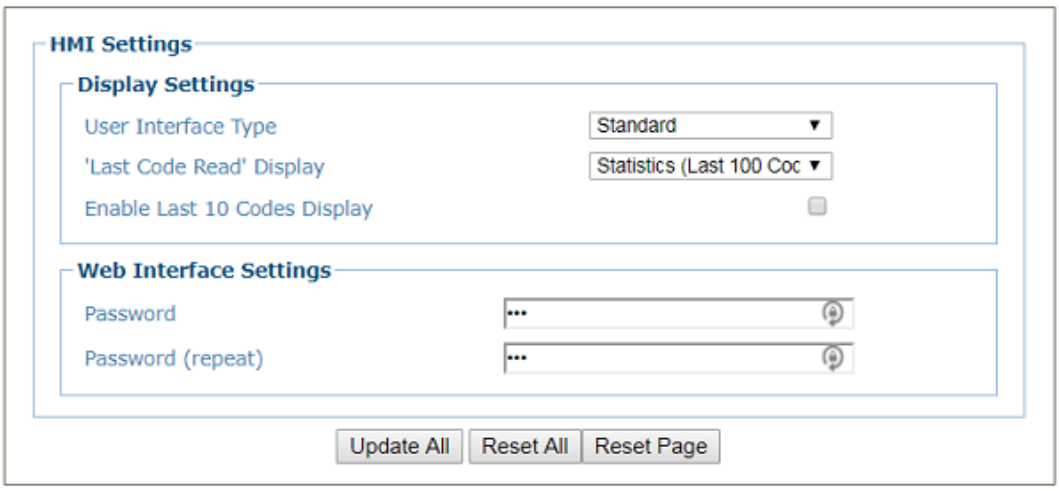

2. Enter the appropriate information in the form as described below:

Display Settings

User Interface Type

Select Standard or US Aiport from the drop-down list.

'Last Code Read' Display

Select Disable, Statistics (Last 100 Codes), or Statistics from the drop-down list.

Enable Last 10 Codes Display

Select the check box to display the last ten barcodes read.

Web Interface Settings

Password

Default Password is DLA,

Password (repeat)

Enter a password required to access the Web Interface

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Redundant Operation


Use **Redundant Operation** to identify the active Master in a redundant (REDs) system.

NOTE

The Operating Mode must be set to Packtrack for this option to be available.

To view and edit the Redundant Operation Settings:

1. In the menu under Modify Settings, navigate to **Global Settings | Redundant Operation**. The **Redundant Operation** window opens.

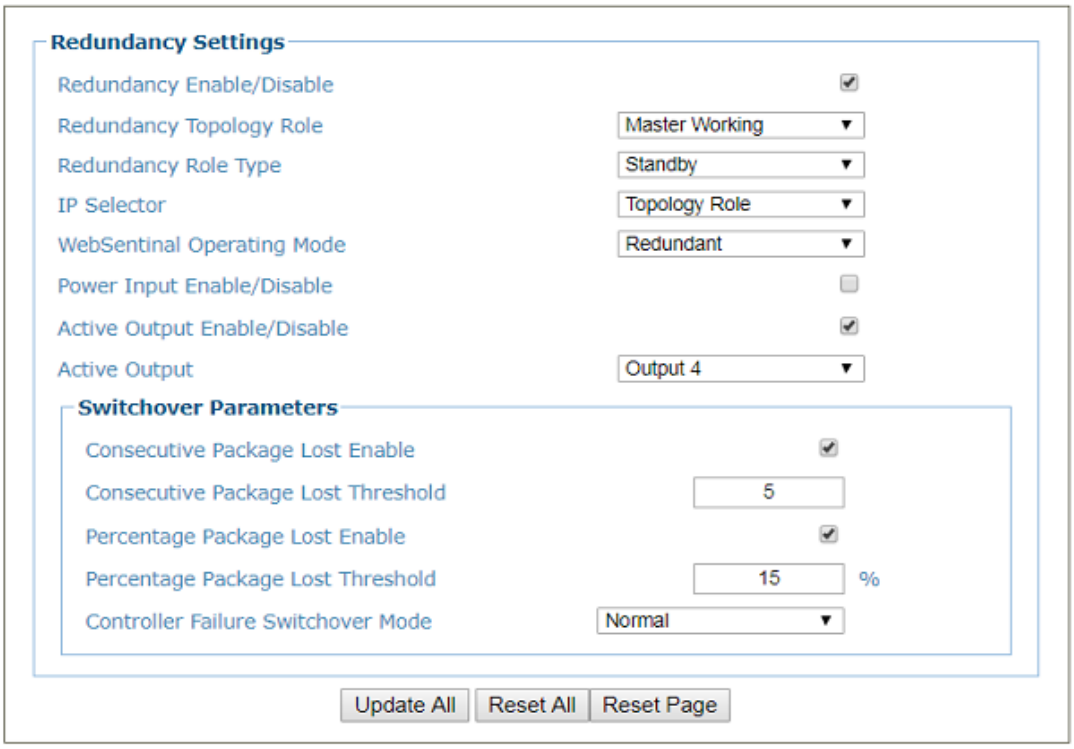

WARNING

In a redundant (REDS) system with **Start Input From Bus** selected in **Operating Mode** (see 'Operating Mode" on page 51), the PLC must trigger both SC5000s. Both SC5000s need to receive the same trigger so the redundant controller is able to compare packages with the packages of the active controller. This is true for all fieldbus.

WARNING

The Ethernet/IP addresses of the redundant SC5000s will switch if the 'Master Working" SC5000 fails and the 'Master Protecting" SC5000 takes over, allowing the PLC to find a consistent IP address.

For other than fieldbus, the IP address will not switch, so the PLC has to be connected at both IP Addresses and check for data on both controllers.

2. Enter the appropriate information in the form as described below:

Redundancy Enable/Disable

Select the check box to enable redundancy options.

Redundancy Topology Role

Select Master Alone, Master Working, or Master Protecting from the drop-down list. A non-redundant system show Master Alone in this field, and it is not editable.

Master Alone: SC5000 works as Stand Alone master (no Redundancy).
Master Working: SC5000 is configured as Master Working within the Redundancy system.
Master Protecting: SC5000 is configured as Master Protecting within the Redundancy system.

Redundancy Role Type

Select None, Active, or Standby from the drop-down list.

IP Selector

Select Topology Role or Redundancy Role from the drop-down list.

Topology Role: The IP Addresses are fixed since they are based on the Topology Redundancy Role selection; both IP Addresses must be monitored by WebSentinel or the Host.
Redundancy Role: The IP Addresses switch (follow) the controller Redundancy Role; only the Active IP Address needs to be monitored by WebSentinel or the Host.

WebSentinal Operating Mode

Select Standard or Redundant from the drop-down list.

Standard: When working in this mode, WebSentinel reports information about the active controller input status but not those of the stand-by controller.
Redundant: this mode is available only when working in a redundant system; WebSentinel reports information about the resource status of both the active controller and the stand-by controller.

Power Input Enable/Disable

Select the check box to enable power input.

Power Input Type

Select Trigger (Input 1), Aux (Input 3), or I/O 4 (Input 4) from the drop down list.

Active Output Enable/Disable

Select the check box to enable active output.

Active Output

Select Output 1, 2, 3, or 4 from the drop down list.

Switchover Parameters

Consecutive Package Lost Enable

Select the check box to enable.

If checked, it enables a Consecutive Package Lost Threshold to cause the exchange of the Redundancy Role between the Active SC5000 and the Stand-by SC5000 of the system.

Consecutive Package Lost Threshold

Enter the number of consecutive packages recognized by the Stand-by SC5000 but not by the Active SC5000, (the active controller is losing packages), after which the Redundancy Role is exchanged.

Percentage Package Lost Enable

Select the check box to enable.

If checked, it enables a Percentage Package Lost Threshold to cause the exchange of the Redundancy Role between the Active SC5000 and the Stand-by SC5000 of the system.

Percentage Package Lost Threshold

Enter the percentage (number out of 100 packages counted) recognized by the Stand-by SC5000 but not by the Active SC5000, (the active controller is losing a percentage of packages), after which the Redundancy Role is exchanged.

Controller Failure Switchover Mode

Select Normal or Fast from the drop-down.

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Hybrid Configuration


A hybrid system is one in which the SC5000 Controller is connected to a camera, dimensioner, scale or other device that generates data. The SC5000 is used to combine the data from the connected device and the scanning system into one message to the host.

NOTE

Reference the documentation for other devices!

To view and edit the Hybrid Configuration Settings:

1. In the menu under Modify Settings, navigate to Global Settings | Hybrid Configuration. The Hybrid Configuration window opens.

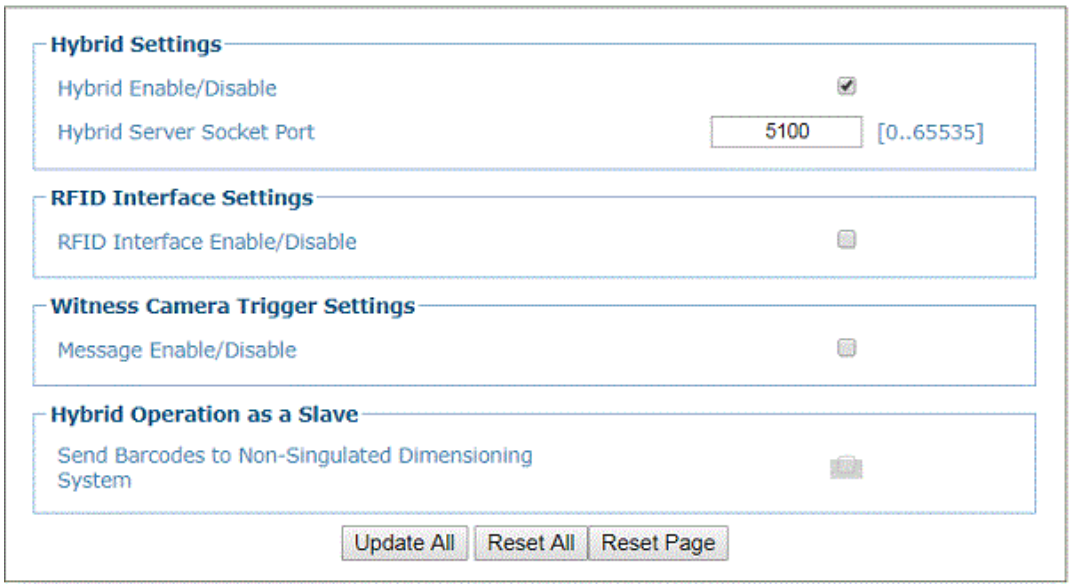

2. Enter the appropriate information in the form as described below:

Hybrid Settings

Hybrid Enable/Disable

Click the check-box to enable hybrid configuration.

Hybrid Server Socket Port

NOTE


The connecting unit must have the same port number.

If Hybrid is enabled, enter the port number of the server socket.

RFID Interface Settings

RFID Interface Enable/Disable

Select the check box to enable RFID options. If enabled, the following RFID Interface Setting window opens.

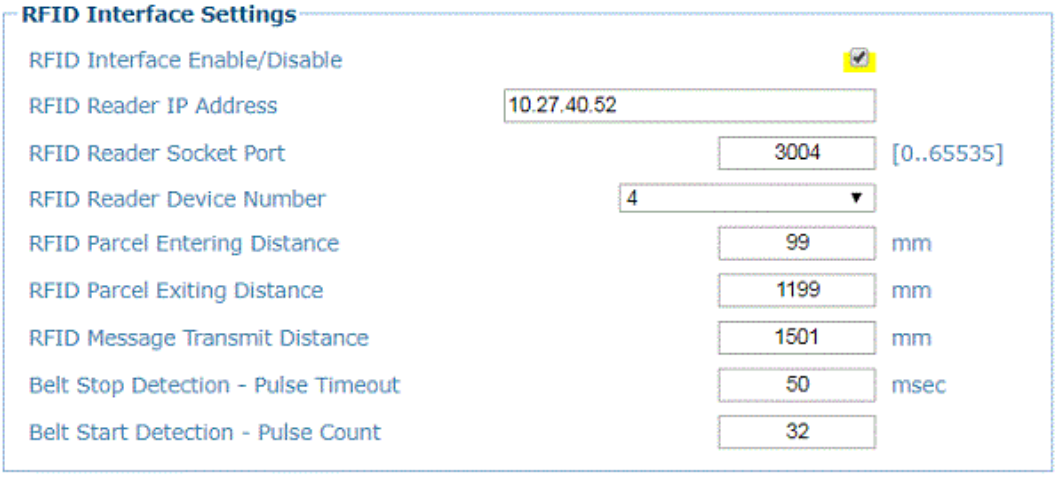

RFID Reader IP Address

Enter the IP Address of the RFID Reader connected to your SC5000.

RFID Reader Socket Port

Enter the Socket Port Number of the RFID Reader connected to your SC5000

RFID Reader Device Number

Select from Next Available or 1 – 16 for the RFID Device Number. Make sure it does not overlap any other devices

RFID Parcel Entering Distance

Enter the distance (inches or mm) from the photo sensor to the RFID parcel entering the area. This information is reported to the RFID reader in a message.

RFID Parcel Exiting Distance

Enter the distance (inches or mm) from the photo sensor to the RFID parcel exiting the area. This information is reported to the RFID reader in a message

RFID Message Transmit Delay

Enter the distance (inches or mm) from the photo sensor at which the RFID message is sent to the RFID reader.

Belt Stop Detection – Pulse Timeout

Enter the amount of time (milliseconds) that must pass without detection of any tachometer pulses before the belt is considered stopped.

Belt Start Detection – Pulse Count

Enter the number of tachometer pulse counts that must be detected without a pulse timeout being detected.

Witness Camera Trigger Settings

The Witness Camera is an external camera that provides a picture of each box in the system. Currently the Datalogic P16 camera is being used for this purpose.




The unit must be in Packtrack mode for this option to be available.

Message Enable/Disable

Select the check box to enable Witness Camera Trigger Settings. If enabled, the

following options will appear.

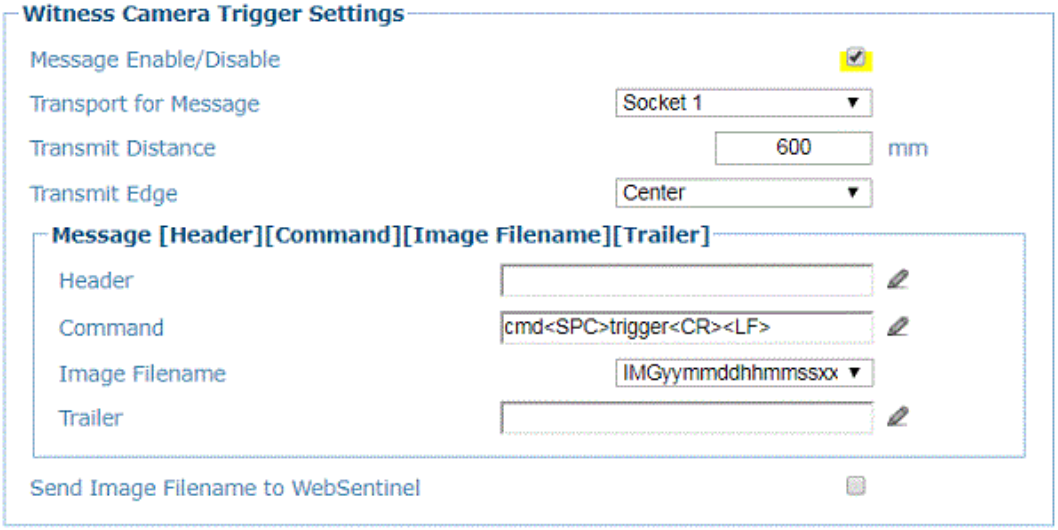

Transport for Message

Select from the drop-down which transport is used for this trigger message.

Transmit Distance

Enter the number of millimeters before the message should be transmitted.

Transmit Edge

Select from the drop-down Leading, Trailing, or Center to specify at which edge the message will be transmitted.

Message [Header][Command][Image Filename][Trailer]

Header

Click to activate the Text Entry Tool and create a Header in the text field provided. Headers (up to 128 bytes) can be defined and transmitted as a block preceding the barcode(s). Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Command

Click to activate the Text Entry Tool and create a Commandin the text field provided. Headers (up to 128 bytes) can be defined and transmitted as a block preceding the barcode(s). Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Image Filename

Select None, IMGxxxxx, IMGyymmddhhmmssxxxxx, or IMG_yy-mm-dd_hh-mm-ss_xxxxx from the drop-down.

Trailer

Click to activate the Text Entry Tool and create a Header in the text field provided. Headers (up to 128 bytes) can be defined and transmitted as a block preceding the barcode(s). Use characters from NUL (00H) to ~ (7EH).

Click Submit to save your text to the origin window text field, or click Cancel to return to origin window without transferring text.

Send Image Filename to WebSentinel

Click the check-box to have the filename you defined sent to the WebSentinel PLUS.

WebSentinel Message Settings

Image path

Click to activate the Text Entry Tool and enter the path where the WebSentinel Images shoud be sent.

Image File Extension (include '.')

Click  to activate the Text Entry Tool and enter the image file extension; .jpg, .png, .bmp, etc.

Hybrid Operation as a Slave

Send Barcodes to Non-Singulated Dimensioning System

Select the check-box to enable Non-Singulated Dimensioning System Info. options. This is only available if in Continuous Mode.

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Device Settings

Use the Device Settings Menu Tree selections during initial mounting and setup to view device information and configure your system devices. If multiple scanners are used in a tunnel or array, each named scanner will be listed under Device Settings with the sub-menus **Device Info, Mounting,** and **Options**. If necessary, you can later make modifications to the configuration using the same menu selections, including:

Device Settings

Name Scanner

"Device Settings | Device Info" on page 174

"Device Settings | Mounting" on page 176


"Device Settings | Options" on page 179

Device Settings | Device Info

Use the **Device Info** window to view information about each device in the system including description, serial number and address. The information on this page is not editable.

To view the Device Info window:

1. In the menu under **Modify Settings**, navigate to **Device Settings** | **Device Name (if applicable)** | **Device Info**. The Device Info window opens.

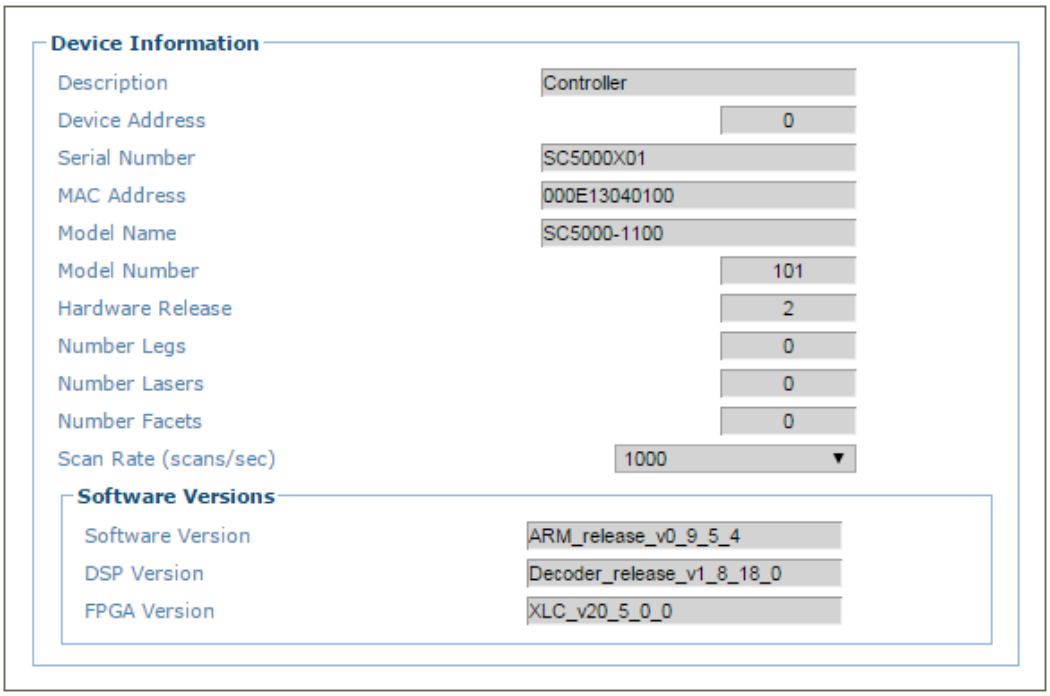

2. View the following scanner information.

Description

Displays the scanner description entered in the System Info window.

Device Address

Displays the system address which is generated from the Dev information found on the System Information page.

Serial Number

Displays the serial number sent by the device.

MAC Address

Displays the MAC (media access control) address of the device.

Model Name

Displays the Model name sent by the device.

Model Number

Displays the Model number sent by the device.

Hardware Release

Displays the hardware release number of the device.

Number Legs

Displays the number of laser legs (beams) produced by the device. Each DS8110 (Line) scanner has 1 leg, while each DX8210 (X) scanner has 2 legs.

Number Lasers

Displays the number or lasers used by the scanner.

Number Facets

Displays the number of facets in the mirror wheel.

Scan Rate (scans/sec)

Displays the scans/per second achieved by the scanner.

Software Versions

Software Version

Displays the currently installed version of the ARM (anonymizing relay monitor) software.

DSP Version

Displays the currently installed version of the decoder software.

FPGA Version

Displays the currently installed version of the field-programmable gate array software.

Device Settings | Mounting


Use the **Mounting** window to calibrate your scanner.

To view and edit the Mounting settings:

1. In the menu under **Modify Settings**, navigate to **Device Settings** | **Device Name (if applicable)** | **Mounting**. The Mounting window opens.

NOTE

If more than one device is included in the scanning system, the device name will be listed in the menu tree after the Device Settings level.

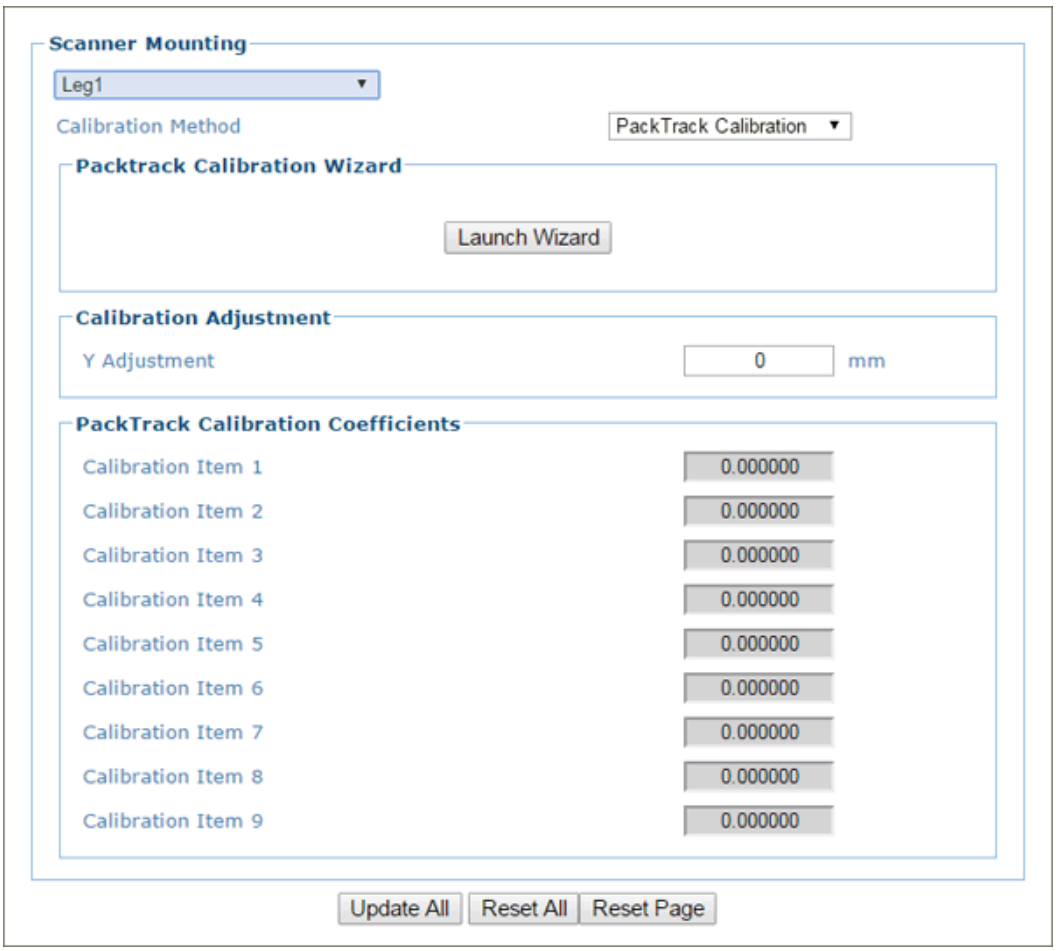

2. Enter the appropriate information in the form as described below:

Leg N (DX8210 Only)

Select a laser leg for calibration from the drop-down list.

Calibration Method

Select Use Built-In Calibration or **PackTrack Calibration** from the drop-down list. Use Built-In Calibration only available for the DX8210, and you must manually enter the requested data. If PackTrack Calibration is selected, use the wizard to automatically enter most of the data.

Both the Built-In and PackTrack Calibration methods need manually entered data. The Built-In method reduces the number of entries for the scanner to calculate the PackTrack parameters.

PackTrack Calibration

PackTrack Calibration Wizard

Click Launch Wizard to open the PackTrack™ Calibration Wizard. For complete instructions on setting up your scanners using PackTrack, see the DX8210 and DS8110 Reference Manuals, available at www.datalogic.com. View PackTrack calibration in the On line help for the particular scanner.

Calibration Adjustment

Y Adjustment

Enter the scanner adjustment from Y axis in millimeters in the field provided. This is used to make fine adjustments to the tested calibration. This is used during dynamic calibration to fine tune the Y parameter.

For complete instructions on setting up your scanners using PackTrack, see the DX8210 and DS8110 Reference Manuals, available at www.datalogic.com.

PackTrack Calibration Coefficients

Calibration Item


1-9

These non-editable fields display the PackTrack calculations.

Use Built-in Calibration

Built-in Calibration (DX8210 only)

If Use Built-in Calibration is selected from the Calibration Method drop-down list. The Scanner Orientation window appears. See the DX8210 Reference Manual (Alternate Built-In Calibration for Top Mount), available at www.datalogic.com, for the complete procedure for setting up your barcode scanner with built-in calibration.

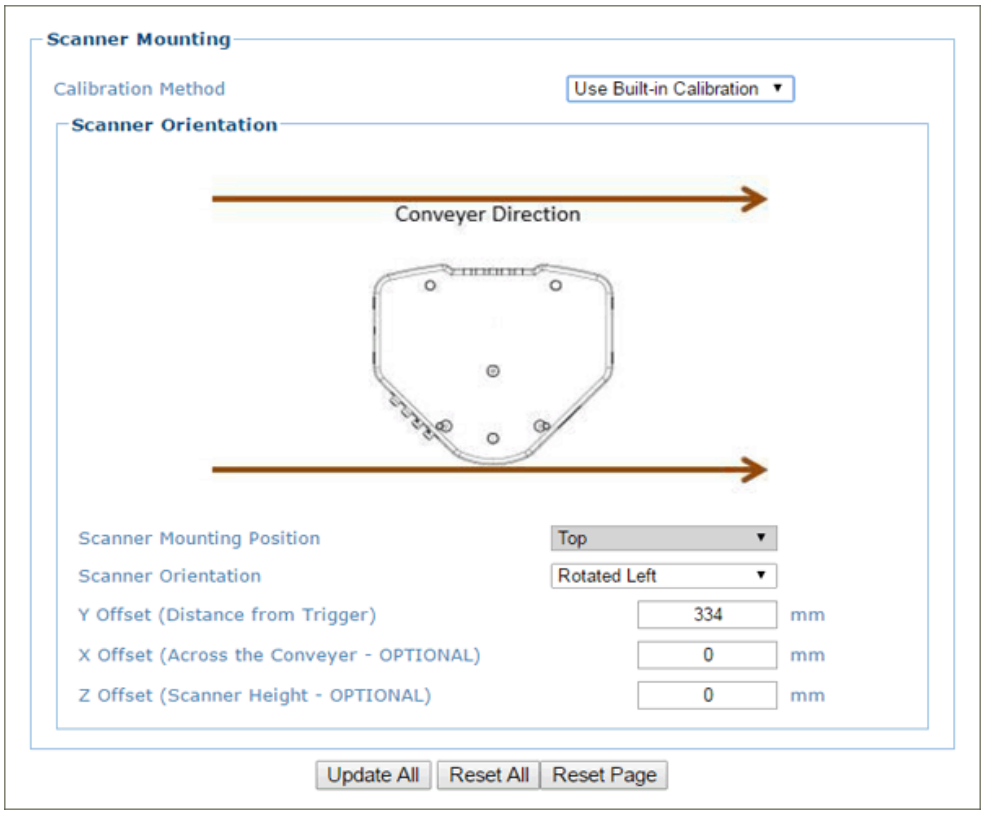


Scanner Mounting Position

Select Top or Side from the drop-down list.

NOTE **At the time of publication, Built in calibration is not available for side mount scanners. PackTrack calibration must be used. Top is the only available option with this manual release.**

Scanner Orientation

Select Rotated Right, Forward, Rotated Left, or Backward from the drop down list.

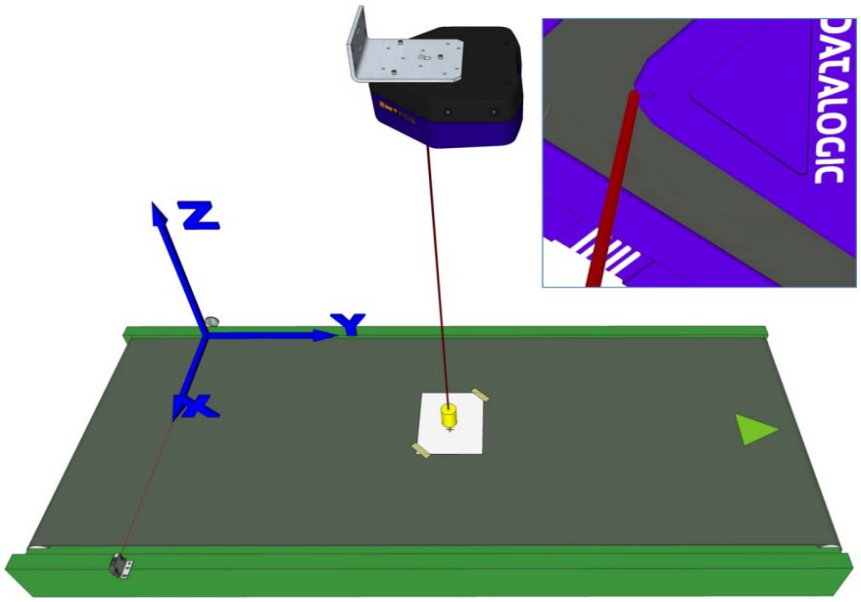

Y Offset (Distance from Trigger)

Enter the distance value in the field provided.

X Offset (Across the Conveyor – OPTIONAL)

Enter the distance value in the field provided.

Z Offset (Scanner Height – OPTIONAL)

Enter the height value in the field provided. The Z measurement is taken from the DX8210 to the belt surface.

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

PackTrack™ Calibration Wizard

PackTrack™ is a patented operating mode for **Datalogic Omni-Directional Reading Stations** used to read and correctly assign codes read on different packs when placed in the scanner Reading Area at the same time.

For complete instructions on setting up your scanners using **PackTrack**, *see the **DX8210 and DS8110 Reference Manuals***, available at www.datalogic.com.

Device Settings | Options

Use the **Options** window to configure the scanner LEDs and X-Press Interface.


To view the Options settings:

1. In the menu under **Modify Settings**, navigate to **Device Settings** | **Device Name (if applicable)** | **Options**. The Options window opens.



If more than one device is included in the scanning system, the device name will be listed in the menu tree after the Device Settings level.

Options will vary depending on which device is being represented.

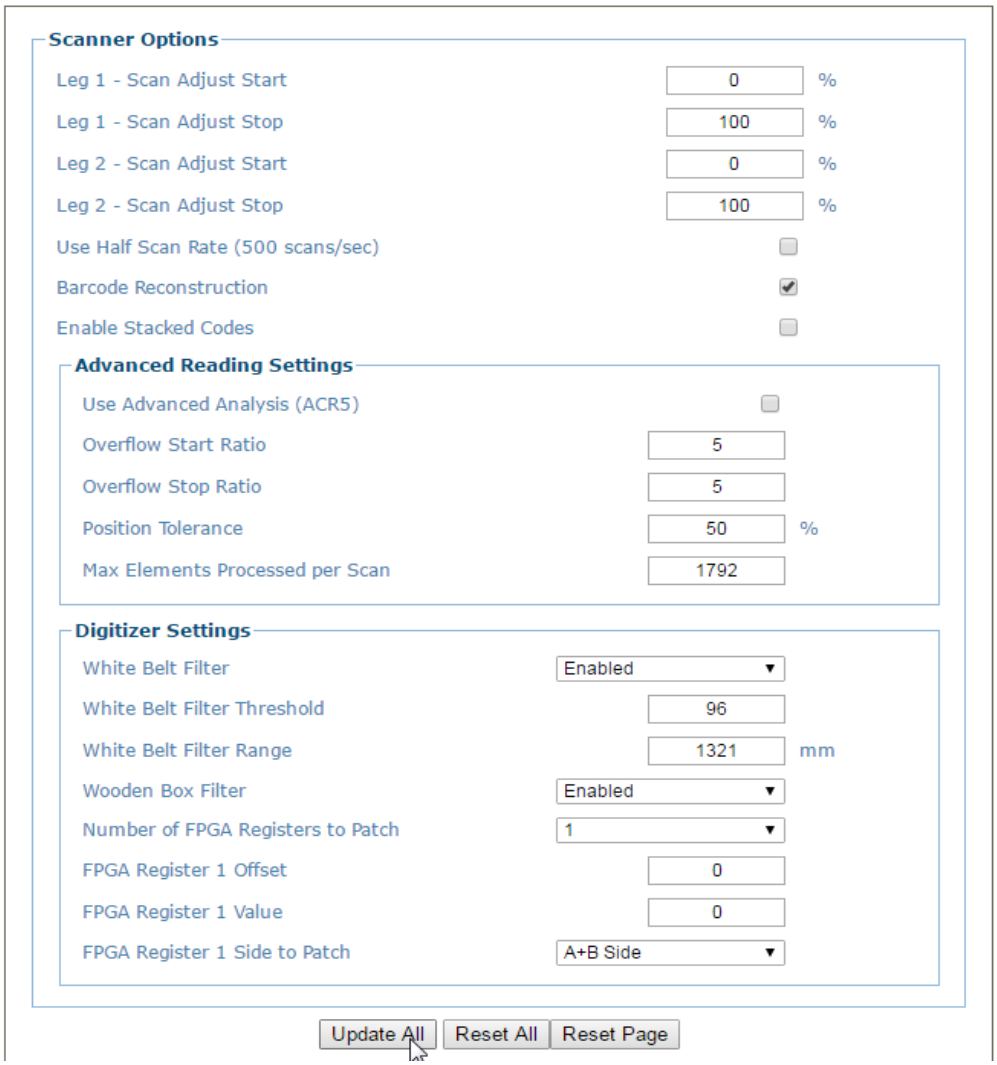


2. Enter the appropriate information in the form as described below:

Field of View Start Angle (DS8110)

Enter the field of view (FOV) start angle in the field provided. This will adjust the start FOV angle to that specified.

In the example below, the original Start Angle of 30° is reduced to 25° degrees when that value is entered.

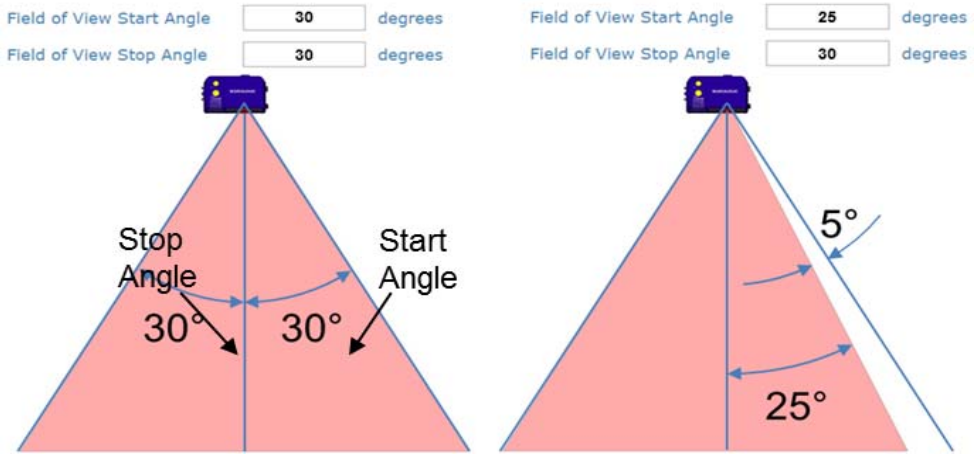

NOTE **This option is only available for the DS8110 scanner.**


Field of View Stop Angle (DS8110)

Enter the field of view (FOV) stop angle in the field provided. This will adjust the start FOV angle to that specified.

NOTE **This option is only available for the DS8110 scanner.**

Leg 1 (or 2) – Scan Adjust Start(DX8210)
Leg 1 (or 2) – Scan Adjust Stop (DX8210)

Enter percentages of the total scan area (100%) for each leg of the DX8210 as illustrated in the image below. Make adustments to narrow the reading area of each leg of the X pattern as needed for your application.

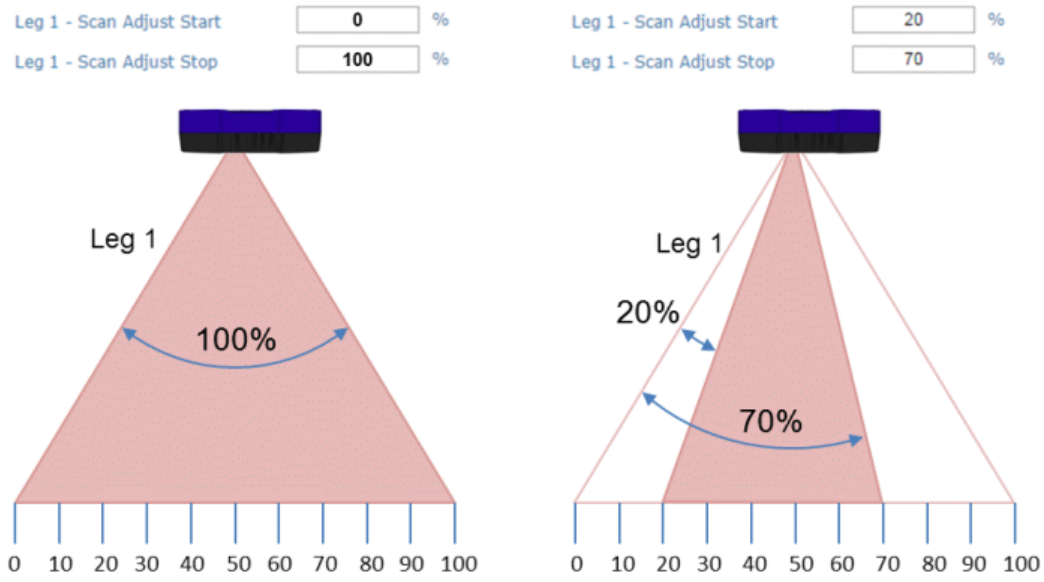

Use Half Scan Rate

Select the check box to enable the controller to use 500 scans/sec. This option can be used to reduce the decode processing time. The processing time maybe increased in application where the conveyor is slow and the bar height is high.

Barcode Reconstruction

Select the check box to enable Advanced Code Reconstruction (ACR™ 4) when reading the code. If not checked, standard linear reading mode will be used.

Enable Stacked Codes

NOTE

This item may increase data processing time. The delay may affect the scanners ability to provide a good read in time for data transmission.

Select the check box to improve code reconstruction when two or more codes (of the same or different symbologies) are stacked one on top of the other with little or no space between them.

Configure ETH-2 for Dedicated Setup/Aux

In a master/slave system (scanner as master, not an SC5000), this option is available for slave scanners. Select the check box to enable.

This option applies to the last slave scanner in the daisy-chain system, allowing the open Ethernet port to work as a dedicated setup port.

In practice, you can always communicate using this port, but selecting the checkbox turns off all of the other EBC traffic on that port.

WARNING

This option must only be applied to the last slave scanner in the EBC network. Applying this option to the other slaves will disrupt the EBC network.

Advanced Reading Settings

WARNING

Advanced Reading Settings are intended for special cases only, and must only be applied with the guidance of Datalogic Support.

Use Advanced Analysis (ACRS)

Select the checkbox to enable advanced decoding options that may help some applications. However, they can cause increased processing time.

Overflow Start Ratio

Enter the minimum expected width of the barcode starting quiet zone, expressed in number of modules from 1 to 50.


Overflow Stop Ratio

Enter the minimum expected width of the barcode stopping quiet zone, expressed in number of modules from 1 to 50.

Minimum Start/Stop Number

This parameter defines the minimum number of consecutive scans containing the code start and the minimum number of consecutive scans containing the code stop character which must occur before activating the code reconstruction. For correct functioning, both conditions must take place. Enter a number from 1 to 50. This option is used when there are multiple bar codes in the scan line and reduces the risk of having a subset of data pulled out of a longer bar code.

It is also used in applications with a slow moving conveyor and a bar code with a large bar height that can increase the amount of data and the processing time.

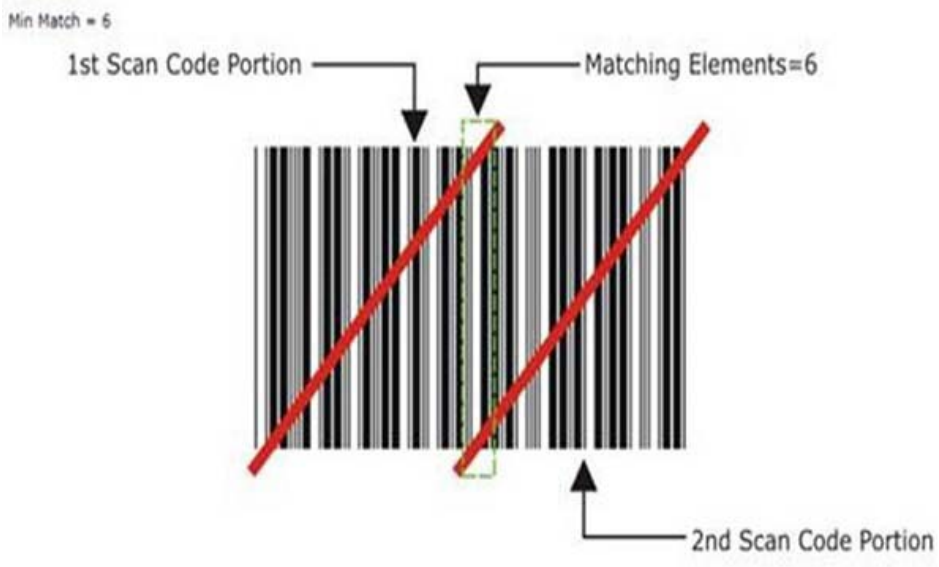

Minimum Match

This parameter defines the minimum number of matching elements required when comparing two consecutive scan code portions. If at least the defined number of elements matches between the two portions, both of them will be accepted for code reconstruction.

Position Tolerance

Enter the amount of dimensional tolerance which can be allowed when comparing two code elements. The tolerance value is expressed as percentage of the code module dimension.

Duration Tolerance

Enter the amount of positional tolerance which can be allowed when comparing two code elements. The tolerance value is expressed as a percentage of the code digit dimension.


Max Elements Processed per Scan

Enter the maximum number of scan elements (bars/spaces) that will be processed in a scan line.

NOTE

Use the DS8110 and DX8210 Digitizer Settings to increase scan element throughput and provide support for a white belt and wooden box filter.

Digitizer Settings

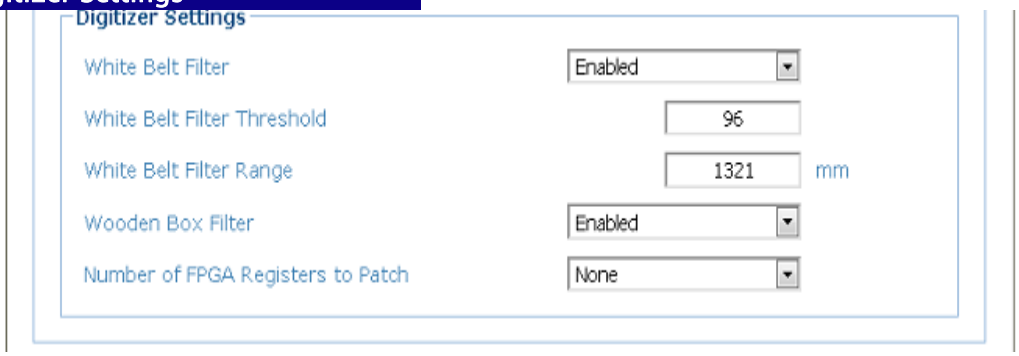

WARNING

Field-Programmable Gate Array (FPGA) patches are intended for special cases only, and must only be applied with the guidance of Datalogic Support.

White Belt Filter

Select Enabled or Disabled from the drop-down. Enables filtering to reduce background noise when reading over a white conveyor belt.

White Belt Filter Threshold

When White Belt Filter is enabled, you need to enter a filter threshold.

White Belt Filter Range

When White Belt Filter is enabled, you need to enter a filter range.

Wooden Box Filter

Select Enabled or Disabled from the drop-down. Enables filtering to reduce background noise when codes are on a wood grained surface.

Number of FPGA Registers to Patch

Select a number from the drop-down list.

FPGA Register n Offset

Enter the register offset in the field provided.

FPGA Register n Value

Enter the register value in the field provided.

FPGA Register n Side to Patch

Select A+B Side, A Side, or B Side from the drop-down list. “Side” refers to the laser leg of the DX8210, and allow you to choose both legs or either one.

3. When you have finished making changes, click **Update All** to save all pending changes, click **Reset All** to revert to all previously saved values, and click **Reset Page** to revert to previous saved values on the current page.

Diagnostics

Use the Diagnostics menu tree selections to monitor your barcode scanning system performance, view system messages, and access online help.
The Diagnostic windows include:


"Diagnostics | Monitor" on page 184
"Diagnostics | Read Test" on page 186
"Diagnostics | Status Viewer" on page 187

Diagnostics | Monitor

Use the Diagnostics > Monitor as the primary tool to monitor the reader's operation and bar code readability in real-time. Status indicators and vital statistics appear on a single screen, enabling you to effectively and efficiently detect and troubleshoot any problems that may occur.

To open the Monitor window:

In the menu under **Diagnostics,** navigate to **Monitor**. The **Monitor** window opens.

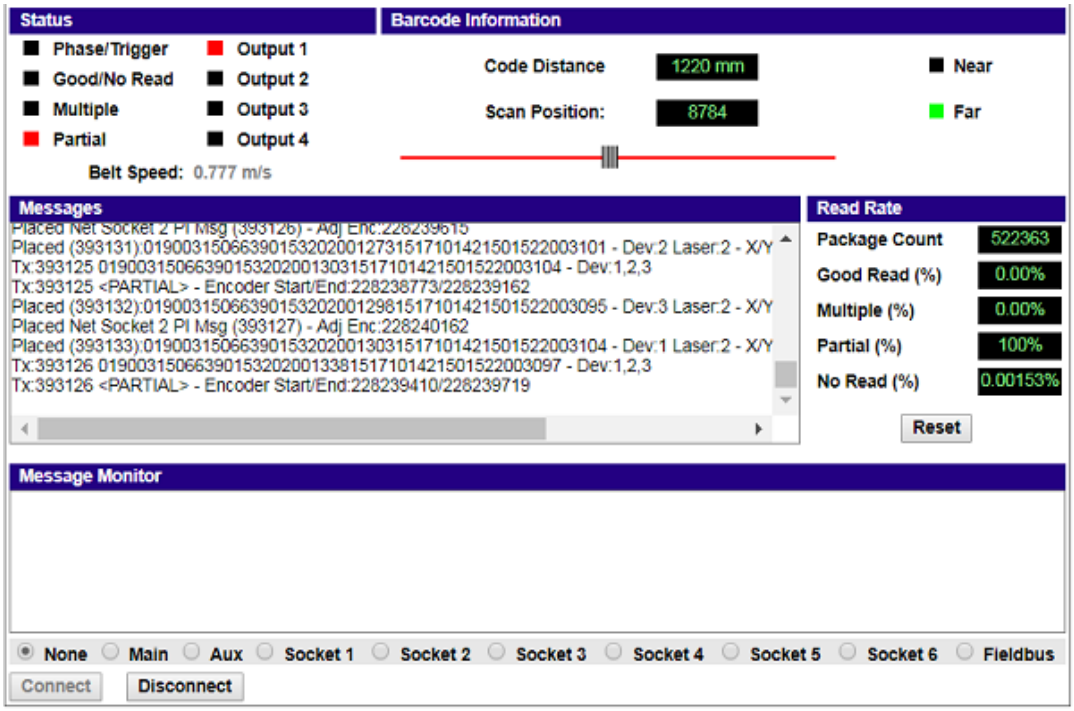

The status indicators in **Diagnostics** > **Monitor** indicate the following conditions:

Status

Phase/Trigger

GREEN indicates trigger input. The LED is activated upon trigger input regardless of trigger source (including software trigger).

Good/No Read

GREEN indicates a good (valid) bar code has been decoded.

RED indicates a no-read (or incomplete decode).

Multiple

RED indicates more codes than desired were read.

Partial

RED indicates a partial read.

Output 1 – 4

RED indicates activity on that output.

Belt Speed

Indicates the current speed of the belt indicated by the encoder (tachometer) or internal tachometer.

Barcode Information

Code Distance (cm)

Displays the distance from the laser origin to the scanned barcode.

Scan Position

Displays the position of the code in the scan line.

Near

GREEN indicates the barcode has been scanned by the near-focus laser.

Far

GREEN indicates the barcode has been scanned by the far-focus laser.

Messages

Message Field

Displays message data being returned by the scanner for each barcode scanned.

Read Rate

Package Count

Displays the number of packages detected since the last reset.

Good Read (%)

Displays the number of good barcode reads since the last reset.

Multiple (%)

Displays the number of multiple barcodes detected since the last reset.

Partial (%)

Displays the number of partially read barcodes since the last reset.

No Read (%)

Displays the number of no reads (no barcode read on package) since the last reset.

Reset

Click to reset the above counters.

Message Monitor

Message Monitor Field

Select the option button beside Main, Aux, Socket 1, Socket 2, Socket 3, Socket 4, Socket 5, Socket 6, or Fieldbus to display messages for that host port.

Select the option button beside None to stop displaying messages.

Connect/ Disconnect


Click Disconnect to stop (freeze) the Monitor window, or click Connect to start the Monitor window.

Diagnostics | Read Test

Use the Read Test window to check how well a scanner is operating.

To test a scanner's operation:

1. In the menu under **Diagnostics**, navigate to **Read Test**. The **Read Test** window opens.

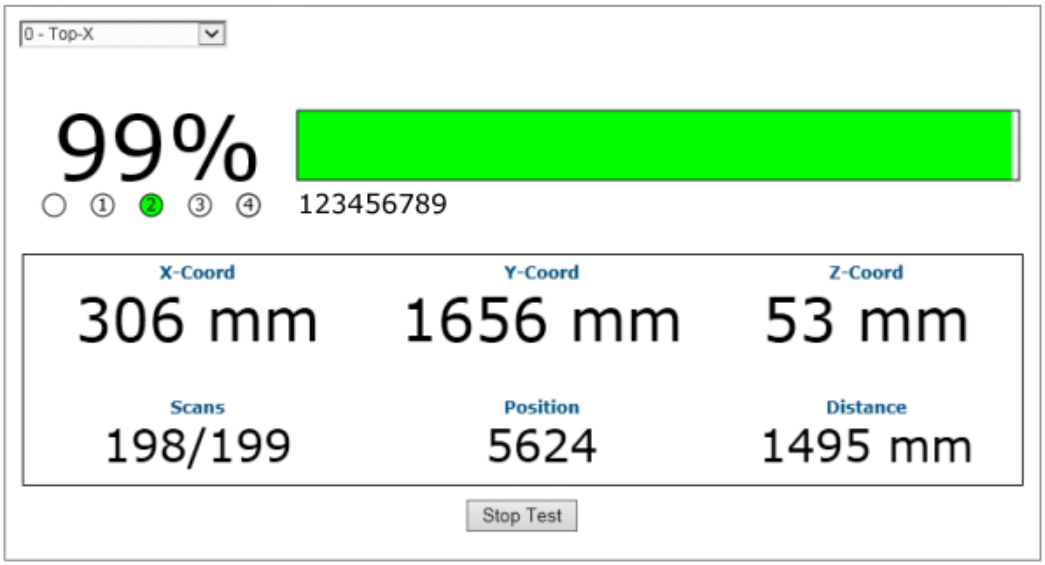

2. If there are multiple scanners in the system, select the scanner to test from the drop-down list at the top of the **Read Test** window.
3. Click the **Start/Stop Test** toggle button to run or stop the real-time performance display of the scanner.

The Read Test displays the following information:


- **Read Rate**: This is the percentage readout and bar at the top of the window, displaying the read rate since the start of the test.
- The numbered circle indicators below the read-rate percentage indicate in **GREEN**, which of the scanner's lasers is reading the barcode.
- The alpha numeric text following the numbered circle indicators is the barcode data.
- **Laser Identifiers**: These circles below the Read Rate percentage identify the number of lasers in the scan head as well as highlighting in GREEN the laser that is reading the barcode. In the example above, the scanner has four lasers and laser 2 is identified as reading the code. If the first circle is highlighted in RED, this indicates a NOREAD.
- **XYZ Coord**: This displays the real-time coordinates of the barcodes being read.
  X = the distance across the conveyor
  y= the distance from the trigger photo sensor
  Z = distance from the conveyor surface for a top read an the distance from the far rail for a side read
- **Scans**: Displays the number of times the scanner decoded the test barcode out of the number of opportunities it had to decode the test barcode during a test cycle.
- **Position**: Displays the position of the barcode in the scan line.
- **Distance**: Displays the distance from the laser origin to the last barcode read.

Diagnostics | Status Viewer

Use the **Status Viewer** to check up on your scanner health.


To access and use the Status Viewer:

1. In the menu under Diagnostics, navigate to Status Viewer. The Status Viewer window opens.

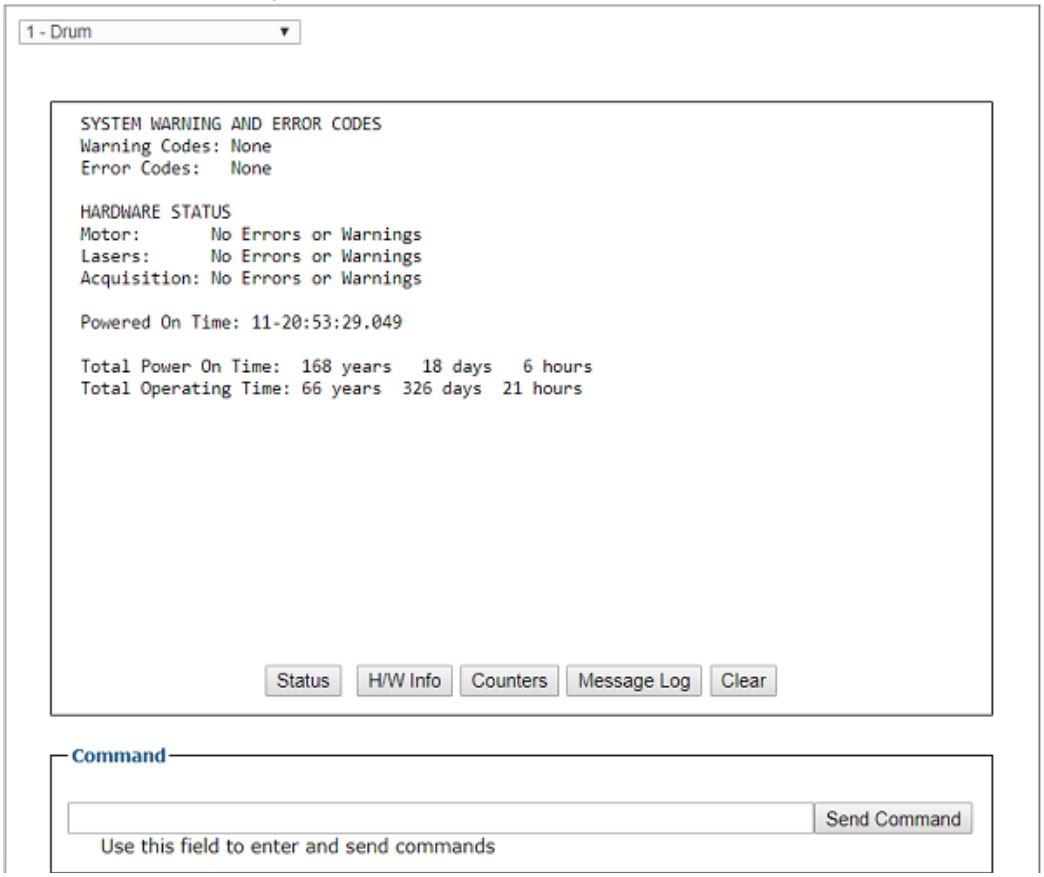

2. Select a device to view from the drop-down list at the top-left corner of the window.
3. Click on a button at the bottom of the display window to select the type of information you want to view:

- **Status**: displays system warnings or errors.

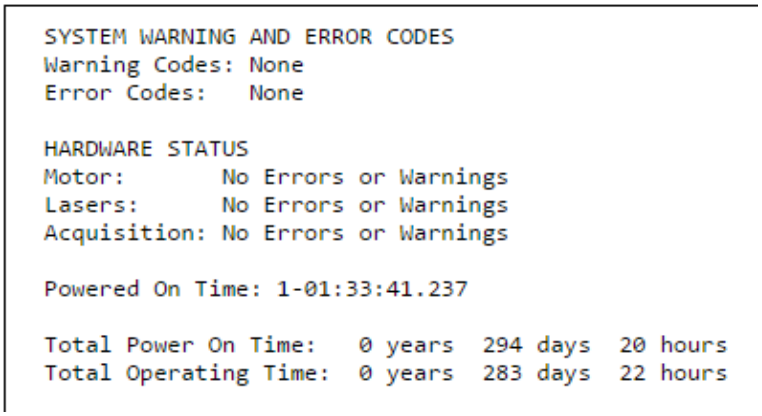

- **Read Rate**: displays read rate and package count information.

```
READ RATE
Total Packages:       34204
Good Reads:           25086     73%
No Reads:               837      2%
Partial:               8281     24%
Multiple:                 0      0%
```

- **H/W Info:** displays information about the selected hardware, including model, serial number, scans/second, laser information, and more.

```
CONFIGURATION
Model Type:  DS8110-2100
Serial Num:  C14C03507
Mac Address: 00-07-be-00-ef-8a
Num Lasers:  2
Num Legs:    1
Num Facets:  7

CURRENT STATUS
Scan Rate:         1000 scans/sec
Current APD DAC:   469

                    Temp         VCC
Laser 1:           40.59 C     3.2790
Laser 2:           40.89 C     3.2722
Logic Board:       39.00 C
APD Board:         41.50 C
```

- **Counters:** displays cumulative data about scans, triggers, errors, and much more.

```
SYSTEM INFO
Scan Rate (scans/sec):  999     Belt Speed (m/s):      1.55
Tach Rate (cnts/sec) : 2429     Belt Speed (ft/min):    306

DECODER COUNTERS
Scan Ints:            14796     DSP Codes:            59214
Triggers:             59548     DSP Triggers:           960
Process L0:           25824     Process L1:               0
Max Elements L0:        310     Max Elements L1:          0
Queue Size:               1     Queue Max:                9
Mem Alloc Err:            0     Memory Full:              0

SCAN DATA EXCEPTION COUNTERS
Missed DMA:               0     Missed QDMA:              0
Xfer Overflow:            0     Xfer Bad Length:          0
ASTRA Seg Err:            0     Invalid Leg No:           0
Low Term Count:           0     High Term Count:          0
Motor Var Cnt:            0

ARM Restarts:             0     DSP Restarts:             0
```

- **Message Log**: displays messages logged since the last clear command.

```
     0-00:00:00.723: APD Read:  DAC/Temp Ref: 243/6400
     0-00:00:00.723: APD Read:  Gain/Offset/Min/Max/Type: -1/-1/-1/-1/-1
     0-00:00:00.725: APD DAC Initialized.
     0-00:00:00.852: ADC Configuration Complete.
     0-00:00:00.959: Loading FPGA file XLC_v20_0_0_0.fpga.
     0-00:00:03.938: FPGA device id: 4c55.
     0-00:00:03.938: FPGA version: 6.0(0).
     0-00:00:06.378: Loading DSP file Decoder_release_v1_8_17_0.dsp.
     0-00:00:06.678: DSP load complete.
     0-00:00:06.678: Scan Engine Started.
     0-00:00:06.679: FPGA Buffer Export Task Started
     0-00:00:14.664: Motor Speed Threshold set to 0xFFFF.
     0-00:00:14.664: FIR Filter Coefficients Loaded.
     0-00:00:14.664: Scan FOV set to 88 deg (off=1562 len=21420)
     0-00:00:15.263: Ethernet Initialzation Complete.
     0-00:00:15.263: Web Server Initialization Complete.
     0-00:00:16.665: DSP Version 1.8.17 Started.
     0-00:00:16.665: Scan Engine Initialized.
     0-00:00:16.686: IsAlone=0 IsMaster=0 NumDevices=3
Powered On Time: 0-00:38:22.825
```

4. Click **Clear** to clear out the **Message Log**.

Utilities

Use the Utilities menu selections to backup, restore, and update system firmware, or to reboot the scanner. The Utilities windows include:


"Utilities | Backup or Restore" on page 191
"Utilities | Reboot" on page 193
"Utilities | Update Firmware" on page 194
"Utilities | Launch Genius" on page 196
"Utilities | Help" on page 197

Utilities | Backup or Restore

Use **Backup or Restore** to save all the settings to the device and backup the settings to the backup module and/or file.

To use the Backup or Restore functions:

1. In the menu under **Utilities**, click **Backup or Restore** Info. The Backup or Restore window opens.

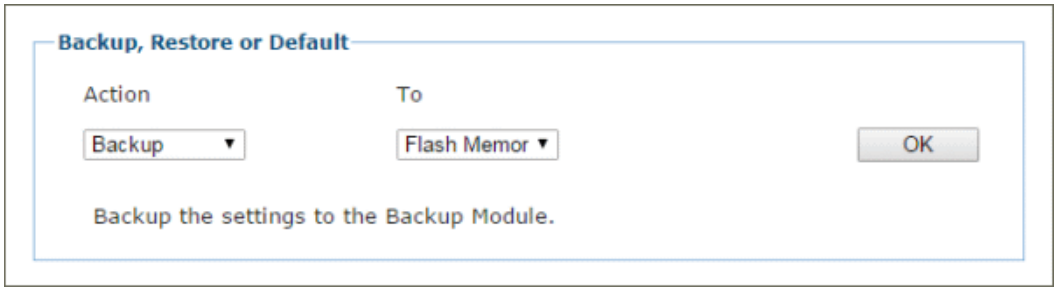


2. From the drop-down lists shown, select an **Action** and a **To/From** option.

Backup

Flash Memory

When this option is selected, click OK to save the settings to the Backup Module (BM100) in the CBX Connection Box. A progress box displays the percent complete of the save operation.

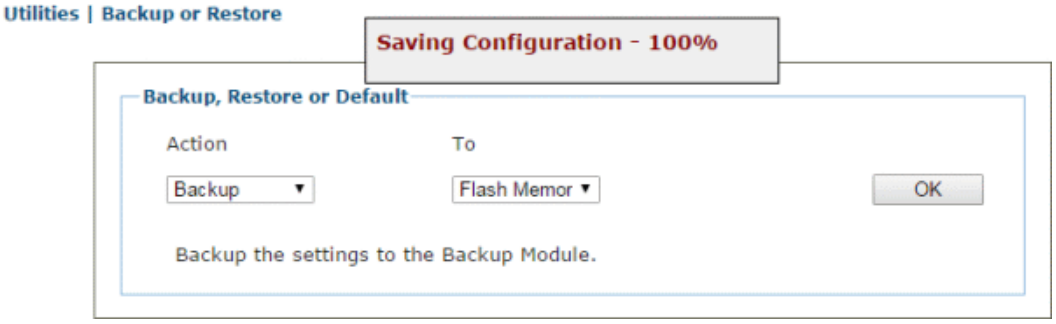

File

When this option is selected, click OK to download the file to your computer. The file can then be saved to an appropriate backup folder.


Restore

Flash Memory

When this option is selected, click OK to retrieve the settings to the Backup Module in the CBX or the SD card in the SC5000. A progress box displays the percent complete of the restore operation.

File

When this option is selected, a Choose File button is revealed. Click Choose File to open a file browser and locate the settings.txt file to be restored. When the file has been located and selected, click OK to save the file to the device.

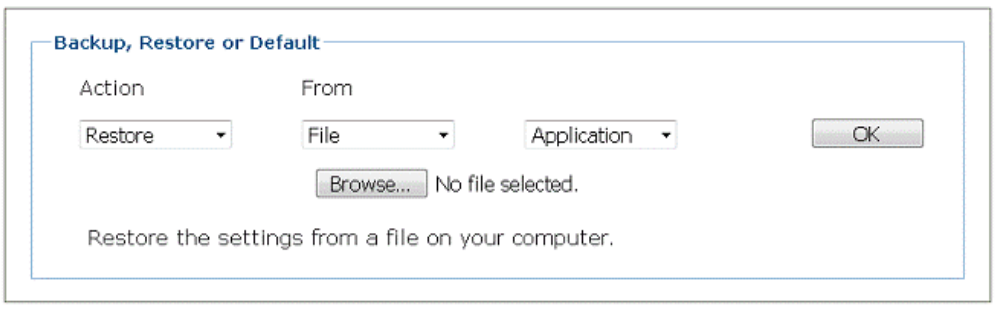

Application

When File option is selected, you can chose from one of the following to restore:

Application – restore just application settings
App and Env – restore all settings including Ethernet and Packtrack
All – restore all


Default

Application

When this option is selected, click OK to restore application settings to Factory defaults, except for Ethernet and PackTrack.

App and Env

When this option is selected, click OK to restore all settings including Ethernet and Packtrack.

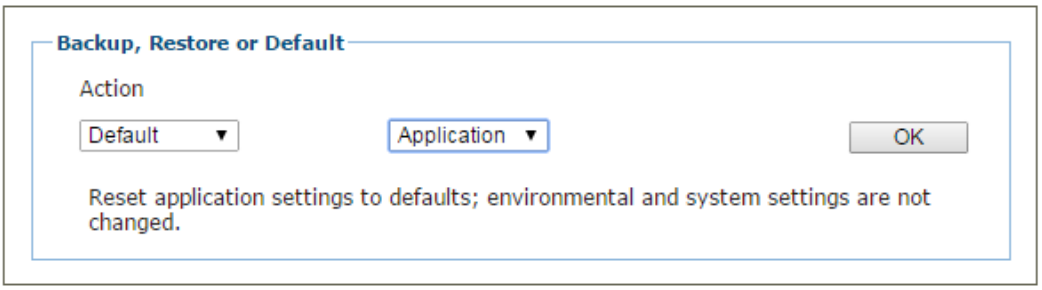

All

When this option is selected, click OK to COMPLETELY RESET the scanner to Factory configuration.

Utilities | Reboot


Use the **Reboot** window to restart the scanner or system.

To use the Reboot function:

1. In the menu under **Utilities**, click **Reboot**. The Reboot window opens.



2. Click **Reboot.** A confirmation box appears.

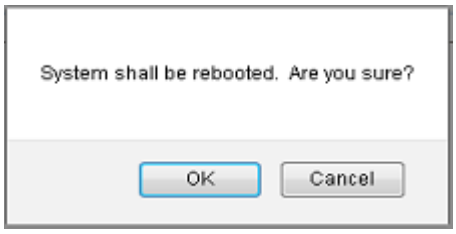

3. Click **OK** to reboot the system, or click **Cancel** to return to the reboot window.

Utilities | Update Firmware


Use **Update Firmware** to reload the scanner system firmware.



This function should only be performed under the guidance of Datalogic Technical Support.

To Extract Image:


1. In the menu under **Utilities**, click **Update Firmware**. The Update Firmware window opens.

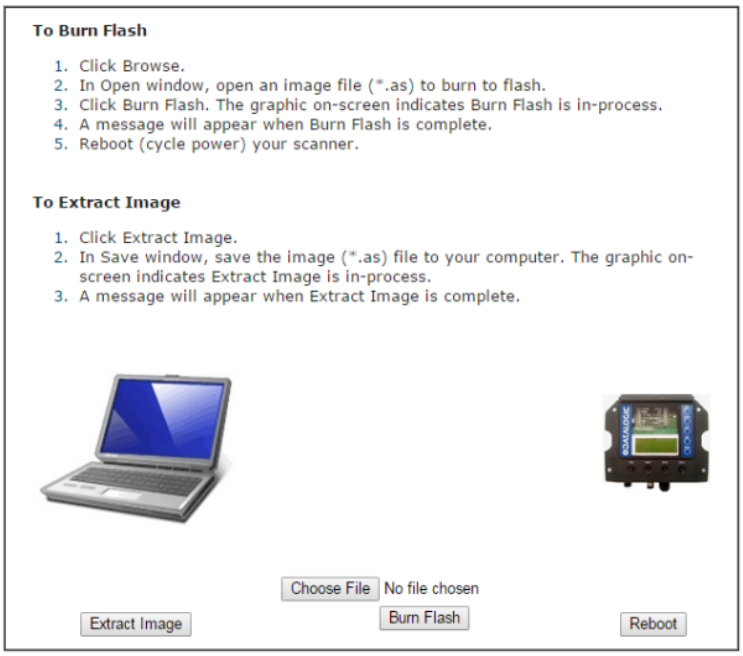

2. Click **Extract Image**. A confirmation box appears.



3. Click **OK** to continue
4. The graphic on screen indicates **Extract Image** is in-process. A message will appear when **Extract Image** is complete.

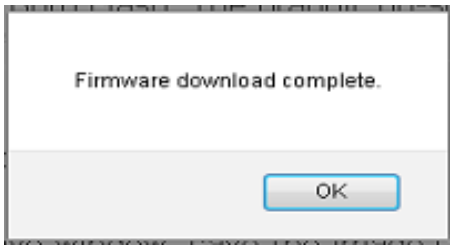

Depending upon the computer settings of the device interfacing with the scanner, you may be prompted to save the image to a location, or it may automatically save it to the PC's download folder.

To Burn Flash:

1. Click **Choose File**. In the browse window, select an image file (*.as) to burn to flash.




The appearance of these functions may vary from browser to browser.

2. Click **Burn Flash**. The graphic on-screen indicates **Burn Flash** is in-process.
3. A message will appear when **Burn Flash** is complete.

To Reboot the System:

1. Click **Reboot.** A confirmation box appears.

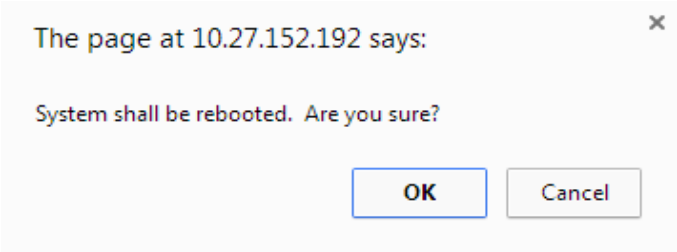


2. Click **OK** to reboot the system, or click Cancel to return to the reboot the window without restarting the system.

Utilities | Launch Genius

Use Launch Genius to launch the legacy configuration tool.

To Launch Genius:

1. In the menu under Utilities, click Launch Genius. The Launch Genius window opens.

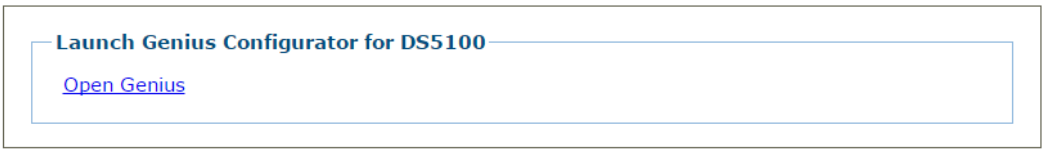

2. Click Open Genius.



Genius is only used when the DS5100 scanners are connected to the SC5000.

Utilities | Help


e-Genius provides complete online help.

To use the Help system:

In the menu under **Utilities**, click **Help**. The Online Help window opens.

The **Welcome** page provides important product information as well as three ways to find specific help information: **Contents, Index,** and **Search.**

To display contextual help for a current window:

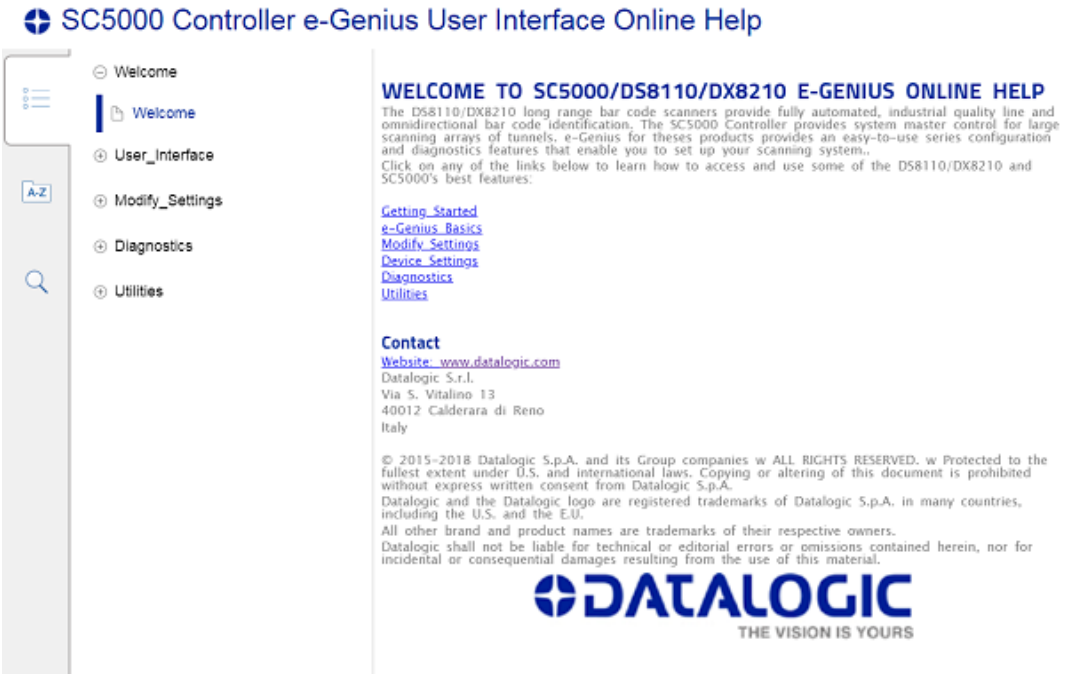

Click the **Help Icon**  displayed at the top right of the screen. A help window appears, providing you with information for that specific page.

Click links to the Contents, Index, and Search options on the left of the help window.

Chapter 4
Maintenance

Backup and Automatic Replacement Procedure

Once the system configuration has been completed using **e-Genius** as described in *"E-Genius" on page 40* , perform backup by one of the following methods:

Backing Up the System Using the SC5000 Keypad

1. Press the **ENT** and **MENU** keys simultaneously to enter the Menu.
2. Use the **UP** and **DOWN** keys to move within the menu items.
3. In the <**System**> menu select <**Backup**>.
4. From the <**Backup**> menu, press the **ENT** key to back up the system, or press the **CLR** key to back out of the menu.

The SC5000 Controller will store the complete system configuration on the Compact Flash card.

If a slave scanner has to be replaced, the corresponding configuration (node address, code configuration, PackTrack™ configuration, etc.) is automatically downloaded by the SC5000 into the new scanner at the next system startup.

In case of SC5000 failure, the complete system configuration can be recovered from the Compact Flash of the damaged SC5000: by simply installing the old Compact Flash in the new SC5000, the system configuration is automatically restored and the reading station is ready to start working again.



Before removing the Compact Flash card, disconnect power from the SC5000 Controller.

Backing Up the System Using e-Genius

You can also back up the system through **e-Genius**. See section "Utilities | Backup or Restore" on page 191.

Replacing an SC5000

In case of SC5000 failure, proceed as follows:

1. Disconnect power from the device.
2. Loosen the screws in the SC5000 lid using a screwdriver.
3. Remove the Compact Flash.



4. Connect a new SC5000 to the system.
5. Insert the Compact Flash card.
6. Close and secure the lid of the replacement SC5000.



Make sure not to insert the Compact Flash card upside down. Carefully insert it in the guides, so that it will not fall inside the device. Gently push it into the slot.

7. Power up the system.

The system configuration is automatically restored and the reading station is ready to start working again.

Chapter 5
Troubleshooting

WARNING

Due to the complex and application-specific nature of these installations, operational deficiencies of the barcode scanner must be diagnosed and serviced by a trained and authorized Datalogic technician.

There are no user serviceable components or field replaceable units (FRUs) inside the barcode scanner.

For further information on training, contact us through the Datalogic web-site at www.datalogic.com.

NOTE

When contacting Datalogic for help with a scanner, please be ready to share the unit serial number with the Datalogic technician. The unit's serial number tag is located on the device, where shown below. Help desk contact information is available at www.datalogic.com.



Troubleshooting Guide

TROUBLESHOOTING GUIDE	
Problem	**Suggestion**
Power On: The **POWER** LED is not lit.	Is power connected?
Power On: The **POWER** LED is RED.	The power supply polarity is reversed: fix it.
On Line Mode 1: The **TRIG** LED is not lit (when external trigger activates).	Depending on the installation: Is the PNP sensor connected to the SC5000's TRIG M12 input connector? Is the sensor correctly wired in the CBX510 connection box? Is power supplied to photo sensor?
On Line Mode 1: The TRIG LED is correctly lit but nothing happens (no reading results).	Is the software configuration consistent with the application condition (operating mode, etc.)? In **e-Genius**, select the OPERATING MODES folder and check for related parameters.
Serial On Line Mode: The reader is not triggered (no reading results).	In **e-Genius** select the OPERATING MODE folder and check if serial on line is enabled as 'On Line options" parameter value. Are the Start-Stop strings correctly assigned? Is the serial trigger source correctly connected and config-ured)?
On Line Mode and Serial On Line Mode: The reader does not respond correctly to the expected external signal end.	In **e-Genius**, select the OPERATING MODES folder and check the 'Reading Phase Timeout" parameterization.
Communication (Main / Aux): the device is not transmitting anything to the host.	Is serial Main / Aux cable connected? Is wiring correct? If using the Main RS232 or RS422 interface, is the reference ground connected to SGND MAIN? Be careful that it is not completely different from GND power ground. Are serial host settings equivalent to serial device setting?
Communication (Ethernet): the Ethernet LED is not lit.	Verify the HUB connection. Verify **e-Genius** settings.
Communication: data do not appear on the terminal.	In **e-Genius**, enable the DATA COMMUNICATION SETTINGS/ MAIN-AUXILIARY PORT\DATA TX parameter.
Communication: data transferred to the host are incorrect, corrupted or incomplete.	In **e-Genius**, select the DATA COMMUNICATION SETTINGS/ DATA FORMAT folder and check for HEADER, TERMINATOR, SEPARATOR and FILL CHAR values. Check the CODE FIELD LENGTH value. Are the COM port parameters correctly assigned?

TROUBLESHOOTING GUIDE	
Problem	**Suggestion**
How do I obtain my units' serial numbers?	The device serial number is printed on a label that is affixed on the side of SC5000 Controller. The serial number is also displayed when connecting the device through **e-Genius**. Serial numbers consist of 9 characters: one letter, 2 numbers, another letter followed by 5 numbers.

Error Codes and Resolutions

Error Code	Description	Severity	Explanation	Symptom	Troubleshooting	Action required
1	Node not responding	Error	In a Master/ Slave configuration, the Master monitors the status of the Slaves in its network. If a slave unit fails to be identified, the Master will post this message.	- The scanning tunnel's no-read rate increases. - More than one slave unit may be shown as not responding.	- In a tunnel configuration, the cabling that connects the system into to a network must be intact or a scanner will be reported as not responding. - Make sure all the slave units are powered on.	- Make sure cables are connected. - Check scanners power source. - Replace scanner.
80	Node Reset	Error	In a Master/ Slave configuration, the Master monitors the status of the Slaves in its network. If a Slave resets, it sends a reset message to the Master. The Master then posts this error condition on the diagnostic screen.	- The scanning tunnel's no-read rate may increase during the Slave scanner's reconnection.	- This condition is related to a slave scanner. Make sure the power source of the slave is not faulty.	- If condition persists, replace the scanner.
81	Motor Failure	Error	The scanner's mirror wheel motor has failed.	- The scanner will be powered up but will not emit laser light from its exit window. - The scanners motor will not be spinning.	- Hold your hand in front of the scanner to determine if the laser is on.	This is an internal failure and is not field serviceable -Replace scanner.

Error Codes and Resolutions

Error Code	Description	Severity	Explanation	Symptom	Troubleshooting	Action required
83	Laser Failure	Error	Scanner has a laser failure.	- There is no laser light emitted from the scanner - The mirror wheel motor may still be spinning, however, the motor speed may be out of range at which time the scanner will turn off the laser light.	- Hold your hand in front of the scanner to determine if the laser is on.	This is an internal failure and is not field serviceable. -Replace Scanner.
130	Encoder Timeout	Warning	No encoder (tachometer) is detected in specified time. The Encoder signal provides the scanner with belt speed and other tracking information. This error will only occur when the scanner is in the PackTrack mode.	- The scanner may experience an increase in no-reads. - The scanner may start missing the transmit point.	- Confirm that the belt is running. - Make sure the encoder (tachometer) wheel is making a firm contact with the conveyor. - Check the **Global Settings | Diagnostics | Encoder Timeout** setting to confirm that it is not set too low (See 'Diagnostics" on page 158).	- Adjust the encoder (tachometer) mounting. - Adjust the **Encoder Timeout** setting (See 'Diagnostics" on page 158).
131	Input 1 Failure	Error	The Primary PS (photoelectric sensor) Input is stuck in the active state (PackTrack Mode).	- The scanner will not go into trigger. - No data will be transmitted to the Host.	- Check the alignment of the photoelectric sensor. - Check the functionality of the photoelectric sensor.	- Realign the photoelectric sensor. - Replace the photoelectric sensor.

Error Codes and Resolutions

Error Code	Description	Severity	Explanation	Symptom	Troubleshooting	Action required
132	No Phase Error	Error	No Phase "timeout" is exceeded (On-Line and Pack-Track Mode). - Trigger must be identified within a specified time.			
133	Input 2 Failure	Error	Secondary PS (photoelectric sensor) Input Failure Stuck Active (Pack-Track Mode).	- The scanner will not go into trigger. - No data will be transmitted to the Host.	- Check the alignment of the photoelectric sensor. - Check the functionality of the photoelectric sensor.	- Realign the photoelectric sensor. - Replace the photoelectric sensor.
135	Encoder Failure	Error	Phase input (trigger source) is activated while encoder (tachometer) is stopped (Pack-Track Mode).	- No data will be transmitted to the host. - Scanner(s) will not read any barcodes. - System receives trigger cycle when no encoder signal is present.	- Check **Diagnostics | Monitor** to see if the scanner is reporting a conveyor speed (See 'Diagnostics | Monitor" on page 184). - Make sure the encoder (tachometer) wheel is making a firm contact with the conveyor.	- Adjust, realign, or replace the encoder (tachometer).
136	Redundancy Role Exchange Warning	Warning	This warning is generated on the Stand-by SC5000 to signal that the exchange of the Redundancy Role is in progress.			
138	Redundancy Warning	Error	Redundancy is not available.	- The Master Stand-by SC5000 does not work OR an encoder or presence sensor error is generated on the Master Stand-by SC5000.		

Error Codes and Resolutions

Error Code	Description	Severity	Explanation	Symptom	Troubleshooting	Action required
139	EBC Communication Failure	Error	Communication through the EBC interface has failed.			
141	Master Failure	Error	Communication to the Master (Active or Stand-by) is not available.			
143	Power Failure	Error	A power drop has occurred in the PWR power supply.			
145	Presence Sensor Failure	Error	A presence sensor warning has occurred only on the Stand-by SC5000 of the redundant system and is transmitted by the Active SC5000.			
147	Encoder Failure	Error	An encoder warning has occurred only on the Stand-by SC5000 of the redundant system and is transmitted by the Active SC5000.			
163	Max Consecutive Lost Parcels	Error	The Standby SC5000 has recognized that the Active SC5000 has exceeded the defined number of maximum consecutive lost parcels. This will cause a Redundancy Role exchange.	- Redundancy Role exchange		

Error Codes and Resolutions

Error Code	Description	Severity	Explanation	Symptom	Troubleshooting	Action required
165	Max % of Lost Parcels.	Error	The Standby SC5000 has recognized that the Active SC5000 has exceeded the defined maximum percentage of lost parcels (out of 100 parcels). This will cause a Redundancy Role exchange	- Redundancy Role exchange		
157	SD Card Failure	Error	SC5000 - SD card cannot be accessed. The SD card contains the backup files. It also contains a copy of the scanners application software. This failure is only in the SC5000.	- Unit will not backup or restore the parameters.	Try to save the parameters from the **SC5000** to the SD card (see SC5000 System Controller Reference Manual).	- Confirm that the SD card is seated properly in the SC5000. - Replace SD card (see SC5000 System Controller Reference Manual).
169	Main Serial Port Error	Error	Protocol Index message not received on Main Serial Port.			
176	Aux Serial Port Error	Error	Protocol Index message not received on Aux Serial Port.			
178	Ethernet Socket 1 Error	Error	Protocol Index message not received on User Socket 1.			
179	Ethernet Socket 2 Error	Error	Protocol Index message not received on User Socket 2.			
180	Ethernet Socket 3 Error	Error	Protocol Index message not received on User Socket 3.			

Error Codes and Resolutions

Error Code	Description	Severity	Explanation	Symptom	Troubleshooting	Action required
181	Ethernet Socket 4 Error	Error	Protocol Index message not received on User Socket 4.			
182	Ethernet Socket 5 Error	Error	Protocol Index message not received on User Socket 5.			
183	Ethernet Socket 6 Error	Error	Protocol Index message not received on User Socket 6.			
191	Fieldbus Mismatch	Error	Fieldbus module type does not match specified model. - Module selection incorrect compared to the actual module installed.			
193	Fieldbus Config Error	Error	Error configuring fieldbus module.	- Unable to communicate to the module.	- Confirm that the unit is not communicating to the host. - Confirm that the fieldbus parameters are configured properly (see 'Fieldbus" on page 120).	- Replace fieldbus module.
195	Fieldbus DHCP Error	Error	Profinet module had a DHCP error.	- Unable to acquire an IP address.	- Confirm that the unit is not communicating to the host. - Confirm that the fieldbus parameters are configured properly (see 'Fieldbus" on page 120).	- Replace fieldbus module.

Error Codes and Resolutions

Error Code	Description	Severity	Explanation	Symptom	Troubleshooting	Action required
205	APD Temperature Error	Error	APD Temperature sensor is not working. A fluctuation in the scanner's temperature can have an adverse effect on several internal functions of the scanner. The scanner monitors the temperature, and if it is erratic, this error is posted.	- The scanner may experience an increase in no-reads. - The scanner may start missing the transmit point.	1. Cycle power on the scanner; 2. Wait until the unit has time to cool down. 3. Restart the scanner and monitor it to determine whether the error reoccurs.	This is an internal failure and is not field serviceable. - Replace scanner.
207	In Beam Sensor Error	Error	The scanner has an in-the-beam sensor, which provides timing for the decoding of barcodes. The scanner monitors this signal, and posts this error if the signal is sporadic or missing.	- The scanner stops reading barcodes.	- Put the scanner in the test mode to test its ability to read the barcode (see 'Diagnostics | Read Test" on page 186).	This is an internal failure and is not field serviceable. - Replace scanner.
211	PTP Error	Error	Cannot synchronize the internal clock using the PTP (precision time protocol) protocol. This clock sync pulse is generated by the controller unit. It is used to sync the read data of all the scanners in the network with the master unit.	LEDs flashing.	- Confirm that all the scanners are connected in the chain. - Use the scanner test mode to confirm that the scanner can statically reading a barcode (see 'Diagnostics | Read Test" on page 186). - Position a barcode on a box so it faces the questionable scanner, and dynamically test the scanner.	- Replace faulty scanner.

Error Codes and Resolutions

Error Code	Description	Severity	Explanation	Symptom	Troubleshooting	Action required
219	Fieldbus Comm Error	Error	Cannot communicate with the fieldbus module.	- The host loses communication with the scanner.	- Confirm that the unit is not communicating with the Host. - Confirm that the fieldbus parameters are configured properly (see 'Fieldbus" on page 120).	- Replace fieldbus module.
220	Network Ring Open	Error	When the SC5000 is used, the scanner internal network is connected in a chain configuration. If the SC5000 detects that network chain is not complete, it will post this error.	- The system experiences a higher no-read rate. - One or more scanners may not appear on the Diagnostic Mask Window (see 'Diagnostics | Monitor" on page 184).	- Confirm that all the scanners are connected in the chain. - Use the scanner test mode to confirm that the scanner can statically reading a barcode (see 'Diagnostics | Read Test" on page 186). - Position a barcode on a box so it faces the questionable scanner, and dynamically test the scanner.	- Replace faulty scanner.

Chapter 6
Technical Features

ELECTRICAL FEATURES		
Supply Voltage	10 to 30 Vdc (typ. 24 Vdc)	
Power Consumption	0.5 A Max.	
Communication Interfaces Serial Main (isolated) - RS232 - RS422 full-duplex	 1200 to 115200 bits/s 1200 to 115200 bits/s	
Serial Aux - RS232	 1200 to 115200 bits/s	
Ethernet (x2) TCP/IP	**100 Mbit/s**	
EBC Internal Network	**100 Mbit/s**	
Fieldbus - Profibus (only SC5000-1100 model) - Profinet (only SC5000-1200 model) - All models	 PROFIBUS DP application protocol; up to 12 Mb/s PROFINET-IO application protocol; 100 Mb/s Embedded EtherNet/IP; 100 Mb/s	
Inputs	3 polarity insensitive optocoupled inputs (5-30 Vdc) : Trigger, Encoder/Tachometer, IN3,	
Outputs	3 optocoupled outputs	
Input/Output	1 configurable Input/Output (PNP or NPN polarity insensitive optocoupled input, or optocoupled output)	
USER INTERFACE		
LCD Display	4 lines by 20 characters LCD	
Keypad	5 keys	
LED Indicators	POWER TRIG SW-TRIG ENC IN3 IN4	STATUS EBC OUT1 OUT2 OUT3 OUT4
SOFTWARE FEATURES		

Configuration Modes	e-Genius
Parameter Storage	Non-volatile extractable SD-card
ENVIRONMENTAL FEATURES	
Operating Temperature	0° to +50 °C (+32° to +122 °F)
Storage Temperature	-20° to +70 °C (-4° to +158 °F)
Humidity	90% non condensing
Vibration Resistance EN 60068-2-6	14 mm @ 2 to 10 Hz; 1.5 mm @ 13 to 55 Hz; 2 g @ 70-500 Hz; 2 hours on each axis
Shock Resistance	30 g; 11 ms;
EN 60068-2-27	3 shocks on each axis
Protection Class EN 60529	IP65*
PHYSICAL FEATURES	
Mechanical Dimensions	192 x 157 x 74 mm (7.57 x 6.18 x 2.91 in)
Weight	1.5 kg (3.31 lb)

Index

A
Accessories 8
Active Controller Window 37
Alarms 36
Automatic Replacement Procedure 198
Auxiliary Serial Interface 16

B
Backup 198
Backup with SC5000 Keypad 198
Barcode Configuration 74
Logical Combination 86
Single Label 78
Standard Multi Label 82
Barcode Settings 67
Barcode Settings Table 67
Barcode_Configuration 74
Boot Loader 33
Bureau Of Indian Standards (BIS) ix

C
CE Compliance viii
Code Collection 96
CODE COLLECTION GLOBAL NO READ 77
COM to Host 27
Conventions vii
Conveyor Speed 35
Conveyor Speed Window 35

D
Date and Time 36
Default 33
Defaulting the SC5000 33
Device Settings 173
Device Info 174
Mounting 176
Options 179
Diagnostic Mask 34
Diagnostic Mask Window 34
Diagnostics 158
Monitor 184
Read Test 186
Status Viewer 187
Diagnostics Messages 152
Digital Input Configuration 24
Digital Output Configuration 23
Digital_I_O 155

Display 32

E
EAC Compliance viii
e-Genius 40, 51, 186, 187, 191, 193, 194, 196, 197
Barcode Settings
Advanced Decode 75
e-Genius Basics 43
e-Genius Online Help 44
e-Genius, Starting 40
e-Genius, starting 40
Electrical Connections 12
Encoder and Sensor 20
Energy Saving 162
Ethernet 107, 157, 161, 165, 166, 167, 173, 174, 176, 179
Line Settings 108, 110
User Sockets 110
WebSentinel 118, 125, 126, 138
Ethernet Interface 16
Ethernet TCP/IP to Host 29
Ethernet_IP 114

F
FCC Compliance viii
Fieldbus 120
Fieldbus to Host 27

G
Grounding 24

H
Help 44
HMI 166
HMI Settings 166
Human Machine Interface 166
Hybrid Configuration 169

I
I/O Status 35
I/O Status Window 35
Interfaces
Auxiliary 16
Ethernet 16
Main 13
Main RS232 14
Main RS485 Full Duplex 15
Profinet 18

K
Keypad 32
Keypad and Display 32

L
Large Synchronized Network 25
Last Code & Read Mask 36
LED Indicators 6
Line Settings 108
LOCAL NO READ 75
Logical Combination 86
Logical Combination Rule 86
LOGICAL COMINATION LOCAL NO READ 77

M
Mechanical Mounting 11
Menu Functions 33
Menu Functions, Getting to 33
Menu Mode 38
Menu Tree 43
Message Builder 138
Message Format 126
Messaging 125, 157, 161, 165, 166, 167, 173, 174, 176, 179
Pass Thru 150
Model Description 5
Modify Settings 50
Monitor 184

N
NPN Connections 21

O
Online Help, e-Genius 44
Operating Mode 51

P
Package Contents 10
PackTrack Calibration Wizard 178
Pass Thru 150
Pass-Thru 150
Performance Window 34
PLC Connections 19
PLC Signal Connections 19
PLC to S5000 20
PNP Connections 20
Power Connector Pin-Out Table 13
Power Supply viii
Prerequisites, user interface 40
Product Description 1
Profibus Interface 17
Profinet Interface 18
Protocol Index 146

R
Read Test 186
Reading Mask 35
Reading Mask Window 35
Redundancy Layout 28, 31
Redundancy Layout, Serial COM 30
Redundancy Mode 37
Redundant Operation 167
Reference Documentation vi

Replacement Procedure 198
Reset Buttons 44
RS232 Interface 14
RS422 Full-Duplex 15

S
SC5000 Clock 36
Serial Ports 101
Aux Port 105
Main Port 102
SINGLE LABEL GLOBAL NO READ 76
Standard Mode 33
Standard Multi Label 82
STANDARD MULTI LABEL GLOBAL NO READ 77
STANDARD MULTI LABEL LOCAL NO READ 76
Standby Controller Window 37
Starting e-Genius 40
Statistics 144
Status Viewer 187
Support vi
Support Through The Website vi
System Info 35, 46
System Info Window 35

T
TCP/IP to Host 26
Text Entry 43
Text Entry Tool 43
Typical Layouts 25

U
Update Firmware 194
User Sockets 110

W
WebSentinel 118

© 2015-2019 Datalogic S.p.A. and /or its affiliates ▪ All rights reserved. ▪ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates ▪ Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.

DATALOGIC

www.datalogic.com

Datalogic S.r.l.
Via S. Vitalino, 13 | 40012 Calderara di Reno | Bologna - Italy
Tel. +39 051 3147011 | Fax +39 051 3147205

821005860 (Rev. A) February, 2019