INSTRUCTIONS

94ACC0157 Screen Blanking RS232 Cable


General Features

Screenblanking can be activated if this cable is connected.

The pack contains the following components


- 1x Screen Blanking RS232 Cable

Activate Screen Blanking Cable, for Rhino II

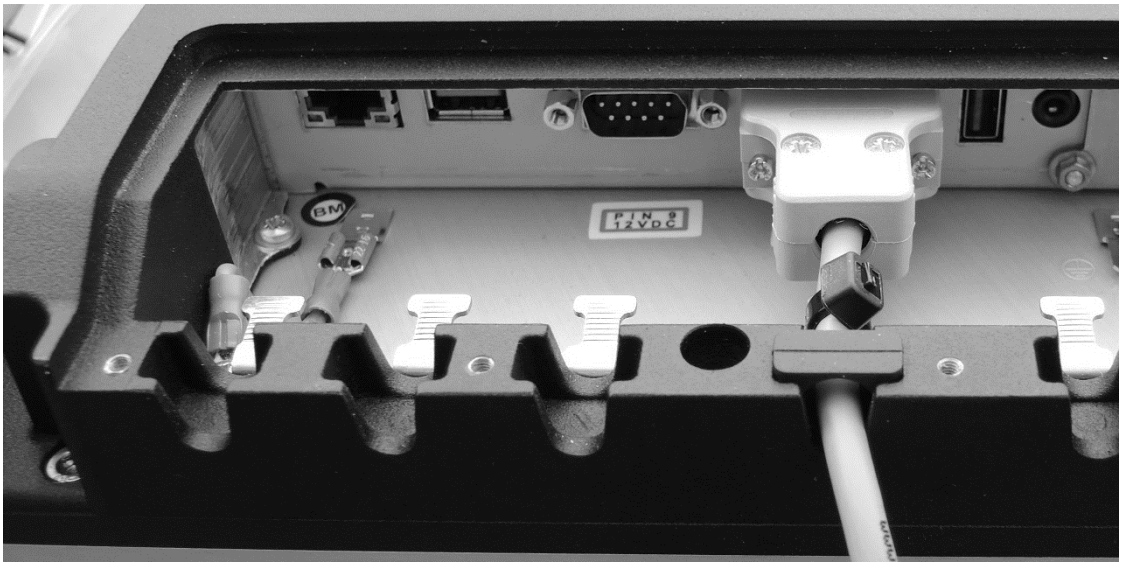

To connect the Screen Blanking RS232 Cable, remove the cable cover at the backside of the VMC. Connect the Screen Blanking RS232 Cable on one of the RS232 ports (COM 1 or COM 2) and use a philips screw driver to fix the connector. Don't forget to install the cable passage and a tie wrap to secure the Screen Blanking RS232 Cable properly.

To activate the screen blanking function, you must short circuit the connector 9 and 6 (pink and grey wire). For example, if the vehicle reaches a velocity above 5 kph a switch closes the connector 9 and 6. The result will be a dark display on the Rhino II.

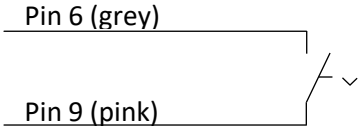

Switch to connect Pin 9 to Pin 6, this must be done by the forklift piler

©2017 Datalogic S.p.A. and/or its affiliates. All rights reserved. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U. Rhino is a trademark of Datalogic S.p.A. and/or its affiliates. All other brand and product names may be trademarks of their respective owners.

www.datalogic.com

822002370