



*This Quick Reference Guide does not replace the Instruction Manual. Download the Instruction Manual by reading the QR code here or at [www.datalogic.com](http://www.datalogic.com). Click on **Support** > **Search by product** and enter the SG BODY family name, then select your product from the dropdown list. Click on the **Manuals & Technical Literature** link to download your Instruction Manual. The Instruction Manual must be available at all times when installing and working with the product.*



### SAFETY INFORMATION



*The following points must be observed for a correct and safe use of the safety light curtains of the SG-BODY series:*

- The stopping system of the machine must be electrically controlled.
- This control system must be able to stop the dangerous movement of the machine within the total machine stopping time T as per paragraph 3.2.1 of the Instruction Manual and during all working cycle phases.
- Mounting and connection of the safety light curtain must be carried out only by qualified personnel, according to the indications included in the special sections (refer to sections 3; 4; 5; 7) and in respect to the applicable Standards.
- The safety light curtain must be securely installed so that access to the dangerous zone is not possible without interrupting the beams.
- The personnel operating in the dangerous area must be well-trained and must have adequate knowledge of all the operating procedures of the safety light curtain.
- The RESET/RESTART and OVERRIDE buttons must be located outside the protected area as the operator must check the protected area during all Restart and Override operations.
- Please carefully read the instructions for the correct functioning before powering the light curtain.

#### Precautions to be observed for the choice and installation of the device



*Make sure that the protection level assured by the SG-BODY Reflector device (Type 4) is compatible with the real danger level of the machine to be controlled, according to EN ISO 13849-1 and EN 62061.*


- The outputs (OSSD) of the ESPE must be used as machine stopping devices and not as command devices. The machine must have its own START command.
- The dimension of the smallest object to be detected must be larger than the resolution level of the device.
- The ESPE must be installed in a room complying with the technical characteristics indicated in section 11 “*Technical data*” of the Instruction Manual.
- Do not place the device near intense and/or flashing light sources and, in particular, close to receiving unit front surface.
- The presence of intense electromagnetic disturbances could jeopardise device operation. This condition has to be carefully evaluated with the support of the Datalogic Technical service.
- The operating distance of the device can be reduced in presence of smog, fog or airborne dust.
- A sudden change in environment temperature, with very low minimum peaks, can generate a small condensation layer on the lenses and so jeopardise functioning.
- Reflecting surfaces near the safety light curtain light beam (above, under or lateral) can cause passive reflections that can jeopardise functioning.
- The safety device must be installed at a distance which is major or equal to the **minimum safety distance S** to ensure that the operator can not reach the dangerous area until the moving dangerous object has been blocked by the ESPE.



*The failure to respect the safety distance reduces or cancels ESPE the protection function. For more detailed information about calculation of safety distance, please refer to the Instruction Manual.*

## CONNECTIONS

### RECEIVER (RX)

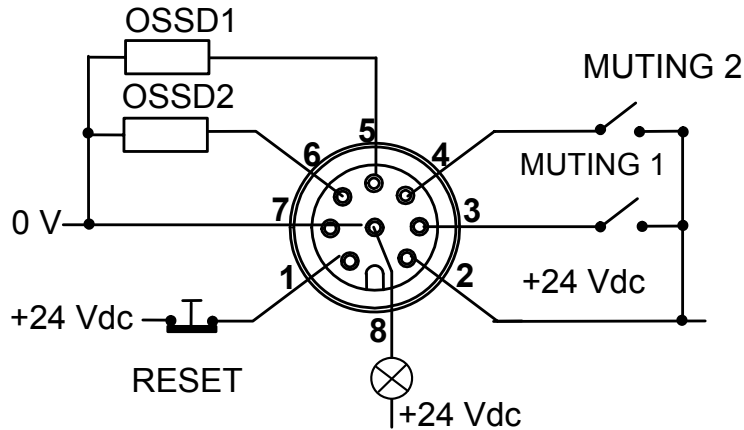


#### M12 8 POLES:

1. **WHITE** = START / RESET / EDM / OVERRIDE
2. **BROWN** = +24 VDC
3. **GREEN** = MUTING 1
4. **YELLOW** = MUTING 2
5. **GREY** = OSSD1
6. **PINK** = OSSD2
7. **BLUE** = 0 V
8. **RED** = MUTING LAMP

## ALIGNMENT PROCEDURE

The alignment between the active and the passive unit is necessary to obtain the correct functioning of the light curtain. A good alignment prevents output instability caused by dust or vibrations. The alignment is perfect if the optic axes of the active unit's beams coincide with the optic axes of the corresponding mirrors on the passive unit.

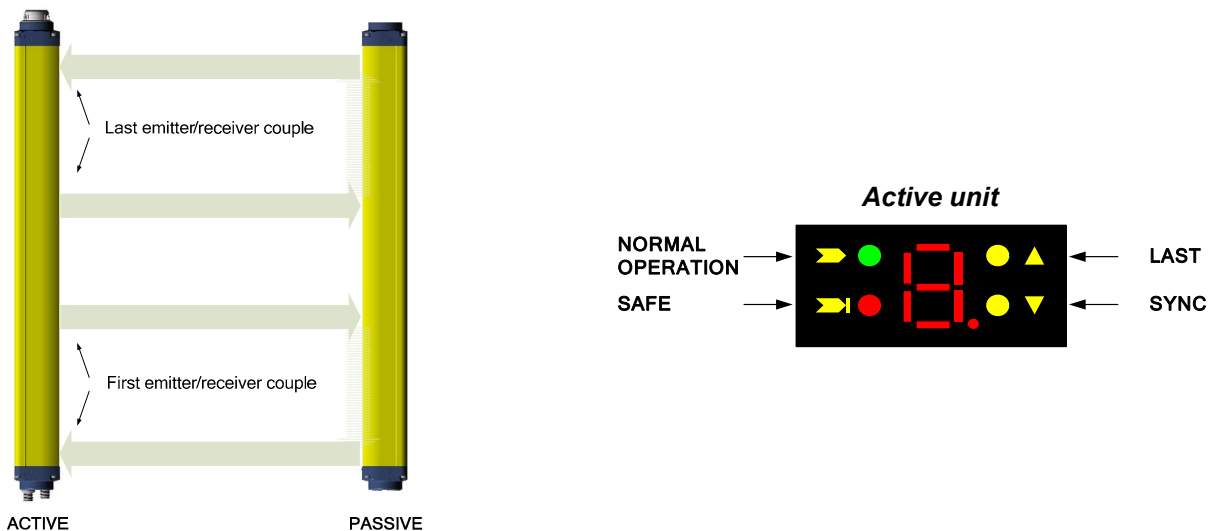








Signals are clearly identified through symbols allowing immediate reading, independent of bars directions. A short description of the signalling LEDs is necessary to avoid misunderstandings. Two yellow LEDs (**▲** LAST, **▼** SYNC) on SG-BODY Reflector active unit facilitating the alignment procedure.

**Correct alignment procedure**

The light curtain alignment can be effected only after having completed the mechanical installation and the electrical connections. The following procedure has to be followed:

**SG-BODY Reflector is equipped with a system which informs the user on the alignment obtained. The alignment function can be activated when powering the device, by keeping the normally open RESET/RESTART contact closed for at least 0.5 seconds. In alignment mode, OSSD state is always OFF.**

In alignment mode the internal and external lamps blink as quickly as more the alignment level increases.

Visualization	Alignment state	Alignment quality	OSSD state out of alignment function
	First and last couple are not aligned	Bad	OFF
	Last couple isn't aligned	Bad	OFF
	First couple isn't aligned	Bad	OFF
	Every couple over the lower threshold and no couple over the upper threshold		ON
	Every couple over the lower threshold and one couple over the upper threshold		ON
	Every couple over the upper threshold	Excellent	ON

- A. Keep the active unit in a steady position and set the passive unit until the yellow LED (▼ SYNC) is OFF. This condition shows the effective alignment of the first emitting/receiving couple.
- B. Rotate the passive unit, pivoting on the lower optics axis, until the yellow LED (▲ LAST) is OFF.

**Ensure that the green LED (➡ NORMAL OP.) is steady ON.**

- C. Delimit the area in which the green LED (➡) is steady through some micro adjustments - for the first and then for the second unit - so to have the maximum alignment (4) and then place both units in the centre of this area.
- D. Fix the two units firmly using brackets. Verify that the green LED (➡) on the active unit is ON and beams are not interrupted, then verify that the red LED turns ON if even one single beam is interrupted SAFE (➡I, condition where an object has been detected).

This verification shall be made with the special cylindrical "Test Piece" having a size suitable to the resolution of the device used (refer to paragraph 3.2.6 "Controls after first installation").

- E. Switch OFF and ON the device in standard operating mode.

The alignment level is monitored also during device normal operation mode via display (see paragraph 7.1 on the Instruction Manual).

Once the curtain has been aligned and correctly fastened, the display signal is useful both to check the alignment and show a change in the environmental conditions (occurrence of dust, light disturbance and so on) via signal level monitoring.

## DIP-SWITCHES CONFIGURATION




The device does not accept configuration changes during normal functioning. A change is accepted only beginning from the successive powering of the device. Particular attention has to be taken during the configuration dip-switch management and use.



Muting time-out “∞” does not comply with the requirements of IEC 61496-1. Therefore all possible risks must be considered and related precautions undertaken before selecting the “∞” option.



For RX side the top and bottom dip-switches must be configured in the same manner. The “ON” position is the default.

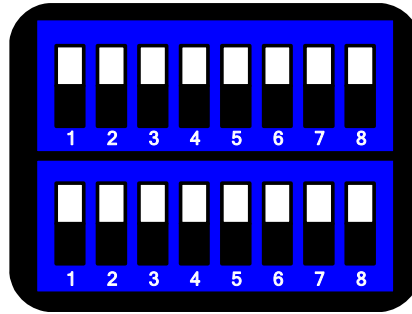


SG-RB...-N	ON	OFF
Dip switches n°1: Muting timeout	10 min	∞
Dip switches n°2: Muting T/L	T	L
Dip switches n°3: Muting filter	Disabled	Enabled
Dip switches n°4: Override restart	Manual	Automatic
Dip switches n°5: not used	-	-
Dip switches n°6: EDM enable	EDM on	EDM off
Dip switches n°7: Restart Mode	Automatic	Manual
Dip switches n°8: not used	-	-

## DIAGNOSTICS FUNCTION

The operator can visualise the operating condition of the light curtains thanks to a one-digit display positioned on the active unit. SG-BODY Reflector also has four LEDs on the active unit.

The figure below shows all signalling LEDs modes: OFF, ON.

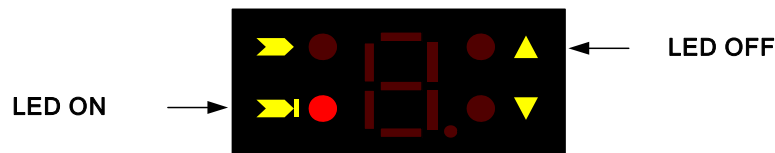

The operator can evaluate the main causes of the system stopping or failure using the 7-segment display and LEDs used to visualise the functions.

**RECEIVER:**

Visualization	Status	Description	Action
	INTERLOCK	Free beams, OSSDs OFF	- User can take device in normal operation activating restart line.
	INTERLOCK	Interrupted beams, OSSDs OFF	- User must free beams path before activating restart line.
	NORMAL OPERATION	OSSDs ON	
	SAFE	OSSDs OFF	
	NORMAL OPERATION, SAFE, INTERLOCK	EDM function active EDM function not active	
	SAFE, INTERLOCK	Override function ready to be activated	- User can activate Override function activating the correct sequence on Override lines.
	FAILURE LOCKOUT (recoverable)	Failure on one or both OSSDs, OSSDs OFF	- User must activate RESET line. - If ESPE does not reset user must contact Datalogic Technical Support.
	FAILURE LOCKOUT (not recoverable)	Microcontroller failure, OSSDs OFF	- User must turn OFF/ON ESPE. - If the problem persists user must contact Datalogic Technical Support.
	FAILURE LOCKOUT (recoverable)	Optical failure, OSSDs OFF	- User must activate RESET line. - If ESPE does not reset user must contact Datalogic Technical Support.
	FAILURE LOCKOUT (recoverable)	EDM failure, OSSDs OFF	- User must check EDM ENABLE line or dip-switches, EDM line, external switching device and activate RESET line. - If ESPE does not reset user must contact Datalogic Technical Support.
	FAILURE LOCKOUT (not recoverable)	Override connection failure, OSSDs OFF	- User must check Override lines connection and turn OFF/ON ESPE. - If the problem persists user must contact Datalogic Technical Support.
	SAFE	Override sequence failure, OSSDs OFF	- User must check Override lines activation sequence timings and repeat Override sequence. - If the problem persists user must contact Datalogic Technical Support.
	FAILURE LOCKOUT (not recoverable)	Dip switch failure, OSSDs OFF	- User must check dip-switch configuration (see par. "DIP-SWITCHES CONFIGURATION") and turn OFF/ON ESPE. - If the problem persists user must contact Datalogic Technical Support.
	FAILURE LOCKOUT (recoverable)	Internal and external lamp failure, OSSDs OFF	- User must check LAMP INPUT line and activate RESET line. - If ESPE does not reset user must contact Datalogic Technical Support.
	ESPE OFF	Power supply failure, OSSDs OFF	- User must check power supply connection. - If the problem persists user must contact Datalogic Technical Support

## ORIGINAL INSTRUCTIONS (ref. 2006/42/EC)

This product is covered by one or more of the following patents.  
Italian Patent IT 1,363,719      Additional patents pending

### CE Compliance

CE marking states the compliance of the product with essential requirements listed in the applicable European directive. Since the directives and applicable standards are subject to continuous updates, and since Datalogic promptly adopts these updates, therefore the EU declaration of conformity is a living document. The EU declaration of conformity is available for competent authorities and customers through Datalogic commercial reference contacts. Since April 20th, 2016 the main European directives applicable to Datalogic products require inclusion of an adequate analysis and assessment of the risk(s). This evaluation was carried out in relation to the applicable points of the standards listed in the Declaration of Conformity. Datalogic products are mainly designed for integration purposes into more complex systems. For this reason it is under the responsibility of the system integrator to do a new risk assessment regarding the final installation.

### Warning:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### Datalogic S.r.l.

Via S. Vitalino 13 - 40012 Calderara di Reno - Italy  
Tel: +39 051 3147011 - Fax: +39 051 3147205 - [www.datalogic.com](http://www.datalogic.com)

Helpful links at [www.datalogic.com](http://www.datalogic.com): **Contact Us, Terms and Conditions, Support.**

The warranty period for this product is 36 months. See General Terms and Conditions of Sales for further details.



Under current Italian and European laws, Datalogic is not obliged to take care of product disposal at the end of its life. Datalogic recommends disposing of the product in compliance with local laws or contacting authorised waste collection centres.

© 2010 - 2018 Datalogic S.p.A. and/or its affiliates ♦ ALL RIGHTS RESERVED. ♦ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other trademarks and brands are property of their respective owners. Datalogic reserves the right to make modifications and improvements without prior notification.