### Datalogic S.r.l.

Via San Vitalino 13 40012 Calderara di Reno (BO) Tel. +39 051 3147011

Fax +39 051 3147205

#### ©2021-2023 Datalogic S.p.A. and/or its affiliates

All rights reserved. Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/

Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Electronic versions of this document may be downloaded from the Datalogic website (www.datalogic.com). If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact" page.

#### Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material. Datalogic reserves the right to change any specification at any time

#### **Trademarks**

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

Matrix 320, ID-NET, DL.CODE, and X-PRESS are trademarks of Datalogic S.p.A. and/or its affiliates. All other brand and product names may be trademarks of their respective owners.

Download the Matrix 320 Product Reference Guide by reading the QR code here or see the paragraph below.



# SUPPORT THROUGH THE WEBSITE

Datalogic provides several services as well as technical support through its website.

Log on to www.datalogic.com.

For quick access, from the home page click on the search iconQ, and type in the name of the product you're looking for. This allows you access to download Data Sheets, Manuals, Software & Utilities, and Drawings.

Hover over the Support & Service menu for access to Services and Technical Support.

# **PATENTS**

See www.patents.datalogic.com for patent list.

This product is covered by one or more of the following patents: Utility patents: EP1172756B1, EP2517148B1, EP2616988B1, EP2649555B1, EP3016028B1, EP3092597B1, IT1404187, JP5947819B2, US10229301, US6808114, US6877664, US6997385, US7387246, US7433590, US7433590, US8245926, US8888003, US8915443, US9122939, US9349047, US9361503, US9798948, US10133895, US10229301, US10540532, ZL200980163411.X, ZL201080071124.9, ZL201180044793.1, ZL201280010789.8

# MATRIX 320™ 5MP

## QUICK REFERENCE GUIDE



# **ODATALOGIC**

Image Based Industrial Reader

• All rights reserved • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates • Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.


©2021-2023 Datalogic S.p.A. and/or its affiliates

www.datalogic.com




Matrix 320 5MP can be assembled with 36 LED illuminator, 72 LED illuminator, or without illuminator.


## Matrix 320 5MP with 36 LED illuminator

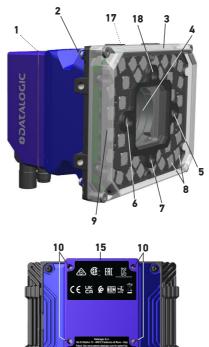

1	HMI X-PRESS		
	Interface		
2	Adapter		
3	Lens Cover		
4	Lens		
5	Red Spot		
6	Green Spot		
7	Aiming System		
	Laser Pointers		
8	Internal Illuminator		
9	360° Feedback		
10	Bracket Mounting		
	Holes (4)		
11	Ethernet Connector		
12	Power - COM - I/O		
	Connector		
13	Ethernet Connection		
	LED		
14	Power On LED		
15	Compliance Label		
16	Avoid Laser Exit		
	Point Label		
17	Device Class and		
	Warning Labels		
18	TOF Sensor		


# Matrix 320 5MP with 72 LED illuminator

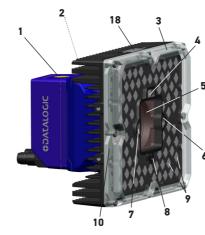

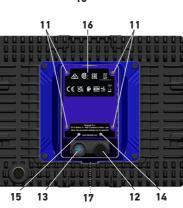

1	HMI X-PRESS		
	Interface		
_ 2	Adapter		
3	Lens Cover		
4	Green and Red		
	Spots		
_ 5	Lens		
6	Aiming System		
	Laser Pointer		
7	Aiming System		
	Laser Pointer		
- 8	TOF Sensor		
9	Internal Illuminator		
10	360° Feedback		
11	Bracket Mounting		
	Holes (4)		
12	Ethernet Connector		
13	Power - COM - I/O		
	Connector		
14	Ethernet Connection		
	LED		
15	Power On LED		
16	Compliance Label		
17	Avoid Laser Exit		
_	Point Label		
18	Device Class and		

Warning Labels

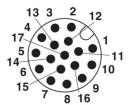


M12 17-pole male Power, COM, and I/O connector

Pin	Name	Description		
1	Vdc	Power supply input voltage +		
2	GND	Power supply input voltage -		
Connector case	CHASSIS	Connector case provides electrical connection to the chassis		
6	I1A	External Trigger A (	polarity insensitive)	
5	I1B	External Trigger B (	polarity insensitive)	
13	I2A	Input 2 A (polarity insensitive)		
3	I2B	Input 2 B (polarity insensitive)		
9	01	Output 1 *	(NPN, PNP or PP short cir-	
8	02	Output 2 *	cuit protected and software	
16	03	Output 3	programmable)	
14	RX	Auxiliary RS232 RX		
4	TX	Auxiliary RS232 TX		
7 ID+		ID-NET network data +		
15	ID-	ID-NET network data -		
		RS232	RS422 Full-Duplex	
17		TX	TX+	
11	Main Inter- face (SW	RX	RX+ **	
12		-	TX-	
10	selectable)	-	RX- **	

<sup>\*</sup> Output 1 and Output 2 are opto-coupled when using a CBX.

<sup>\*\*</sup> Do not leave floating. See Product Reference Guide for connection details.

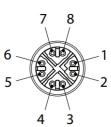

M12 X-Coded female Ethernet Network connector

Pin Name		Description	
1	DA+	Bidirectional data DA+	
2	DA-	Bidirectional data DA-	
3	DB+	Bidirectional data DB+	
4	DB-	Bidirectional data DB-	
5	DD+	Bidirectional data DD+	
6	DD-	Bidirectional data DD-	
7	DC-	Bidirectional data DC-	
8	DC+	Bidirectional data DC+	

# **INSTALLATION PROCEDURE**

- 1. Physically mount the Matrix 320 reader. Refer to Matrix 320 C-Mount Mounting Instructions.
- 2. Make the necessary electrical connections.
- 3. Configure the reader using the X-PRESS interface (simple configuration) or the DL.CODE software configuration program (complete configuration).

## HMI X-PRESS™ INTERFACE

In normal operating mode the colors and meaning of the five LEDs are illustrated in the following table:

READY (green)	indicates the device is ready to operate.
GOOD (green)	confirms successful reading.
TRIGGER (yellow)	indicates the status of the reading phase.
COM (yellow)	indicates active communication on main serial port.
STATUS (red)	indicates NO READ result.

During the reader startup (reset or restart phase), all the LEDs blink for one second.



The single push button gives immediate access to the following relevant

· Test Mode with bar graph visualization to check static reading per-

- formance. Aim/Autofocus turns on the laser LED to aim the reader at the target. The target should be placed 16 mm (14 LEDs model) or 30 mm (36 LEDs model) upwards and centered horizontally with respect to the
- aiming pattern (cross). Setup to self-optimize and auto-configure photometry parameters.
- Learn to self-detect and auto-configure for reading an unknown barcode (by type and length). Only one symbology can be saved using this method. Performing Autolearn on a second symbology will overwrite the first one.

### TECHNICAL SPECIFICATIONS

Electrical Features			
Power			
Supply Voltage	24 Vdc ± 10%		
Peak Supply Current	Without illuminator: 0.25 A max.		
	With white 36 LED illuminator: 0.85 A max.		
	With white 72 LED illuminator: 1.30 A max.		
	Without illuminator: 0.15 A		
Average Supply Current	With white 36 LED illuminator: 0.52 A		
	With white 72 LED illuminator: 0.75 A		
Communication interfaces	5		
Main: RS232, RS422 Full-Du-	2400 to 115200 bit/s		
plex			
Auxiliary: RS232	2400 to 115200 bit/s		
ID-NET			
Ethernet (Built-in)	10/100/1000 Mbit/s		
supported application	TCP/IP, UDP, FTP, EtherNet/IP,		
protocols	Modbus TCP, PROFINET-IO		
Inputs			
Input 1 (External Trigger)	Opto-coupled and polarity insensitive		
and Input 2			
Max. Voltage	30 Vdc		
Max. Input Current	10 mA		
Outputs <sup>1</sup>			
Output 1, 2 and 3	NPN, PNP, or PP short circuit protected		
$V_{OUT}$ ( $I_{LOAD} = 0$ mA) max.	24 Vdc		
$V_{OUT}$ ( $I_{LOAD} = 100$ mA) max.	3 Vdc		
	100mA		

<sup>1</sup> When connected to the CBX connection boxes, the electrical features for Output 1 and 2 become the following:

Environmental Features			
Operating temperature <sup>2</sup>	-10 to 50 °C (14 to 122 °F) <sup>3</sup>		
Storage temperature	-20 to 70 °C (-4 to 158 °F)		
Max. humidity	90% non condensing		
Vibration resistance EN 60068-2-6	14 mm @ 2 to 10 Hz; 1.5 mm @ 13 to 55 Hz; 2 g @ 70 to 500 Hz; 2 hours on each axis		
Bump resistance EN 60068-2-29	30 g; 6 ms; 5000 shocks on each axis		
Shock resistance EN 60068-2-27	30 g; 11 ms; 3 shocks on each axis		
Protection class <sup>4</sup> EN 60529	IP65 and IP67		

Physical Features			
	Matrix 320 without illuminator	Matrix 320 with 36 LED illuminator	Matrix 320 with 72 LED illuminator
Dimensions	HxWxL	HxWxL	HxWxL
(with lens cover,	108.7 x 54 x 54.3 mm	115.5 x 126 x 117.8 mm	145 x 181 x 121.5 mm
connectors at 0°)	(4.3 x 2.1 x 2.14 in)	(4.6 x 4.9 x 4.6 in)	(5.7 x 7.1 x 4.8 in)
Weight	300 g (10.6 oz)	900 g (31.7 oz)	1530 g (53.9 oz)
Material		Aluminum	

#### **Software Features**

### **Readable Code Symbologies**

1D and Stacked		2D	Postal
PDF417 Standard and	Data Matrix ECC 200		Australia Post
Micro PDF417 (Standa		ard, GS1 and	Royal Mail 4 State
• Code 128 (GS1-128)	Code 128 (GS1-128)     Direct M		Customer
<ul> <li>Code 39 (Standard and</li> </ul>	• QR Cod	e (Standard and	Kix Code
Full ASCII)	Direct N	Marking)	Japan Post
• Code 32	Micro G	IR Code	• PLANET
• MSI	MAXICO	DDE	POSTNET
Standard 2 of 5	Aztec C	ode	POSTNET (+BB)
• Codabar	• DotCod	e	Intelligent Mail
• Code 93			Swedish Post
Pharmacode			
• EAN-8/13 - UPC-A/E			
(including Addon 2 and			
Addon 5)			
GS1 DataBar Family			
Composite Symbologies	<u> </u>		
Operating Mode Continuo		us, One Shot, Pha	se Mode, PackTrack
Configuration	X-PRESS	Human Machine	Interface.
Methods	Windows-based DL.CODE (Ethernet / Serial interface).		
	Serial Host Mode Programming sequences.		
Parameter Storage	Permane	ent memory (Flash	)
	Code Qu	uality Metric	s
Standard		Supported Sy	mbologies
ISO/IEC 16022 (always er	nabled)	Data Matrix EC	C 200
ISO/IEC 18004 (always er	nabled)	QR Code	
AIM DPM		Data Matrix EC	C 200, QR Code
ISO/IEC 15416		Code 128, Code	39, Interleaved 2 of 5,
		Codabar, Code	93, EAN-8-13, UPC-A/E
	User	Interface	
LED indicators		Power, Ready,	Good; Trigger; Com, Sta-
		tus, (Ethernet	Network); Good Read

(Green Snot)

Configurable via DL.CODE

**Keypad button** 

Optical Features			
Image Sensor	CMOS		
Image Format	5.0 Mpixel (2560 x 1936)		
Frame Rate	25 frames/s		
Pitch	± 35°		
Tilt	0° - 360°		
LED Safety	according to EN 62471		
Lenses	C-Mount 8mm, 12mm, 16mm, 25mm, 35mm, 50mm		
Aperture Angle	50° (8mm), 34° (12mm), 25° (16mm), 16° (25mm), 12° (35mm), 8° (50mm)		
Lighting System	External or internal illuminator (36 LEDs or 72 LEDs)		
Reading Range (considering the lens front)	8mm: 50mm - ∞ 12mm: 100mm - ∞ 16mm, 25mm, 35mm: 200mm - ∞ 50mm: 400mm - ∞		
Illumination	36 LED illuminator with white, blue, IR, UV lights, 72 LED illuminator with white or blue lights		
Aiming System	36 LED illuminator: laser cross 72 LED illuminator: two laser pointers		
Polarizing Filter	Polarizing cover accessory		

## **COMPLIANCE**

#### General

For installation, use and maintenance it is not necessary to open the reader. Only connect Ethernet and dataport connections to a network which has routing only within the plant or building and no routing outside the plant or building.

## **Power Supply**

ATTENTION: READ THIS INFORMATION REFORE INSTALLING THE PRODUCT

The unit is intended to be powered by an external power supply ES1, PS2 according to IEC 62368-1-2014

## **EMC Compliance**

In order to meet the EMC requirements:

- connect reader chassis to the plant earth ground by means of a flat copper braid shorter
- for CBX connections, connect pin "Earth" to a good Earth Ground;
- for direct connections, connect your cable shield to the locking ring nut of the connector.

## **CE Compliance**

CE marking states the compliance of the product with essential requirements listed in the applicable European directive. Since the directives and applicable standards are subject to continuous updates, and since Datalogic promptly adopts these updates, therefore the EU declaration of conformity is a living document. The EU declaration of conformity is available for competent authorities and customers through Datalogic commercial reference contacts. Since April 20th, 2016 the main European directives applicable to Datalogic products require inclusion of an adequate analysis and assessment of the risk(s). This evaluation was carried out in relation to the applicable points of the standards listed in the Declaration of Conformity. Datalogic products are mainly designed for integration purposes into more complex systems. For this reason it is under the responsibility of the system integrator to do a new risk assessment regarding the final installation.

Warning: this is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

#### LED Safety

According to EN 62471:2010, for all Datalogic Matrix 320 compatible internal illuminators, LED emission is classified into Risk Group 1, except Matrix 320 with UV illuminator which is Risk Group 3.



WARNING: The UV illuminator shall only be used by skilled persons using a personal safeguard (PPE, safety goggles).



#### Laser Safety

This product conforms to the applicable requirements of IEC 60825-1 and complies with 21CFR 1040.10 except for deviations pursuant to Laser Notice  $N^{\circ}$  56, date May 8, 2019. This product is classified as a Class 2 laser product according to IEC 60825-1 regulations, except when using a LTM x2x-xxx DOE illuminator, in which case the product is classified as a Class 1 laser product.



CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in exposure to hazardous visible laser light.

Disconnect the power supply when opening the device during maintenance or installation to avoid exposure to hazardous laser light. The laser beam can be switched on or off through a software command

The following warning label content is applied to the laser equipped products indicated on the opposite page





Laser safety for 72 LED illuminat



Produit(s) conforme selon 21 CFR 1040.10 sauf des dérogations relatives à la Laser Notice  $N^\circ$ 56 data Mai 8 2019

Dans le paquet il v a l'étiquette(s) pour les pays où le texte d'avertissement en français est obligatoire. Le(s) mettre sur le produit à la place de la version anglaise.





## WARRANTY

Datalogic warrants that the Products shall be free from defects in materials and workmanship under normal and proper use during the Warranty Period. Products are sold on the basis of specifications applicable at the time of manufacture and Datalogic has no obligation to modify or undate Products once sold. The Warranty Period shall be two years from the date of shipment by Datalogic, unless otherwise agreed in an applicable writing by Datalogic

Datalogic will not be liable under the warranty if the Product has been exposed or subjected to any: (1) maintenance, repair, installation, handling, packaging, transportation, storage, operation or use that is improper or otherwise not in compliance with Datalogic's instruction; (2) Product alteration, modification or repair by anyone other than Datalogic or those specifically authorized by Datalogic; (3) accident, contamination, foreign object damage, abuse, neglect or negligence after shipment to Buyer; (4) damage caused by failure of a Datalogic-supplied product not under warranty or by any hardware or software not supplied by Datalogic: (5) any device on which the warranty void seal has been altered, tampered with, or is missing; (6) any defect or damage caused by natural or man-made disaster such as but not limited to fire, water damage, floods, other natural disasters, vandalism or abusive events that would cause internal and external component damage or destruction of the whole unit, consumable items; (7) use of counterfeit or replacement parts that are neither manufactured nor approved by Datalogic for use in Datalogic-manufactured Products: (8) any damage or malfunctioning caused by non-restoring action as for example firmware or software upgrades, software or hardware reconfigurations etc.; (9) loss of data; (10) any consumable or equivalent (e.g. cables, power supply, batteries, etc.); or (11) any device on which the serial number is missing or

THE DATALOGIC WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER WRITTEN, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE. DATALOGIC SHALL NOT BE LIABLE FOR ANY DAMAGES SUSTAINED BY BUYER ARISING FROM DELAYS IN THE REPLACEMENT OR REPAIR OF PRODUCTS LINDER THE ABOVE THE REMEDY SET FORTH IN THE WARRANTY STATEMENT IS THE BUYER'S SOLE AND EXCLUSIVE REMEDY FOR WARRANTY CLAIMS NO EXTENSION OF THIS WARRANTY WILL BE BINDING LIPON DATALOGIC UNLESS SET FORTH IN WRITING AND SIGNED BY DATALOGIC'S AUTHORIZED REPRESENTATIVE. DATALOGIC'S LIABILITY FOR DAMAGES ON ACCOUNT OF A CLAIMED DEFECT IN ANY PRODUCT DELIVERED BY DATALOGIC SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT ON WHICH THE CLAIM IS BASED. DATALOGIC SHALL NOT BE LIABLE FOR DAMAGES RELATING TO ANY INSTRUMENT, EQUIPMENT, OR APPARATUS WITH WHICH THE PRODUCT SOLD UNDER THIS AGREEMENT IS USED. Further details on warranty coverage, rights and conditions are addressed under and regulated by the Terms and Conditions of Sales of Datalogic available at https://www. datalogic.com/terms conditions sales.

Opto-coupled,  $V_{\rm CE}$  = 30 Vdc max.;  $I_{\rm CE}$  = 40 mA continuous max.; 130 mA pulsed max.;  $V_{CF saturation} = 1 \text{ Vdc max.} @ 10 \text{ mA; } P_D = 90 \text{ mW max.} @ 50 °C \text{ ambient temperature.}$ 

<sup>2</sup> High ambient temperature applications should use metal mounting brackets and the heat sink provided in the package for heat dissipation.

<sup>3</sup> Operating temperature is 0 to 50 °C (32 to 122 °F) for model 938100072.

<sup>4</sup> When correctly connected to IP67 cables with seals and the Lens Cover is correctly mounted.